


DRL relay circuit

WIRING DIAGRAM

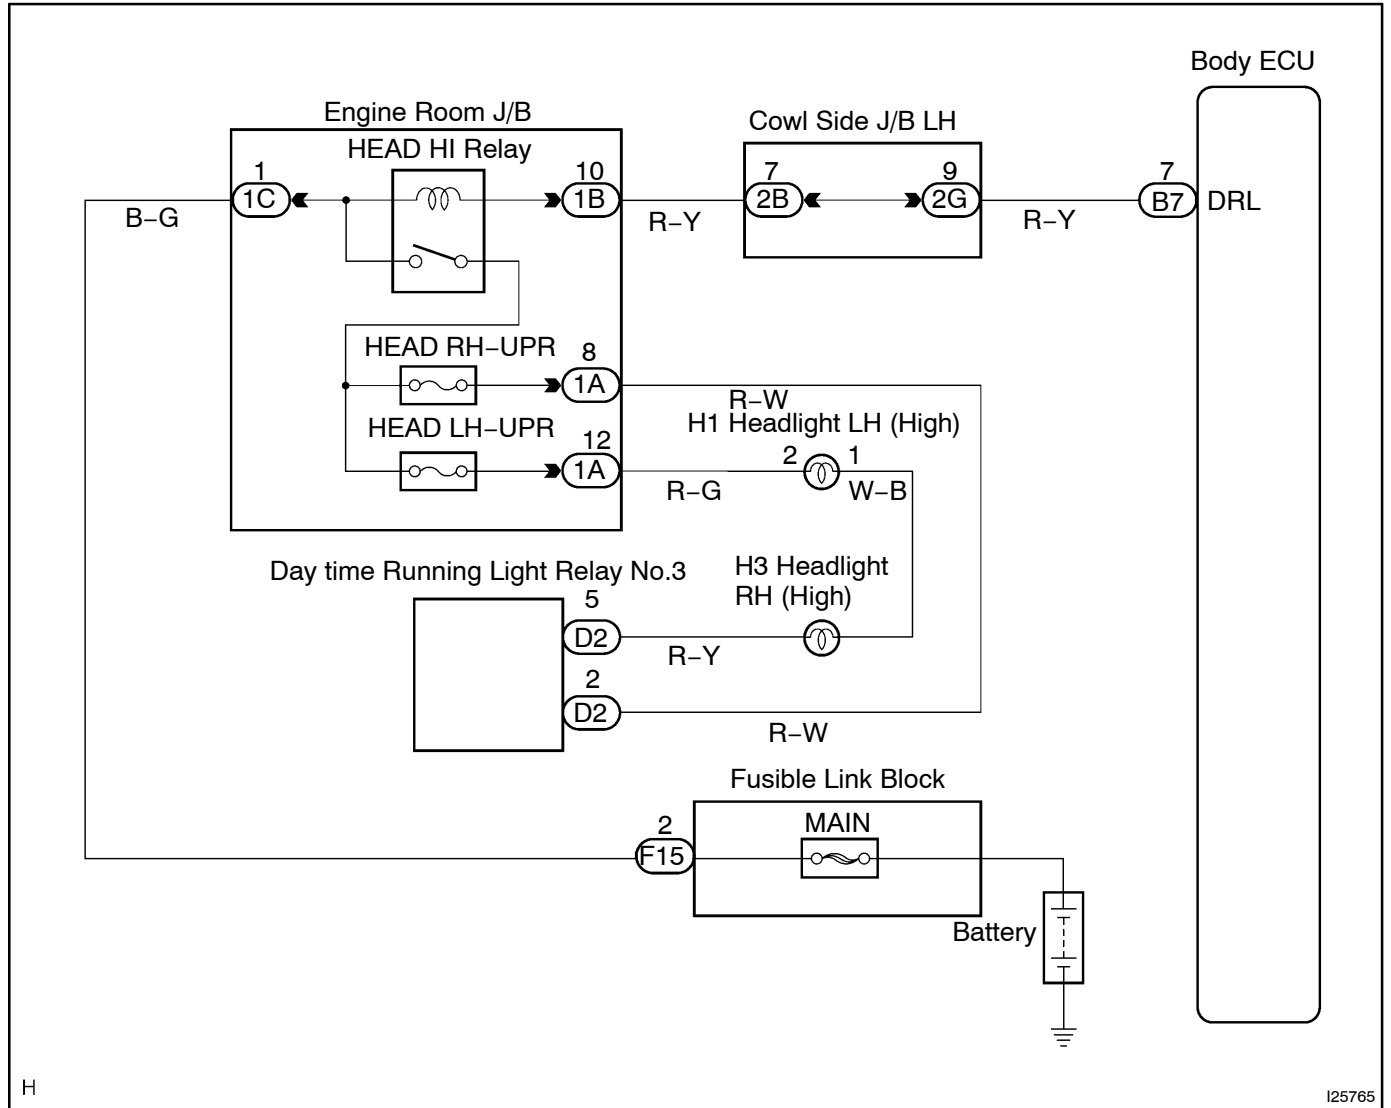

H

I25765

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check DRL relay using hand-held tester.
---	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the DRL relay operate in ACTIVE TEST (See page [DI-871](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-882](#)).

NG

2	Check DRL relay (See page BE-32).
---	--

NG

Replace the DRL relay.

OK

3	Check wire harness and connector between DRL relay and Body ECU (See page IN-36).
---	--

OK

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-882](#)).