


Power source circuit

CIRCUIT DESCRIPTION

This circuit supplies power to operate the Body ECU.

WIRING DIAGRAM

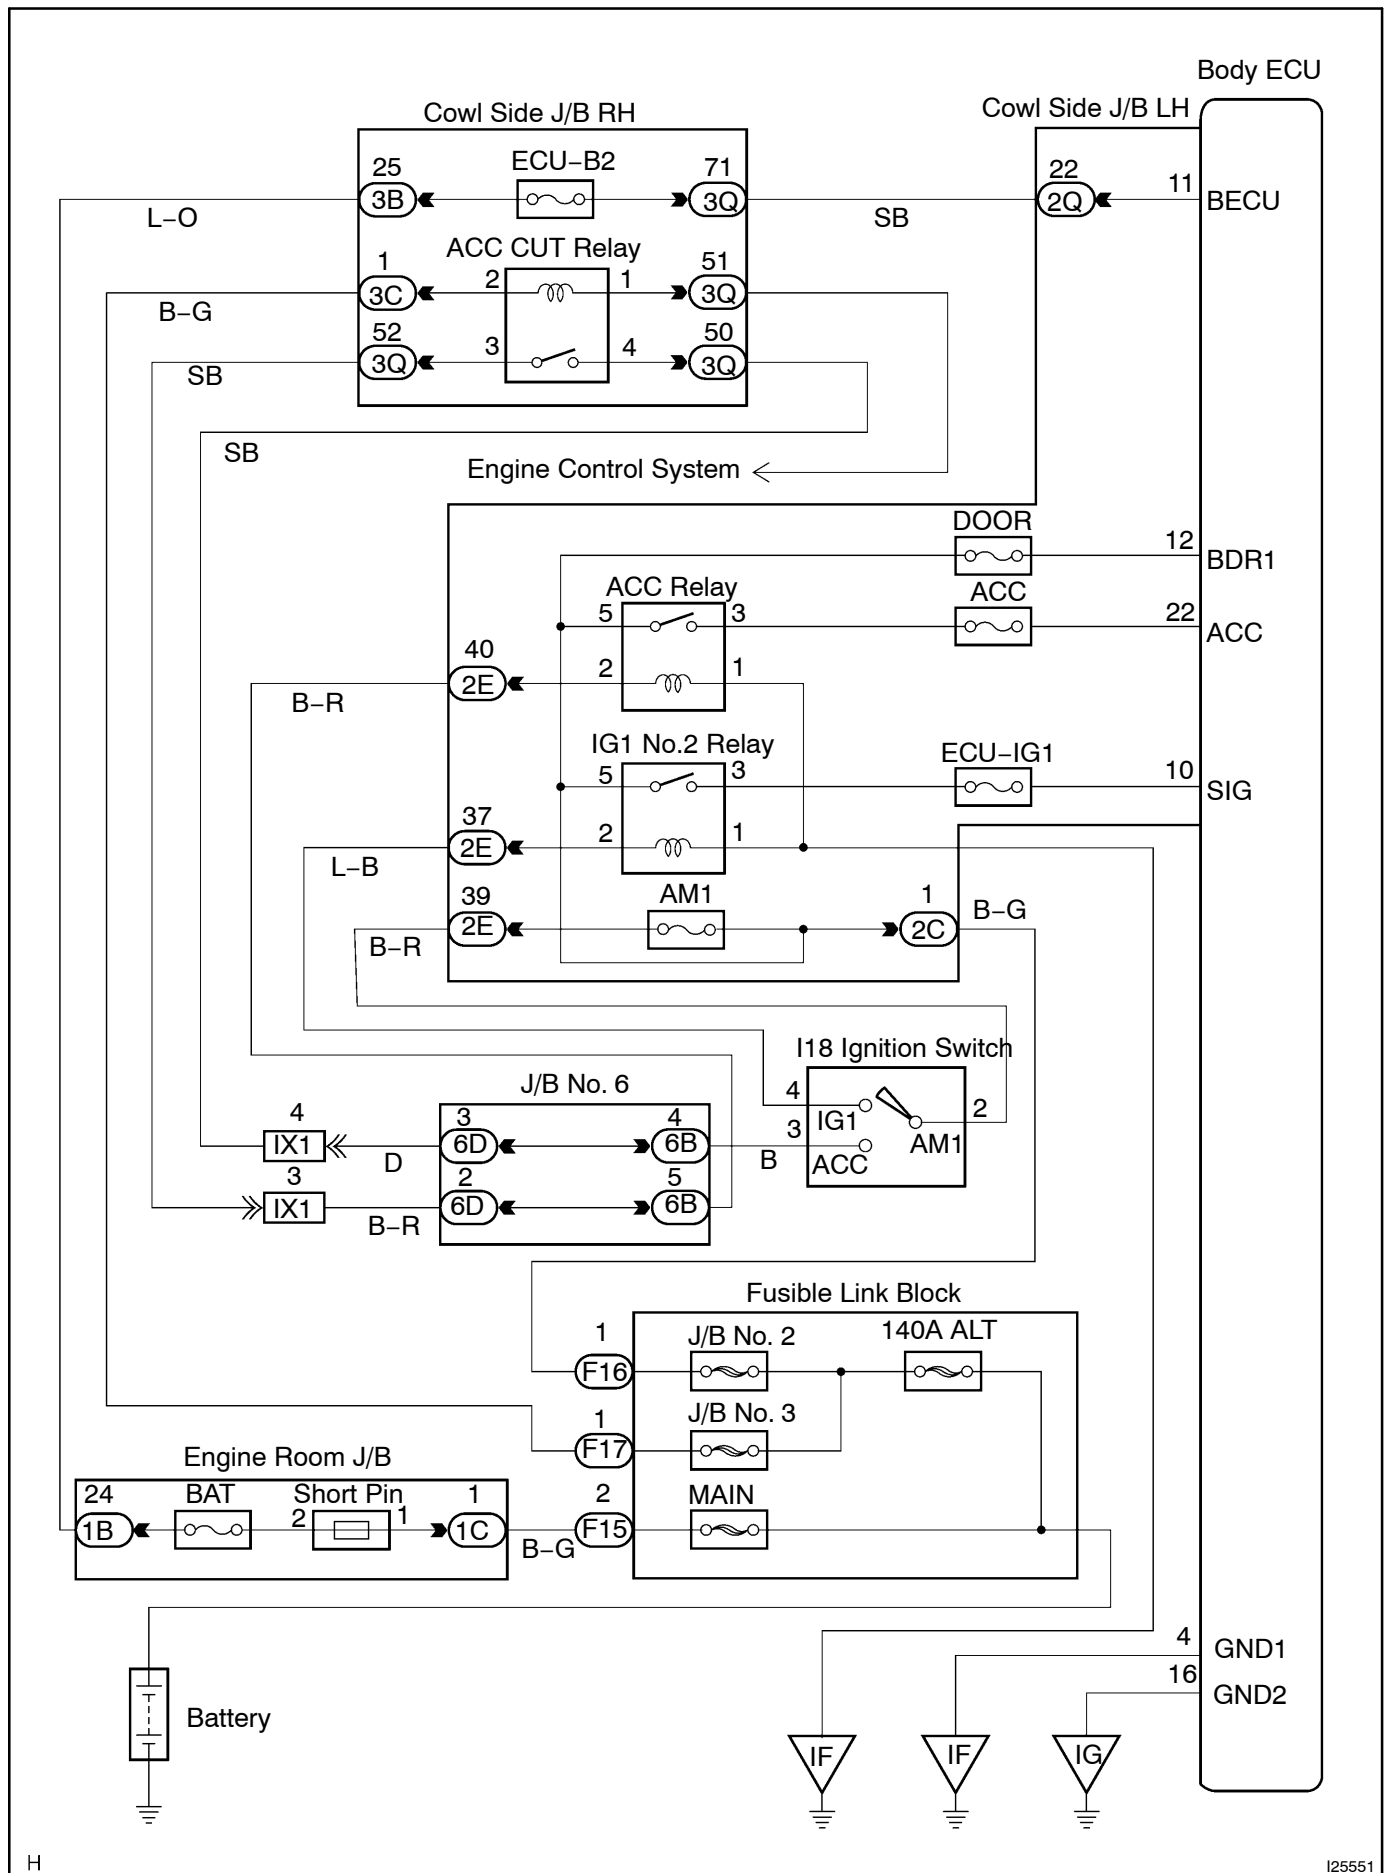

H

I25551

INSPECTION PROCEDURE

1 Check ECU-B2, DOOR fuse.

CHECK:

Check continuity of ECU-B2, DOOR fuse.

OK:

Continuity

NG

Replace faulty fuse.

OK

2 Check voltage between terminals BDR1, BECU and GND1, 2 of Body ECU connector.

PREPARATION:

- (a) Turn the ignition switch OFF.
- (b) Disconnect the Body ECU connector.

CHECK:

Measure the voltage between terminals BDR1, BECU and GND1, 2.

OK:

Voltage: 10 – 14V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-882](#)).

NG

3 Check wire harness and connector between Body ECU and body ground (See page [IN-36](#)).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-882](#)).