

DTC	P0339	Crankshaft Position Sensor "A" Circuit Intermittent
------------	--------------	--

CIRCUIT DESCRIPTION

Refer to DTC P0335 on page [DI-114](#).

DTC No.	DTC Detection Condition	Trouble Area
P0339	No crankshaft position sensor signal to ECM with engine speed 1,000 rpm or more	• Open or short in crankshaft position sensor circuit • Crankshaft position sensor • Signal plate • ECM

WIRING DIAGRAM

Refer to DTC P0335 on page [DI-114](#).

INSPECTION PROCEDURE

Refer to DTC P0335 on page [DI-114](#).