

ENGINE

HOW TO PROCEED WITH TROUBLESHOOTING

DI078-21

Troubleshoot in accordance with the procedure on the following page.

