

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	15.Starter 16.Starter relay	ST-16 ST-18
No initial combustion (Does not start)	1. Engine immobilizer system 2. ECM power source circuit 3. Fuel pump control circuit	DI-844 DI-232 DI-237
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-237
Under normal condition (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-224 DI-237 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-224 DI-237
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-224 DI-237
High engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. ECM power source circuit	DI-1086 DI-232
Low engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. Fuel pump control circuit	DI-1086 DI-237
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-237
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-232 DI-237
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-237 DI-264
Surging (Poor driveability)	1. Fuel pump control circuit	DI-237
Soon after starting (Engine stall)	1. Engine immobilizer system 2. Fuel pump control circuit	DI-844 DI-237
During A/C operation (Engine stall)	1. A/C signal circuit (Compressor circuit) 2. ECM	DI-1086 DI-232