


# TERMINALS OF ECU


## ● Body ECU

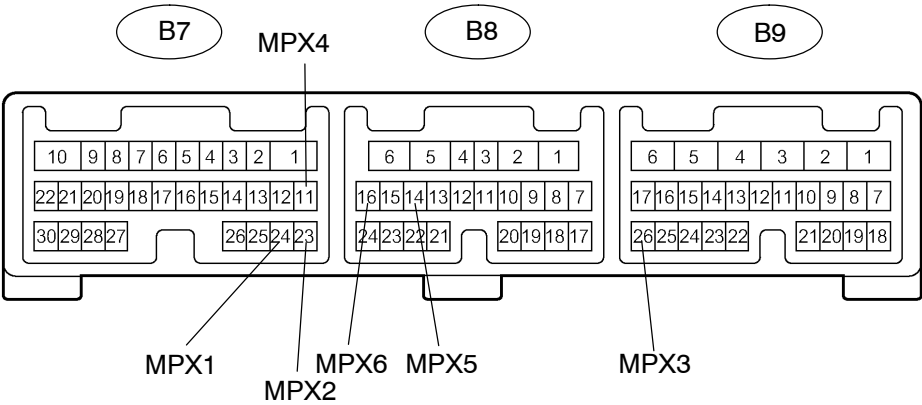

H


DI24951

## ● Theft Deterrent ECU

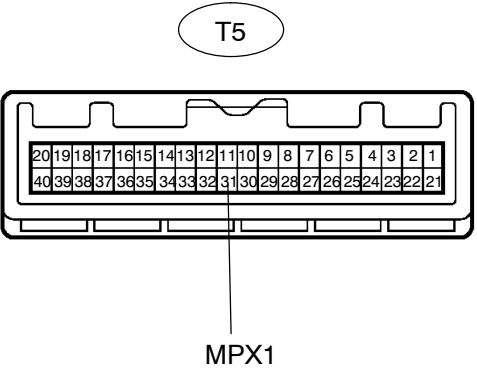

I24938



- Driver Door ECU
- Passenger Door ECU
- Rear Door LH ECU
- Rear Door RH ECU

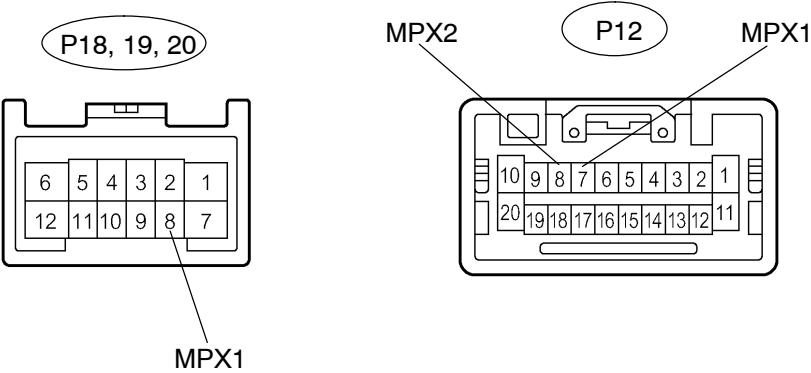

H

I24941

● Tilt and Telescopic ECU

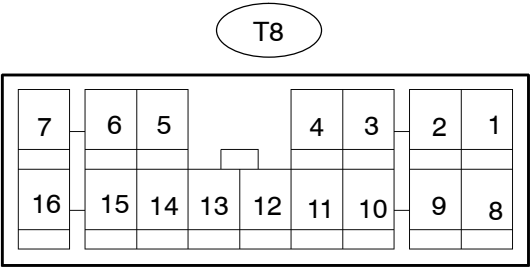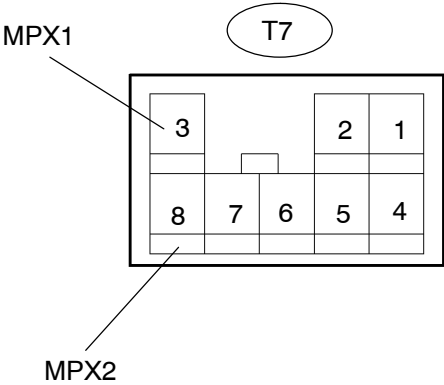

F05341