

14. Map is displayed in white or blue screen. (Switches and vehicle position mark is displayed)

INSPECTION PROCEDURE

- | | |
|---|-------------------------------|
| 1 | Set the map scale to the max. |
|---|-------------------------------|

OK

Normal.

HINT:

Correct the current position and check it again.

NG

- | | |
|---|---|
| 2 | Wipe the disc with a soft cloth, insert it again, and turn the ignition switch ON from OFF. |
|---|---|

NG

Replace the disc.

OK

Normal.

HINT:

If the trouble still occurs, replace the navigation ECU.