

15. Touch switch does not function. (Navigation screen only)**INSPECTION PROCEDURE**

- | | |
|---|--|
| 1 | Display check mode (Touch switch, Touch point screen). |
|---|--|

NG

Replace the multi-display.

OK

- | | |
|---|--|
| 2 | Check "AVC-LAN communication circuit" (See page DI-1064). |
|---|--|

NG

Replace or repair AVC-LAN circuit.

OK

Replace the navigation ECU.
