

26. Any speaker does not work. (DVD sound only)**INSPECTION PROCEDURE**

- | | |
|----------|---|
| 1 | Check wire harness and connector between DVD auto changer and radio receiver (See page IN-36). |
|----------|---|

NG**Repair or replace wire harness or connector.****OK****Check and replace the DVD auto changer.**