

3. No navigation screen displayed when "MAP", "Menu", or "DEST" switch pressed. (Screen cannot be switched.)

INSPECTION PROCEDURE

1	Service check mode. (Check the navigation ECU)
---	--

NG

Troubleshoot for each diagnosis.

OK

Replace multi-display.

Ncon

2	Check the navigation ECU.
---	---------------------------

PREPARATION:

Disconnect the navigation ECU connector.

CHECK:

Check voltage terminals +B.

OK:**+B: 10 – 14 V****CHECK:**

Check voltage terminal ACC when turn ignition switch ACC or ON position.

OK:**ACC: 10 – 14 V****CHECK:**

Check continuity terminal GND.

OK:**GND: Continuity**

NG

Replace or repair wire harness or connector.

OK

3**Check wire harness and connector between multi display and navigation ECU
(See page [IN-36](#)).****NG****Repair or replace wire harness or connector.****OK****Check and replace multi display.**