

7. Navigation screen not stabilized (Synchronous error).

INSPECTION PROCEDURE

- | | |
|---|---------------------------|
| 1 | Check the navigation ECU. |
|---|---------------------------|

CHECK:

Check terminals +B.

OK:

+B: 10 – 14 V

CHECK:

Check terminal ACC when turn ignition switch ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check terminal SYNC, VR or VG.

OK:

SYNC, VR, VG: See "Navigation ECU" of "TERMINAL OF ECU"

NG

Repair or replace the wire harness when all terminals are faulty. Replace the navigation ECU when the SYNC terminal is faulty.

OK

Replace the multi-display.