


## INSTALLATION

### NOTICE:

- **Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.**
- **Never reuse the airbag sensor assembly involved in a collision when the airbag has deployed.**
- **Never repair a sensor in order to reuse it.**

### HINT:

For step 2 to 6, refer to page [BO-91](#).

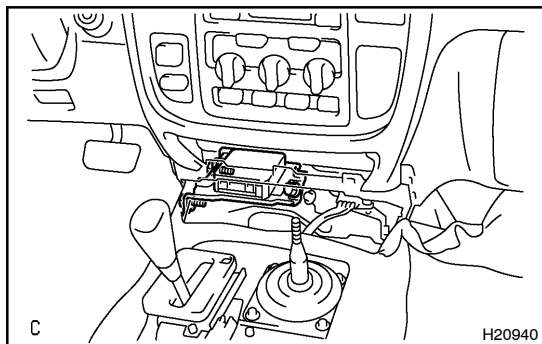

### 1. INSTALL AIRBAG SENSOR ASSEMBLY

- (a) Install the airbag sensor assembly with the 3 bolts.  
**Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)**
- (b) Connect the airbag sensor connectors.

### NOTICE:

- **Connection of the connector is done after the sensor assembly has been installed.**
  - **Make sure the sensor assembly is installed with the specified torque.**
  - **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
  - **When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
  - **After installing, shake the sensor assembly to check that there is no looseness.**
2. **INSTALL CENTER LOWER INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY**
  3. **INSTALL FRONT CONSOLE BOX**
  4. **INSTALL REAR CONSOLE BOX WITH CONSOLE REAR END PANEL**
  5. **INSTALL UPPER CONSOLE PANEL**
  6. **INSTALL TRANSFER SHIFT LEVER KNOB**
  7. **INSTALL FRONT SEAT (See page [BO-117](#))**
  8. **INSPECT SRS WARNING LIGHT (See page [DI-523](#))**