

REMOVAL


NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON position, DTCs will be recorded.
- Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary (If the IC terminals are touched, the IC may be destroyed by static electricity.).

HINT:

For step 1 to 8, refer to page [BO-97](#).

1. REMOVE REAR DOOR SCUFF PLATE
2. REMOVE FRONT DOOR SCUFF PLATE
3. REMOVE LAP BELT OUTER ANCHOR COVER
4. REMOVE FRONT SEAT OUTER BELT FLOOR ANCHOR
5. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP
6. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP
7. REMOVE CENTER PILLAR LOWER GARNISH
8. REMOVE FRONT SEAT OUTER BELT

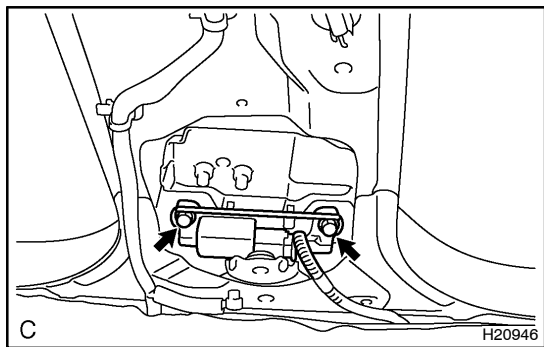

9. REMOVE SIDE AND CURTAIN SHIELD AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the connector.

NOTICE:

Disconnect the connector with the sensor assembly installed.

- (b) Remove the 2 bolts and side and curtain shield airbag sensor assembly.