



REPLACEMENT

1. **REMOVE FRONT WHEELS**
Torque: 131 N·m (1,340 kgf·cm, 97 ft·lbf)
2. **REMOVE FRONT DRIVE SHAFT**
(See page [SA-26](#))

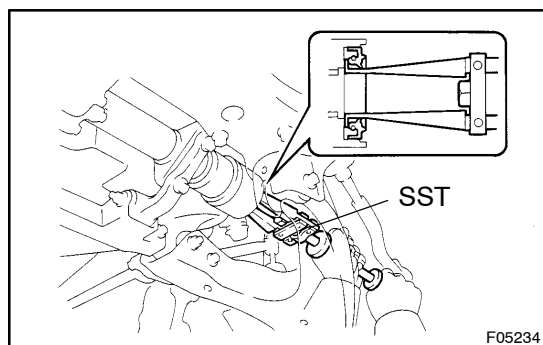

3. REPLACE OIL SEAL


- (a) Using SST, remove the oil seal.
SST 09308-00010
- (b) Coat the hypoid gear oil to a new oil seal periphery.

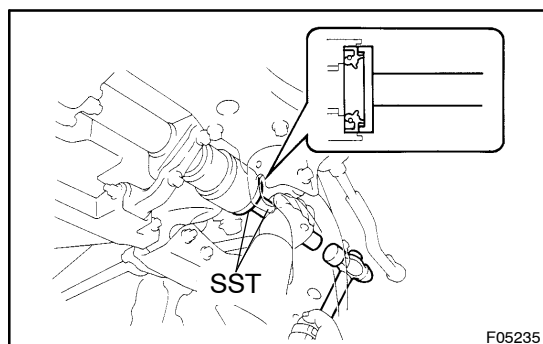

- (c) Using SST and a hammer, install the new oil seal.
SST 09550-00032, 09950-70010 (09951-07100)
- (d) Coat the MP grease to the oil seal lip.

4. INSTALL FRONT DRIVE SHAFT

(See page [SA-33](#))

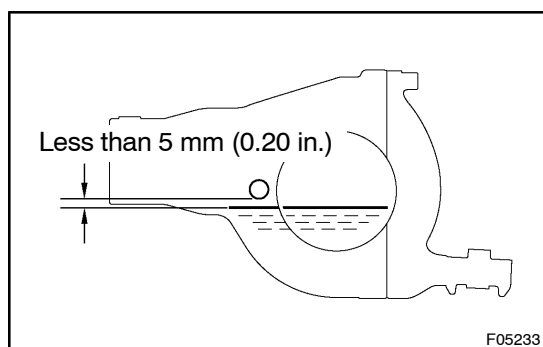

5. **FILL DIFFERENTIAL WITH HYPOID GEAR OIL**
Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)
Oil type: Hypoid gear oil API GL-5
Recommended oil viscosity:
Above -18°C (0°F) SAE 90
Below -18°C (0°F) SAE 80W-90 or 80W
Capacity: 1.70 liters (1.80 US qts, 1.50 Imp.qts)