


# FRONT WHEEL HUB BOLT REPLACEMENT

SA148-04

## 1. REMOVE FRONT AXLE HUB (See page SA-12)

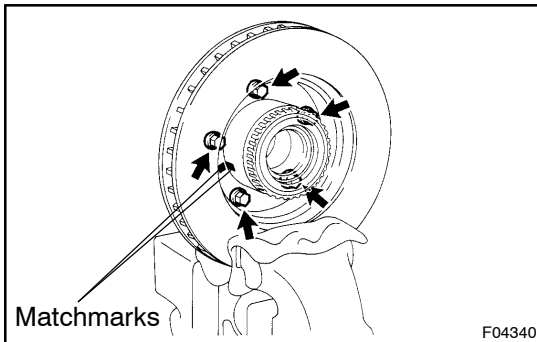


## 2. REMOVE HUB BOLT

- (a) Mount the axle hub with the disc in a soft jaw vice.


### NOTICE:

**Close vice until it holds disc, do not tighten further.**

- (b) Place matchmarks on the axle hub and disc.  
 (c) Remove the 5 bolts and separate the axle hub from the disc.

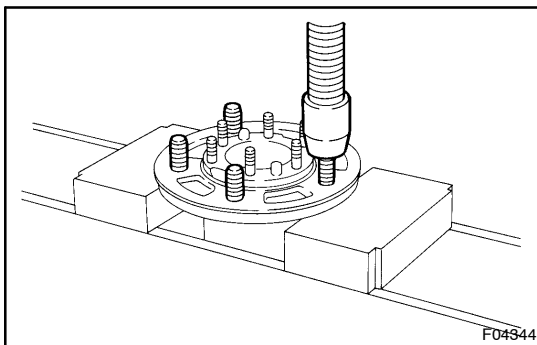


- (d) Using a press, remove the hub bolt.

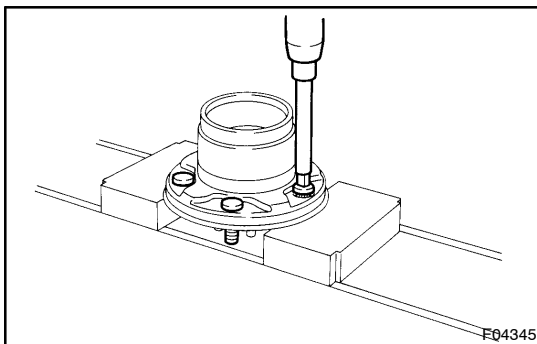

## 3. INSTALL HUB BOLT

- (a) Using an extension bar and press, install a new hub bolt.

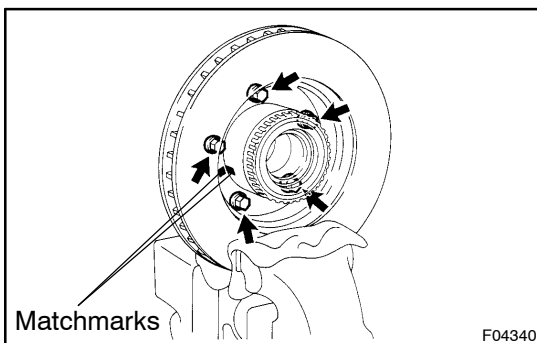

- (b) Align the matchmarks on the axle hub and disc.  
 (c) Install the 5 bolts to the axle hub.

**Torque: 74 N·m (750 kgf·cm, 55 ft·lbf)**

## 4. INSTALL FRONT AXLE HUB (See page SA-16)