


FUEL CUT RPM INSPECTION


1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

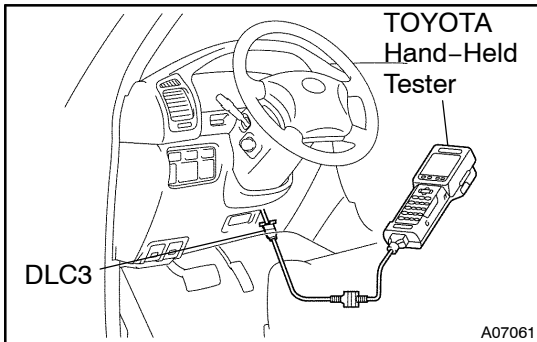

2. CONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL

- Connect the TOYOTA hand-held tester or OBDII scan tool to the DLC3.
- Please refer to the TOYOTA hand-held tester or OBDII scan tool operator's manual for further details.

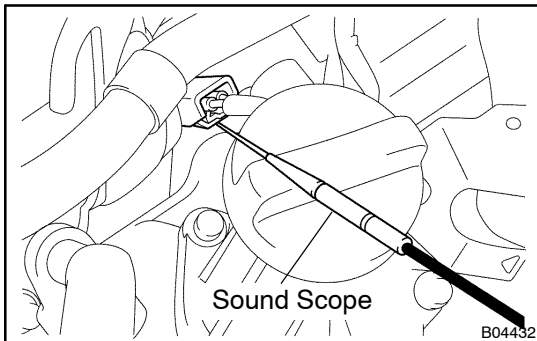

3. INSPECT FUEL CUTOFF RPM OPERATION

- Increase the engine speed to at least 2,500 rpm.
- Check the injector for operating noise.
- Check that when the throttle lever is released, injector operation noise stops momentarily and then resumes.

HINT:

- The vehicle should be at rest during the inspection.
- Inspection with the A/C OFF.

Fuel return speed: 1,000 rpm

4. DISCONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL