


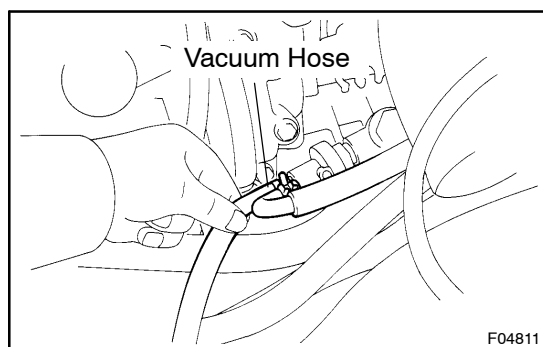

SR0LZ-06

## AIR CONTROL VALVE INSPECTION

1. **TURN AIR CONDITIONING SWITCH OFF**
2. **CHECK IDLE-UP**
  - (a) Start the engine and run it at idle.
  - (b) Fully turn the steering wheel.
  - (c) Check that the engine rotations decrease when the vacuum hose of the air control valve is pinched.
  - (d) Check that the engine rotations increase when the hose is released.