


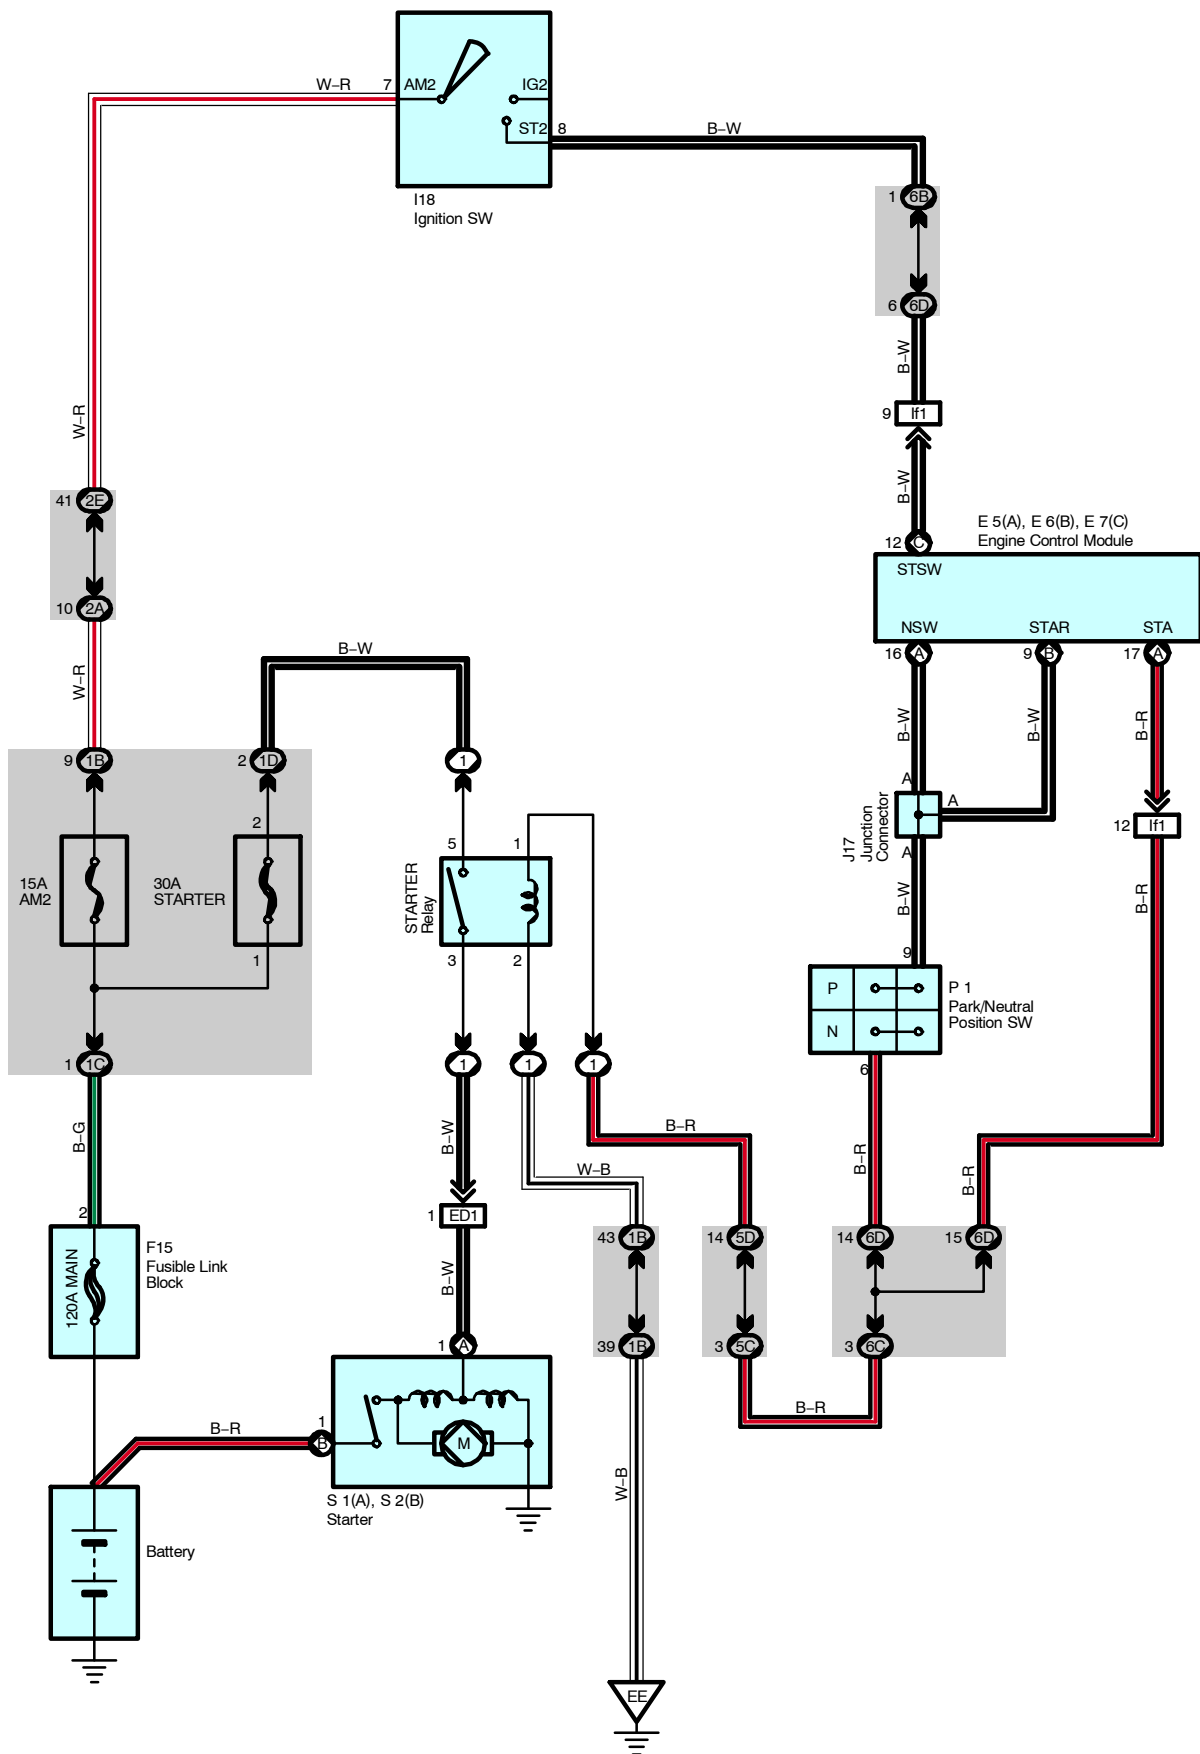

Service Hints

I18 Ignition SW

7-8 : Closed with ignition SW at ST position

P1 Park/Neutral Position SW

6-9 : Closed with A/T shift lever in P or N position

S1 (A), S2 (B) Starter

Points closed with Park/Neutral position SW at P or N position and ignition SW at ST position

: Parts Location

Code			See Page			Code			See Page		
E5	A	70				F15	68		P1		69
E6	B	70				I18	70		S1	A	69
E7	C	70				J17	71		S2	B	69

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
1D		
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
5C	56	Dash Wire and J/B No.5 (Behind the Combination Meter)
5D	56	Engine Room No.2 Wire and J/B No.5 (Behind the Combination Meter)
6B	60	Dash Wire and J/B No.6 (Behind the Grove Box)
6C		
6D	60	Engine Wire and J/B No.6 (Behind the Grove Box)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ED1	76	Engine No.2 Wire and Engine Room No.2 Wire (Near the Engine Room J/B)
If1	84	Engine Wire and Engine Wire (Behind the Glove Box)

: Ground Points

Code	See Page	Ground Points Location
EE	76	Front Left Side of Fender Apron