



# Taillight

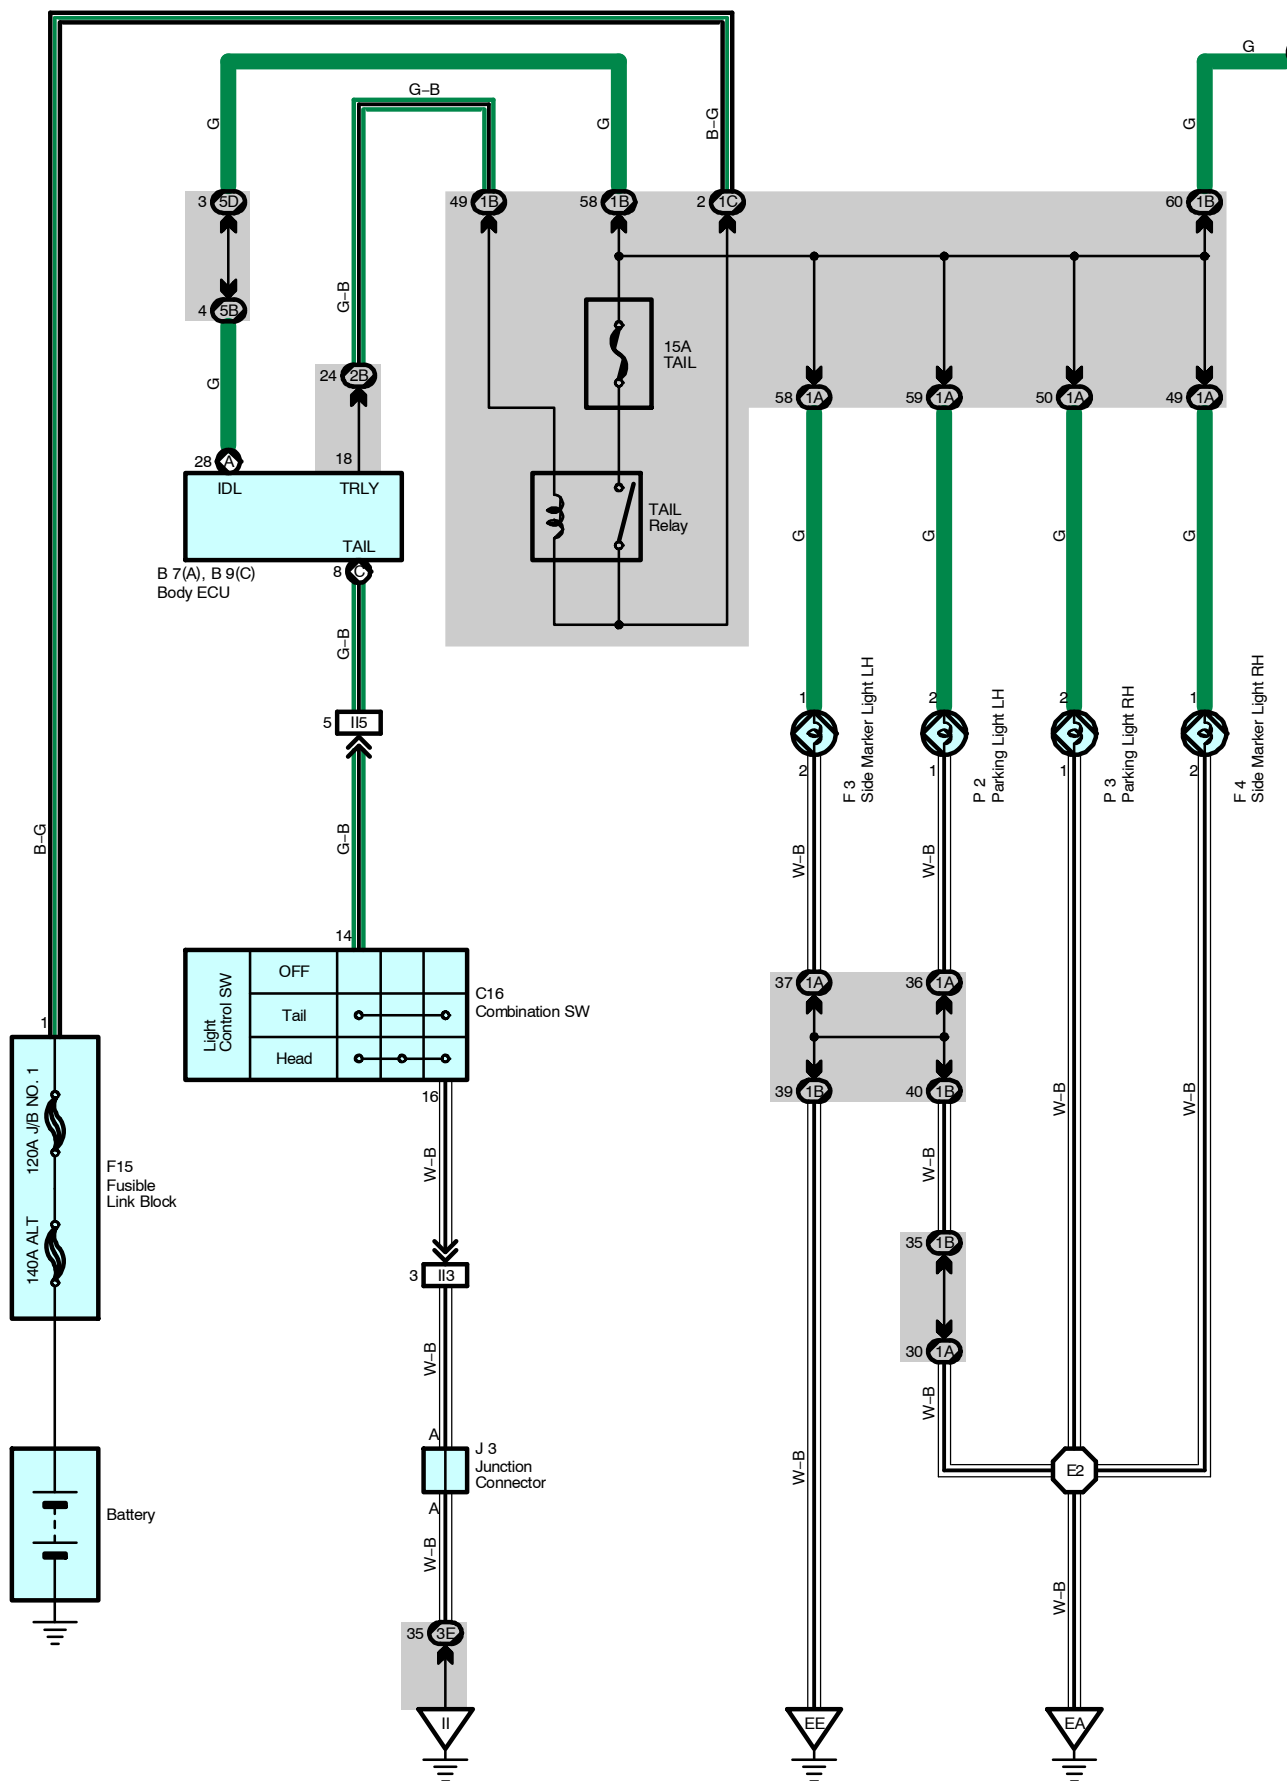

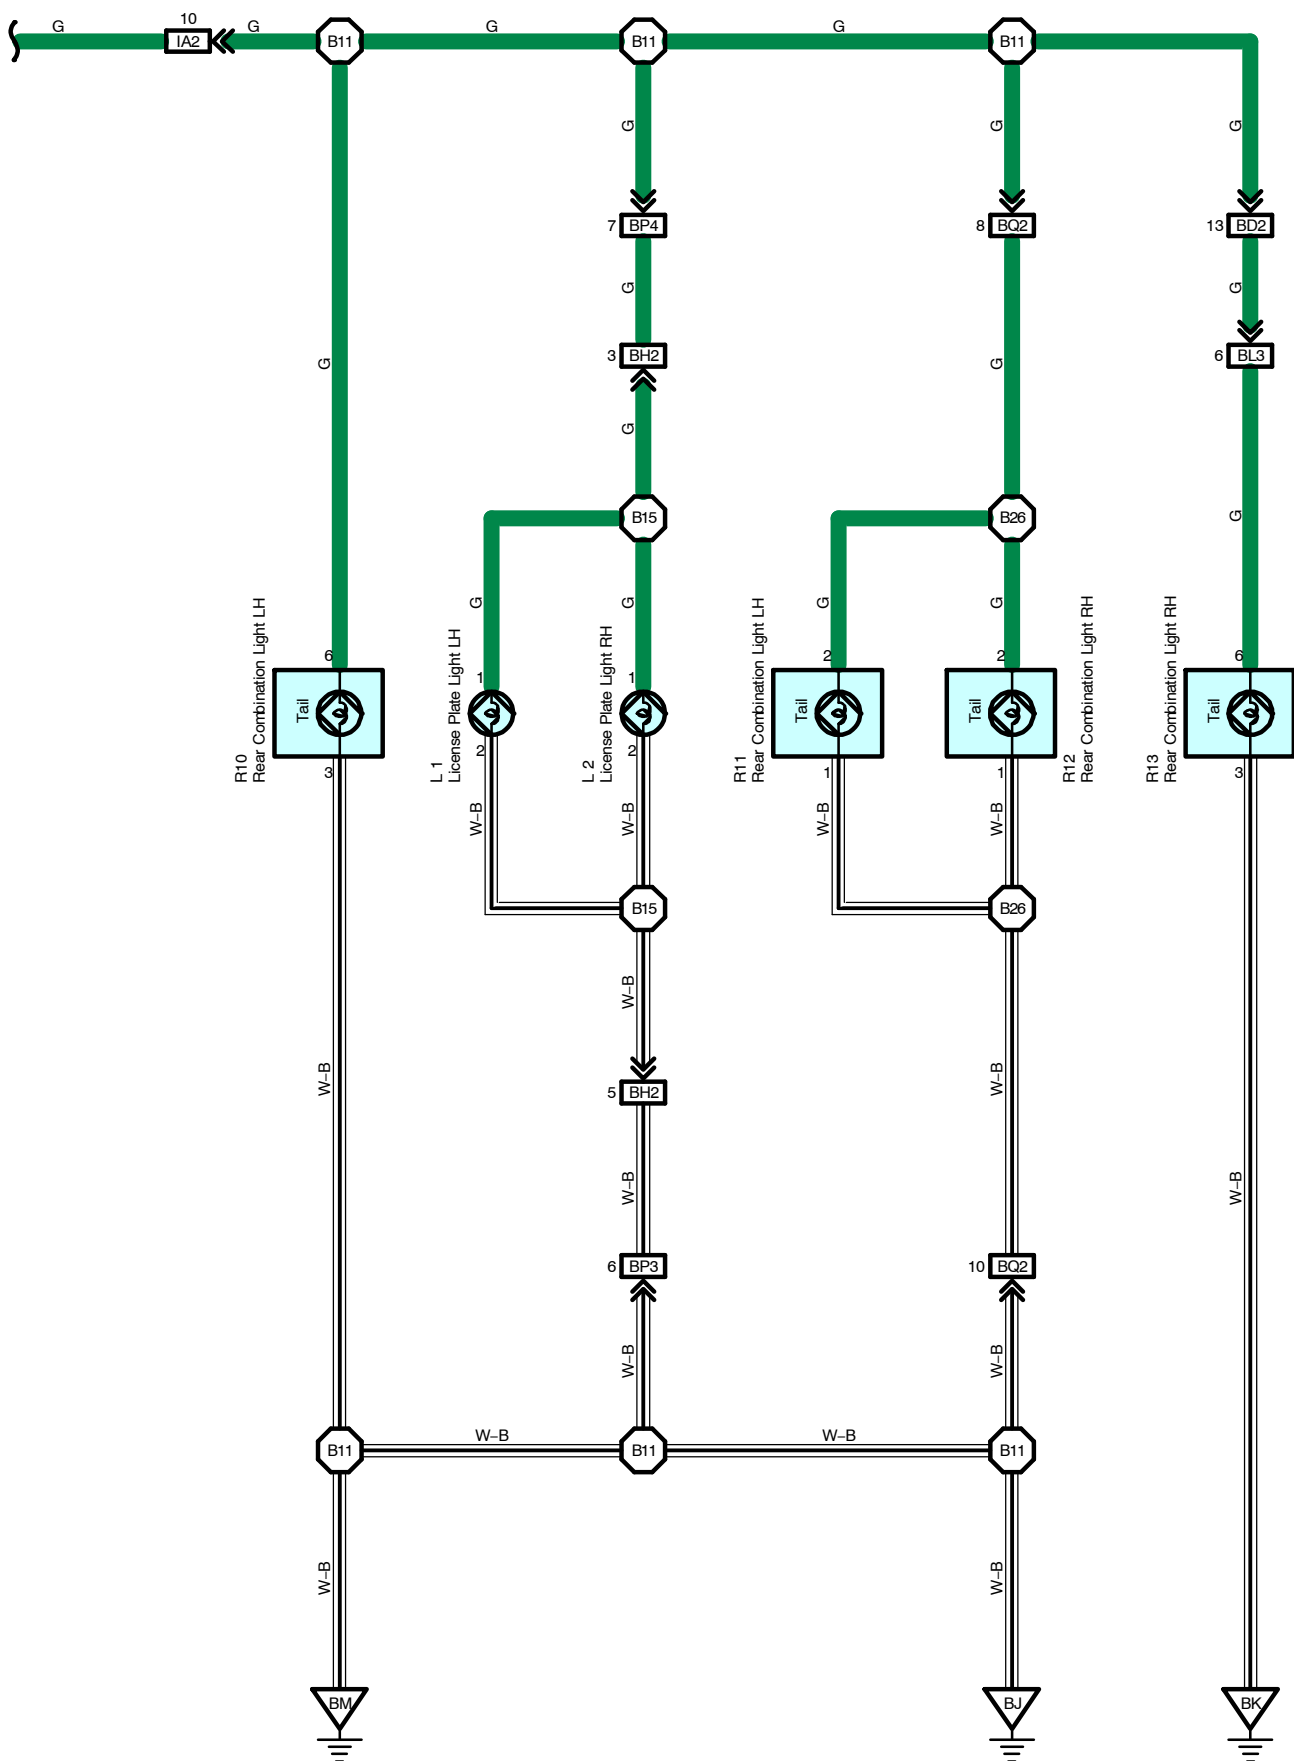

## Service Hints

### C16 Combination SW

14-16 : Closed with light control SW at TAIL or HEAD position

## ○ : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| B7   | A        | 70   | F15      | 68   | P3       |
| B9   | C        | 70   | J3       | 71   | R10      |
| C16  | 70       | L1   | 72       | R11  | 73       |
| F3   | 68       | L2   | 72       | R12  | 73       |
| F4   | 68       | P2   | 69       | R13  | 73       |

## ○ : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)                |
|------|----------|---------------------------------------------------------------------|
| 1A   | 24       | Engine Room Main Wire and Engine Room J/B (Engine Compartment Left) |
| 1B   | 24       | Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left) |
| 1C   |          |                                                                     |
| 2B   | 28       | Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)        |
| 3E   | 40       | Dash Wire and Cowl Side J/B RH (Right Kick Panel)                   |
| 5B   | 56       | Dash Wire and J/B No.5 (Behind the Combination Meter)               |
| 5D   | 56       | Engine Room No.2 Wire and J/B No.5 (Behind the Combination Meter)   |

## □ : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)                 |
|------|----------|----------------------------------------------------------------------------|
| IA2  | 78       | Engine Room No.2 Wire and Floor No.1 Wire (Left Kick Panel)                |
| II3  | 80       | Dash Wire and Column Wire (Near the Ignition SW)                           |
| II5  |          |                                                                            |
| BD2  | 86       | Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)         |
| BH2  | 86       | Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)         |
| BL3  | 88       | Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember) |
| BP3  | 88       | Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)        |
| BP4  |          |                                                                            |
| BQ2  | 88       | Back Door Lower Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)    |

## ▽ : Ground Points

| Code | See Page | Ground Points Location                      |
|------|----------|---------------------------------------------|
| EA   | 76       | Front Right Side of Fender Apron            |
| EE   | 76       | Front Left Side of Fender Apron             |
| II   | 78       | Set Bolt of Cowl Side J/B RH                |
| BJ   | 86       | Under the Driver's Seat                     |
| BK   | 86       | Front Side Under the Front Passenger's Seat |
| BM   | 86       | Left Rear Side Quarter Panel                |

## ○ : Splice Points

| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|----------|---------------------------------|------|----------|---------------------------------|
| E2   | 76       | Engine Room Main Wire           | B15  | 88       | Back Door Upper Wire            |
| B11  | 88       | Floor No.1 Wire                 | B26  | 88       | Back Door Lower Wire            |

