




Center Differential Lock

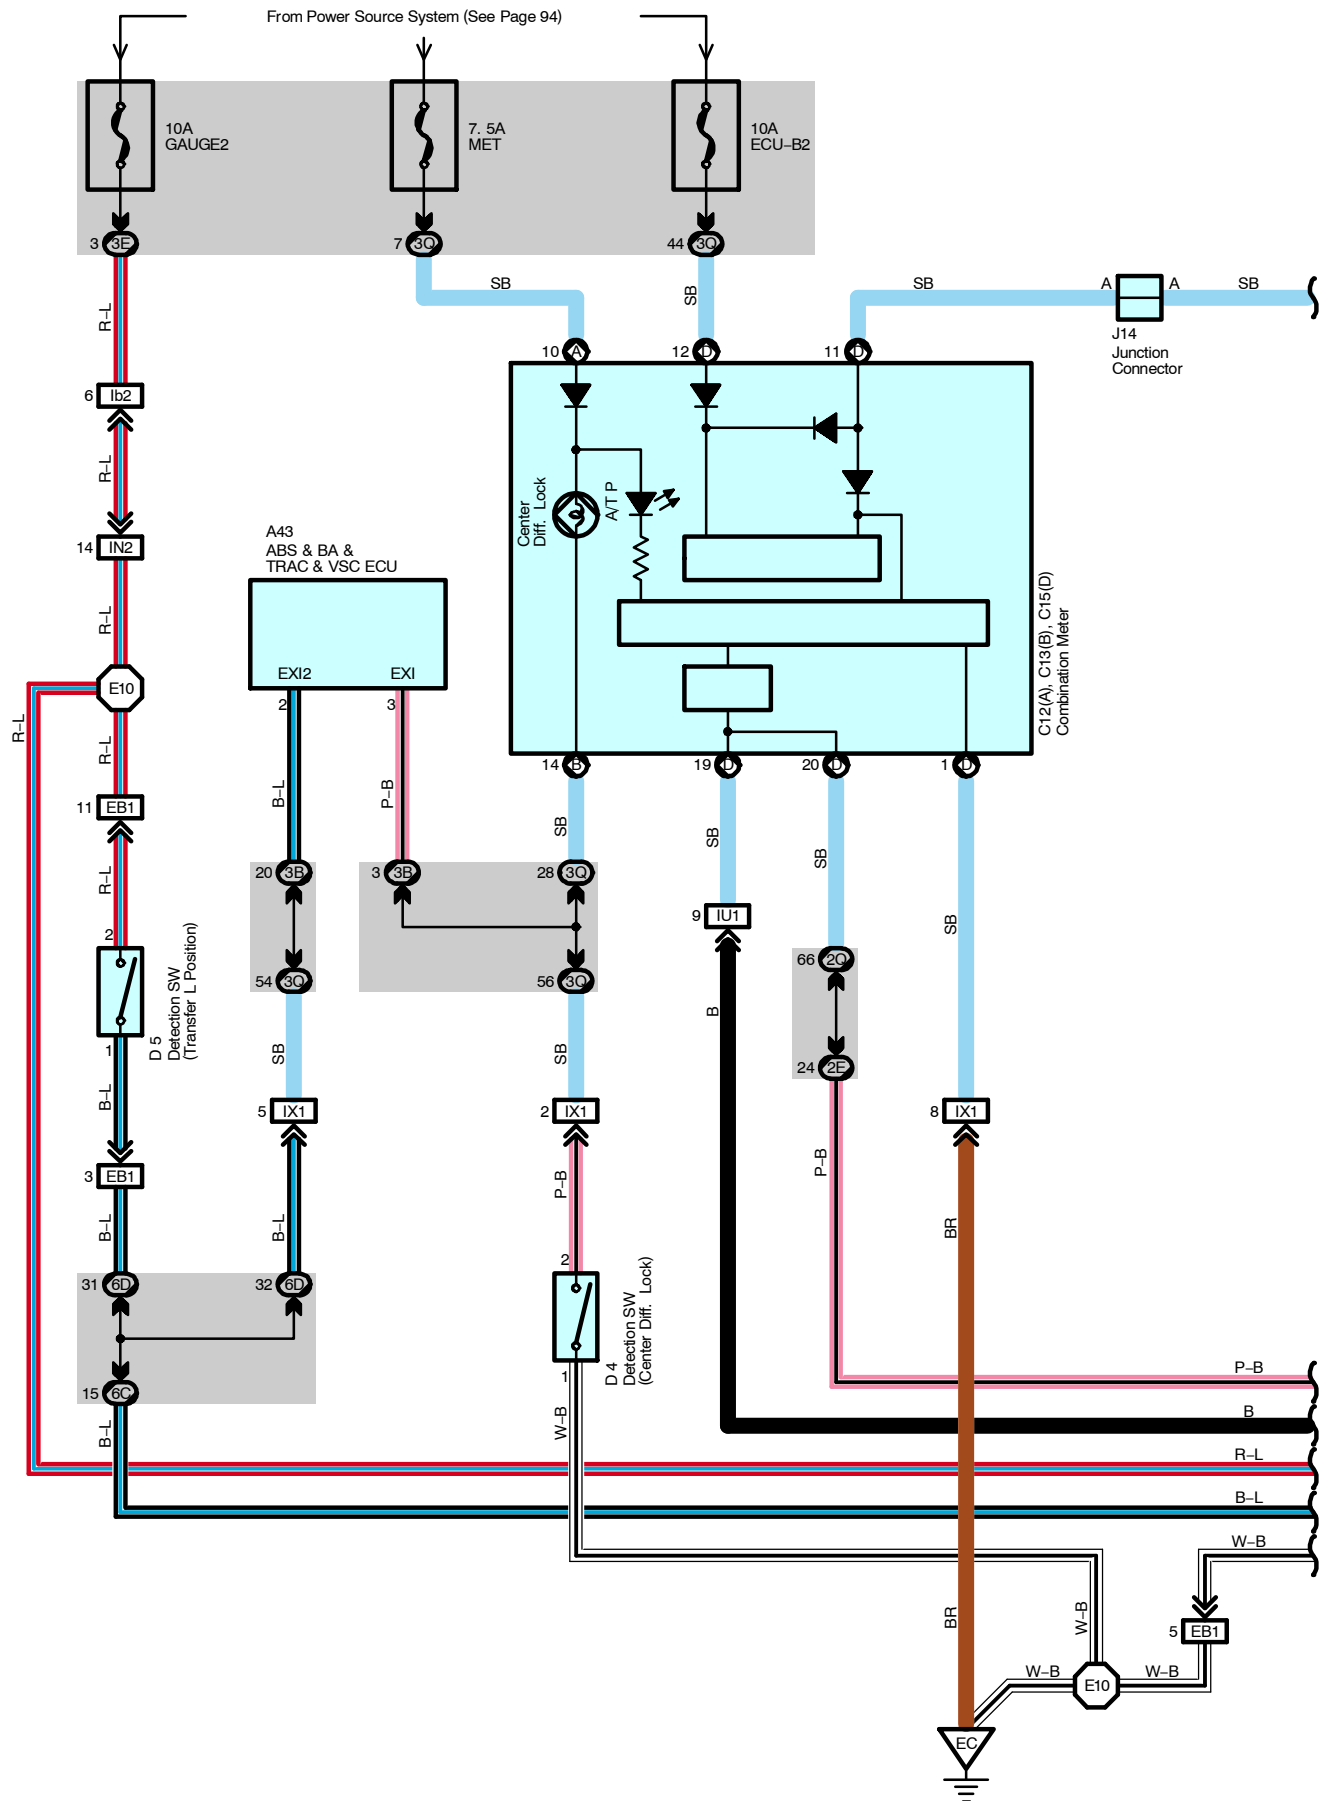

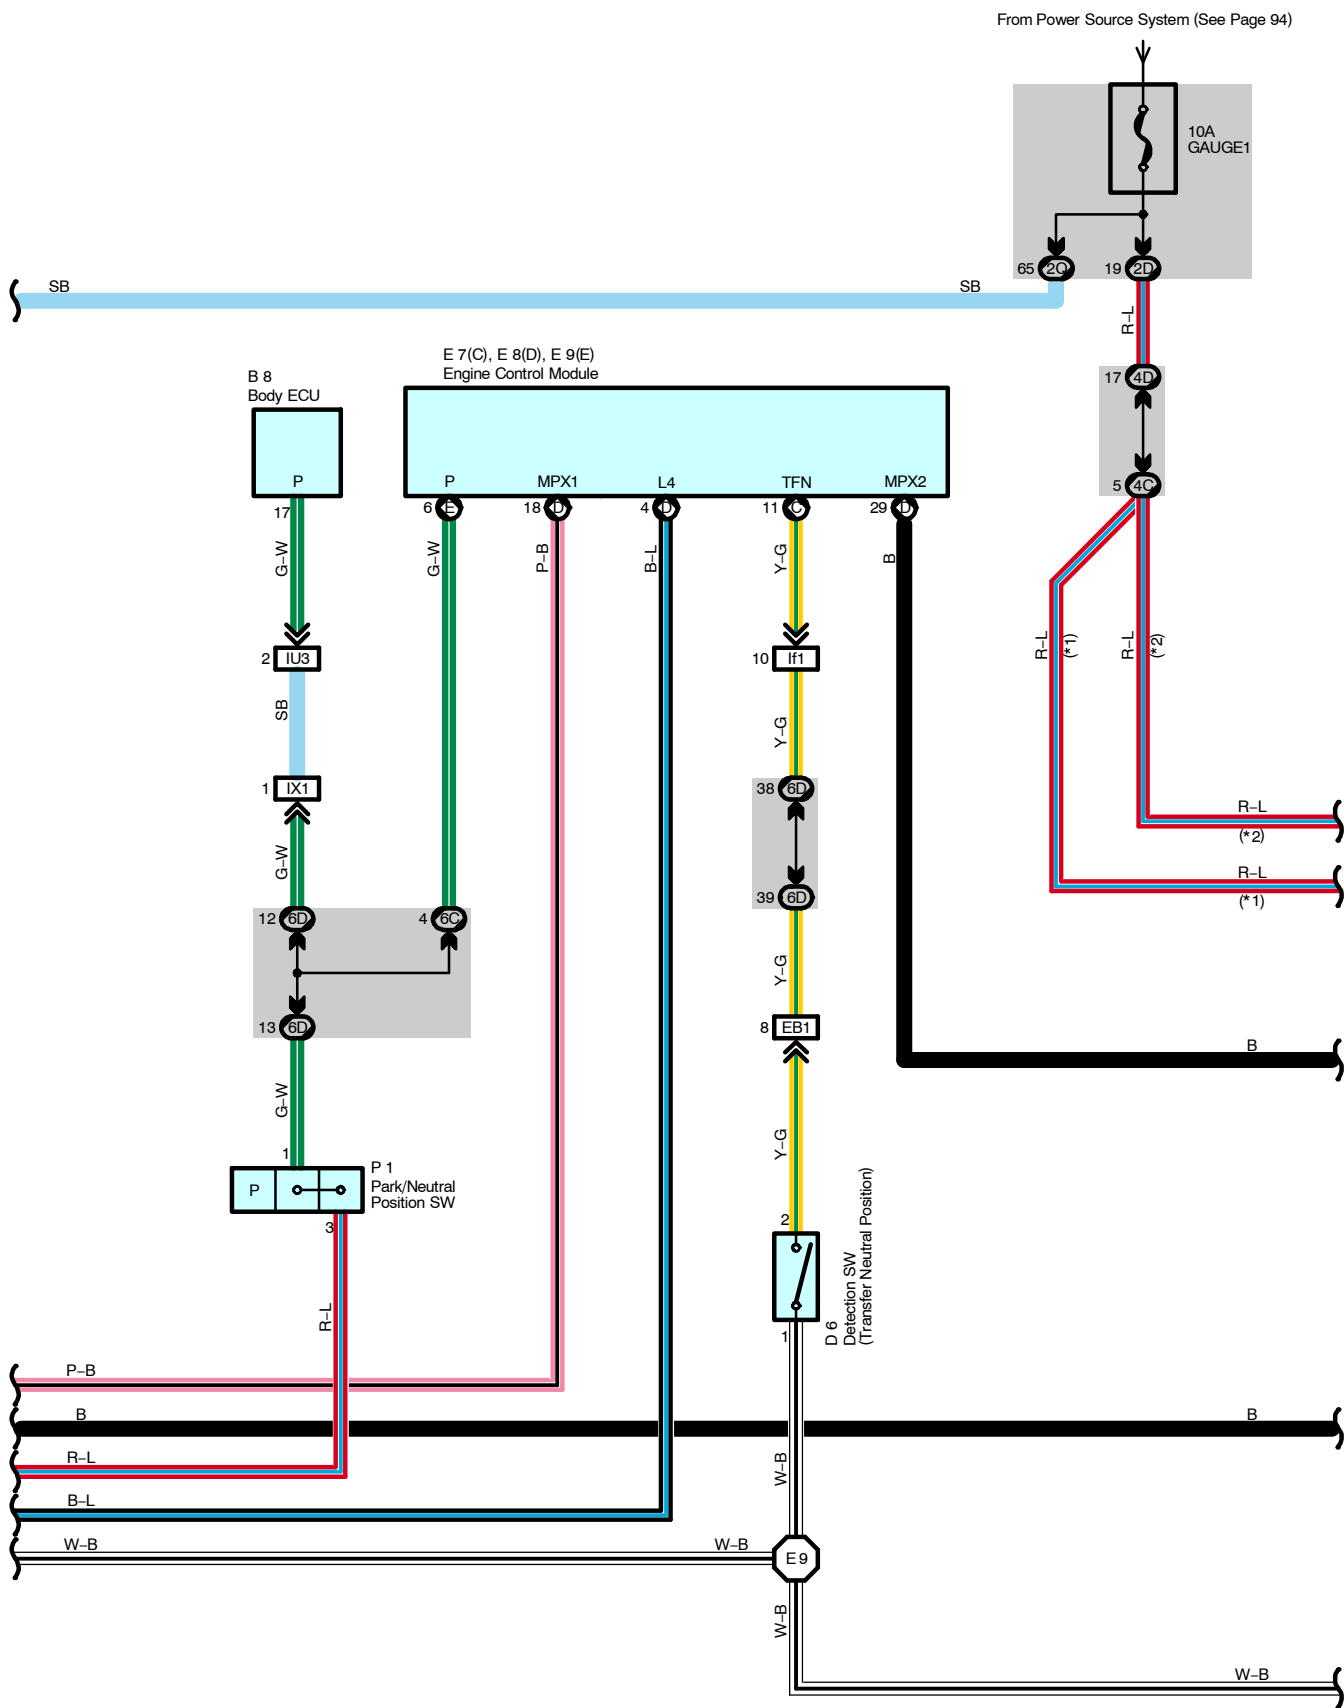

* 1 : w/ Navigation System
 * 2 : w/o Navigation System

Center Differential Lock

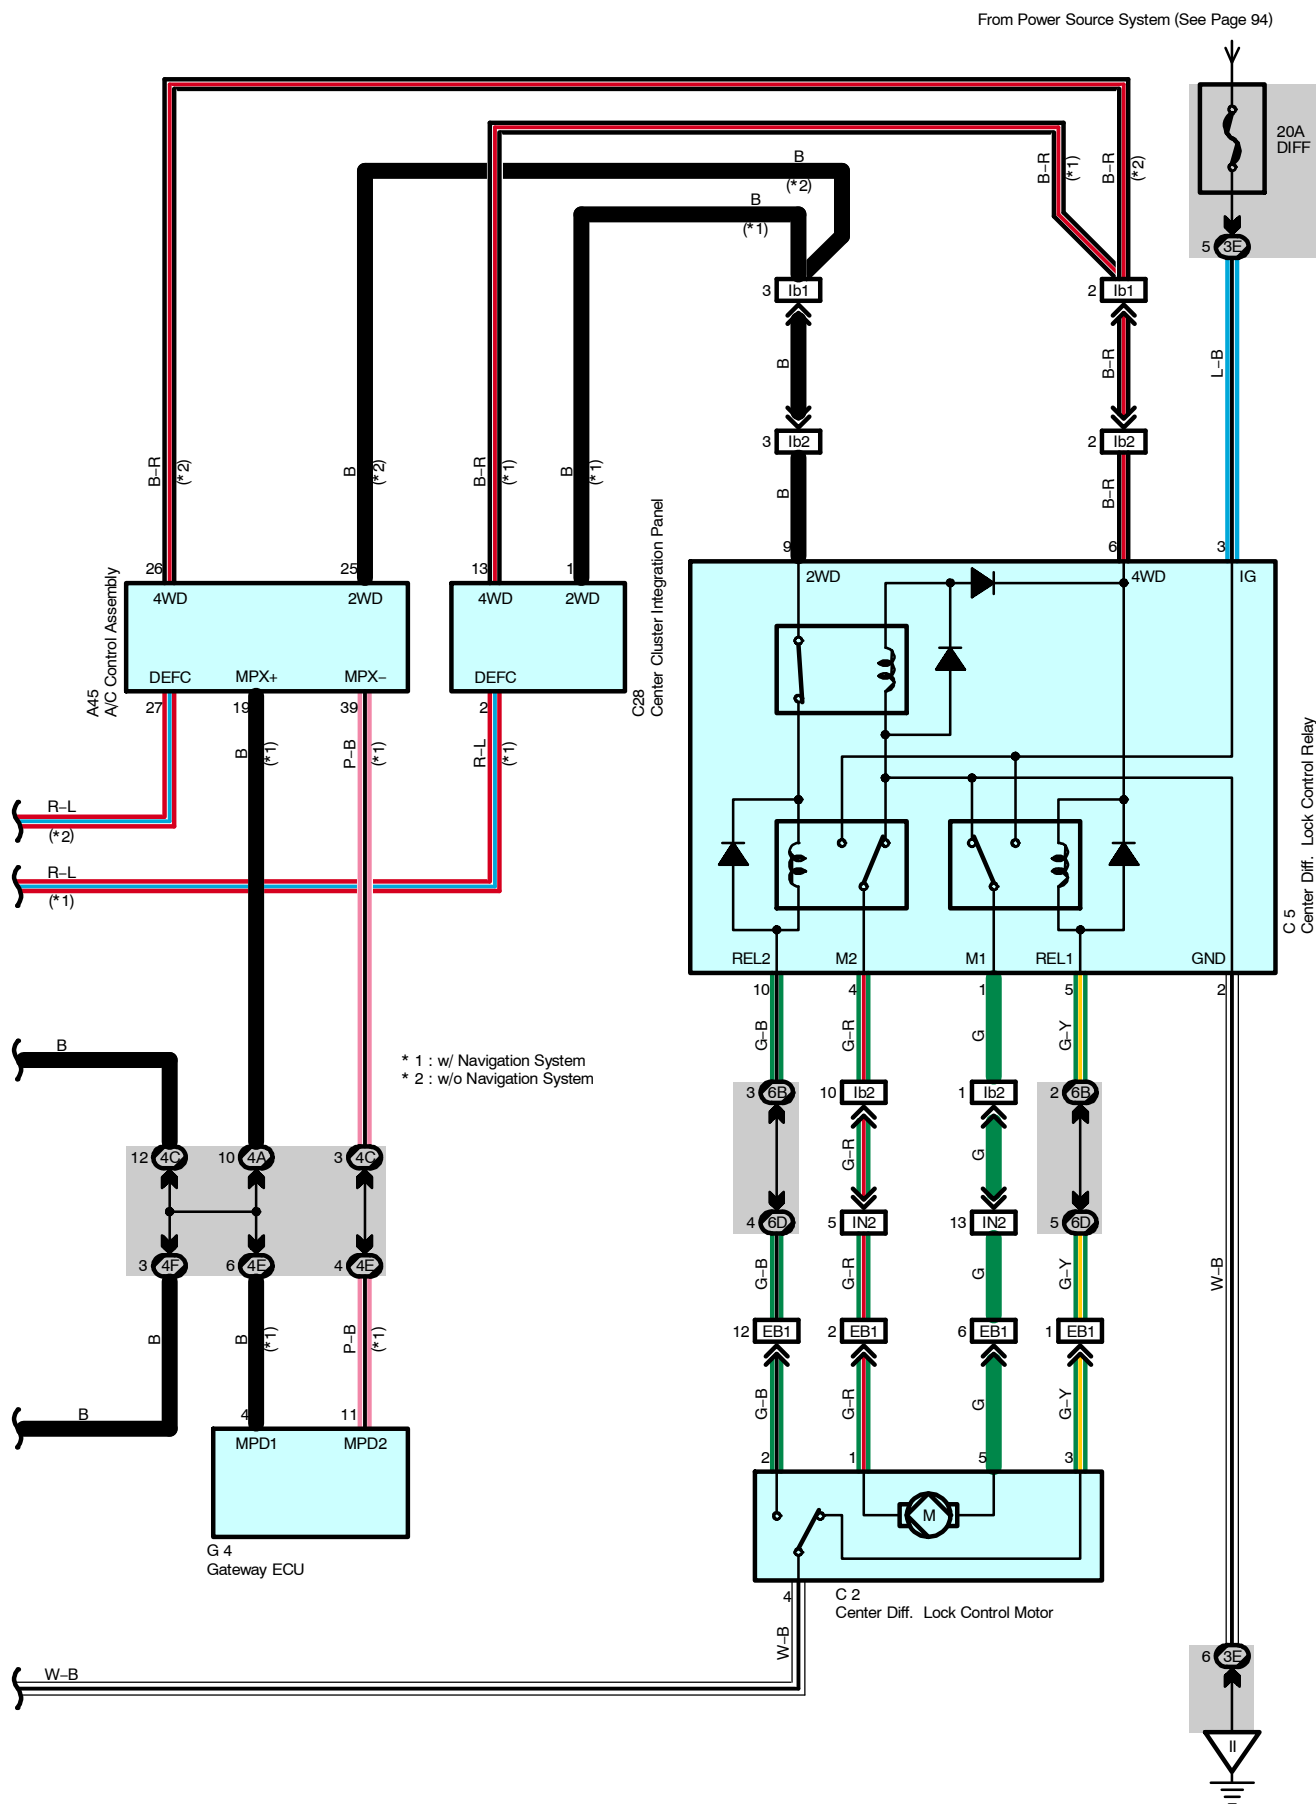

Service Hints

C5 Center Diff. Lock Control Relay

3-Ground : Approx. 12 volts with ignition SW at ON or ST position

2-Ground : Always continuity

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A43		70		C13	B	70		E7	C	70	
A45		70		C15	D	70		E8	D	70	
B8		70		C28		70		E9	E	70	
C2		68		D4		68		G4		70	
C5		70		D5		68		J14		71	
C12	A	70		D6		68		P1		69	

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3B	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3E	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4C		
4D		
4E		
4F		
6B	60	Dash Wire and J/B No.6 (Behind the Grove Box)
6C		
6D	60	Engine Wire and J/B No.6 (Behind the Grove Box)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	76	Engine Wire and Transmission Wire (On the Transmission)
IN2	80	Engine Wire and Dash Wire (Behind the Glove Box)
IU1	82	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU3		
IX1	82	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
Ib1	84	Dash Wire and Dash Wire (Behind the Combination Meter)
Ib2		
If1	84	Engine Wire and Engine Wire (Behind the Glove Box)

▽ : Ground Points

Code	See Page	Ground Points Location
EC	76	Rear Bank of Right Cylinder Head
II	78	Set Bolt of Cowl Side J/B RH

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E9	76	Transmission Wire	E10	76	Engine Wire