


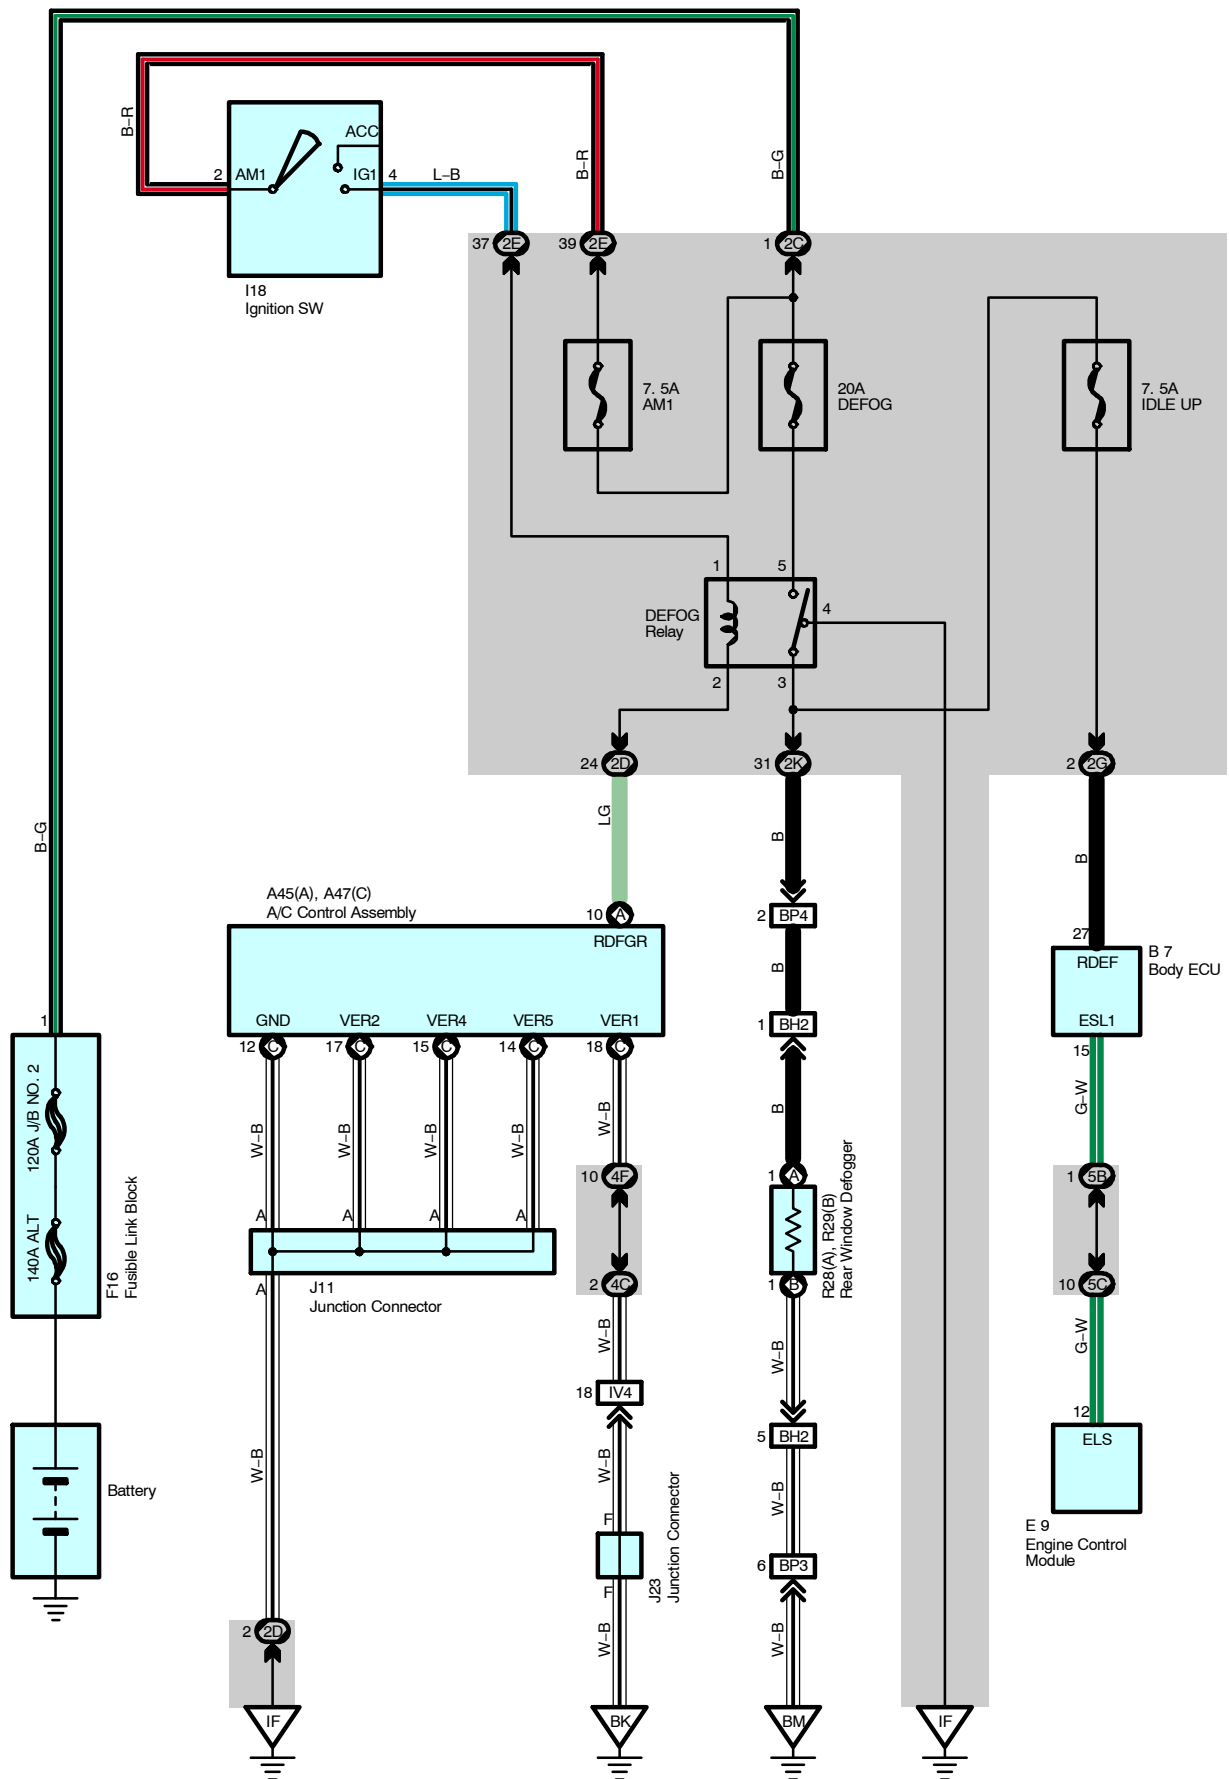

## Service Hints

### A45 (A), A47 (C) A/C Control Assembly

(A)10–Ground : Approx. 12 volts with ignition SW at ON or ST position

(C)12, (C) 14, (C) 15, (C) 17, (C) 18–Ground : Always continuity

## ○ : Parts Location

| Code |   | See Page | Code | See Page | Code |   | See Page |
|------|---|----------|------|----------|------|---|----------|
| A45  | A | 70       | F16  | 68       | R28  | A | 73       |
| A47  | C | 70       | I18  | 70       | R29  | B | 73       |
| B7   |   | 70       | J11  | 71       |      |   |          |
| E9   |   | 70       | J23  | 72       |      |   |          |

## ○ : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)         |
|------|----------|--------------------------------------------------------------|
| 2C   | 28       | Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel) |
| 2D   | 28       | Dash Wire and Cowl Side J/B LH (Left Kick Panel)             |
| 2E   |          |                                                              |
| 2G   |          |                                                              |
| 2K   | 28       | Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)       |
| 4C   | 52       | Dash Wire and J/B No.4 (Instrument Panel Center)             |
| 4F   |          |                                                              |
| 5B   | 56       | Dash Wire and J/B No.5 (Behind the Combination Meter)        |
| 5C   |          |                                                              |

## □ : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)          |
|------|----------|---------------------------------------------------------------------|
| IV4  | 82       | Dash Wire and Floor No.2 Wire (Right Kick Panel)                    |
| BH2  | 86       | Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)  |
| BP3  | 88       | Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel) |
| BP4  |          |                                                                     |

## ▽ : Ground Points

| Code | See Page | Ground Points Location                      |
|------|----------|---------------------------------------------|
| IF   | 78       | Set Bolt of Cowl Side J/B LH                |
| BK   | 86       | Front Side Under the Front Passenger's Seat |
| BM   | 86       | Left Rear Side Quarter Panel                |