


Auto Antenna

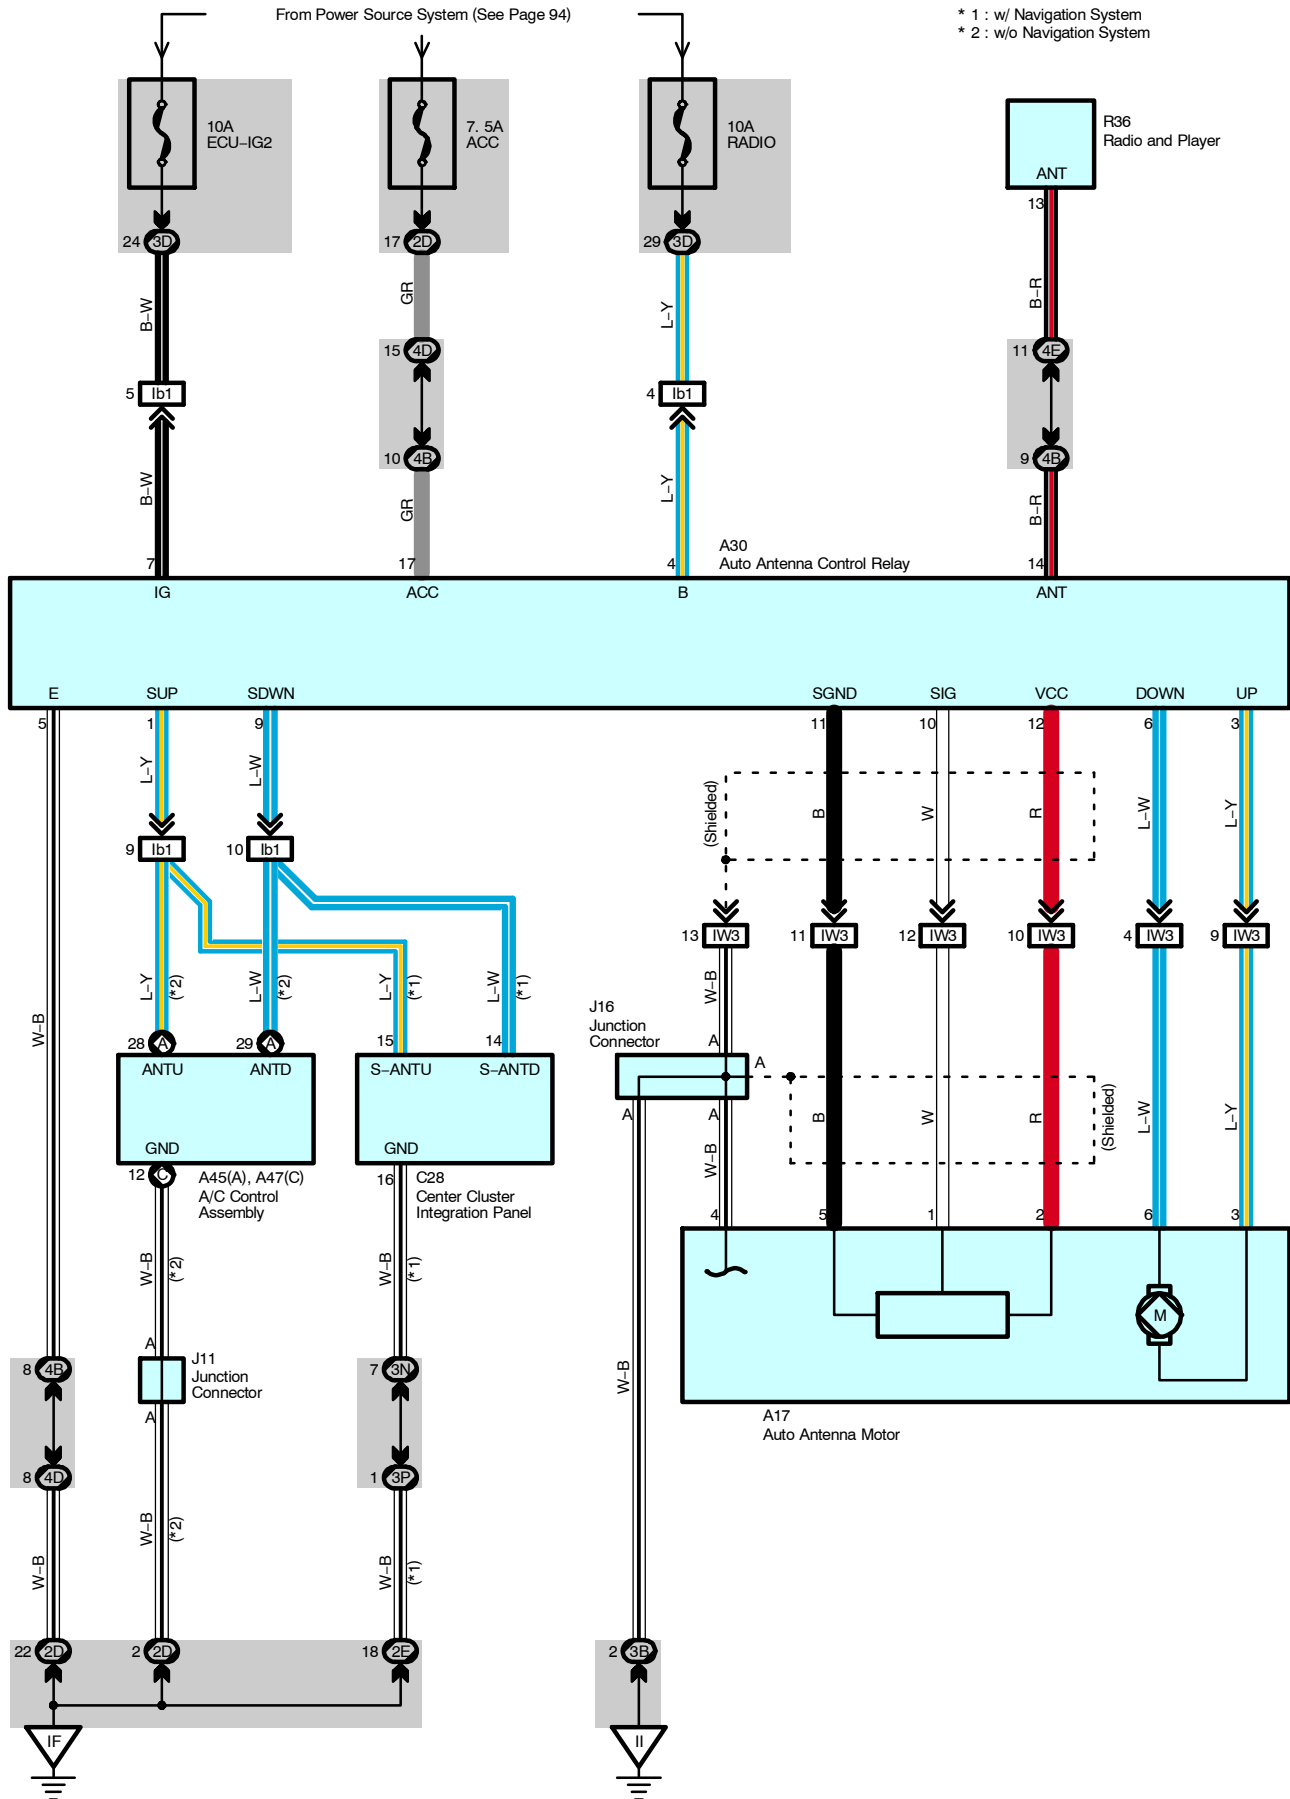

Service Hints

A30 Auto Antenna Control Relay

- 4-Ground : Always approx. 12 volts
- 17-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 7-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 5-Ground : Always continuity

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A17		68		A47	C	70		J16		71	
A30		70		C28		70		R36		71	
A45	A	70		J11		71					

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
3B	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3N	43	
3P		
4B	52	
4D		
4E		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IW3	82	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
Ib1	84	Dash Wire and Dash Wire (Behind the Combination Meter)

▽ : Ground Points

Code	See Page	Ground Points Location
IF	78	Set Bolt of Cowl Side J/B LH
II	78	Set Bolt of Cowl Side J/B RH