





Radio and Player (w/ Navigation System)

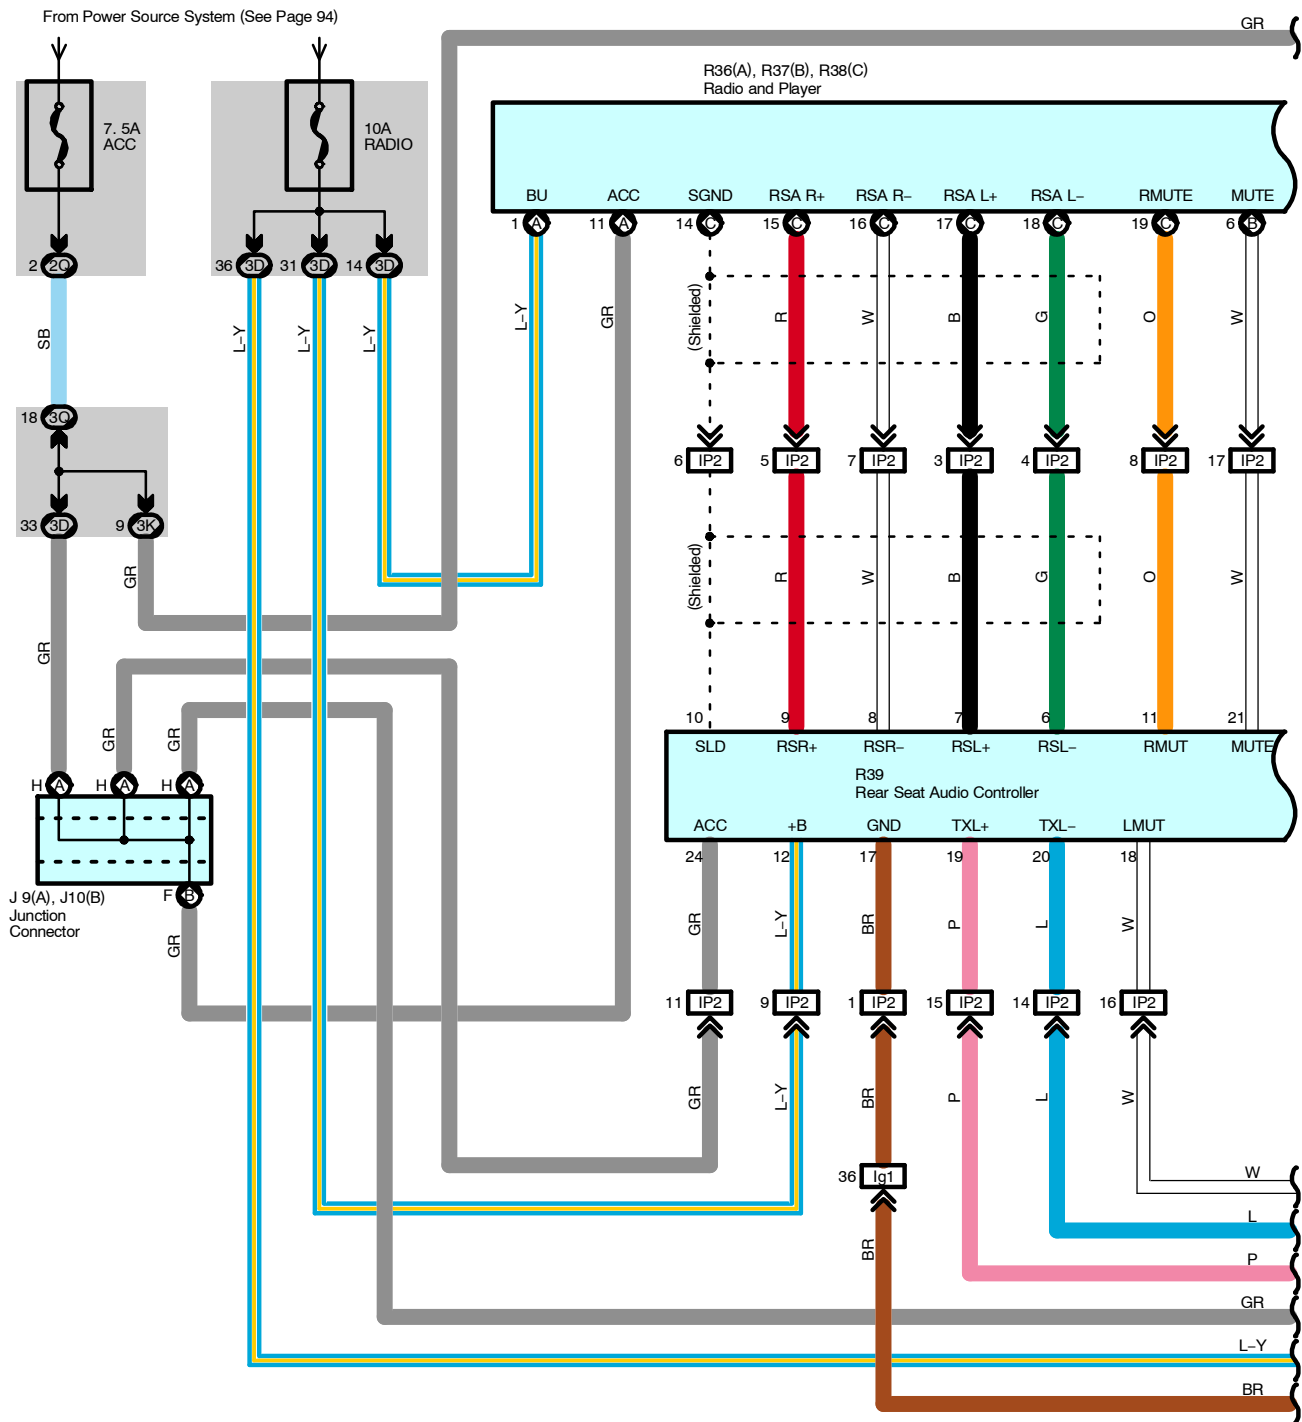

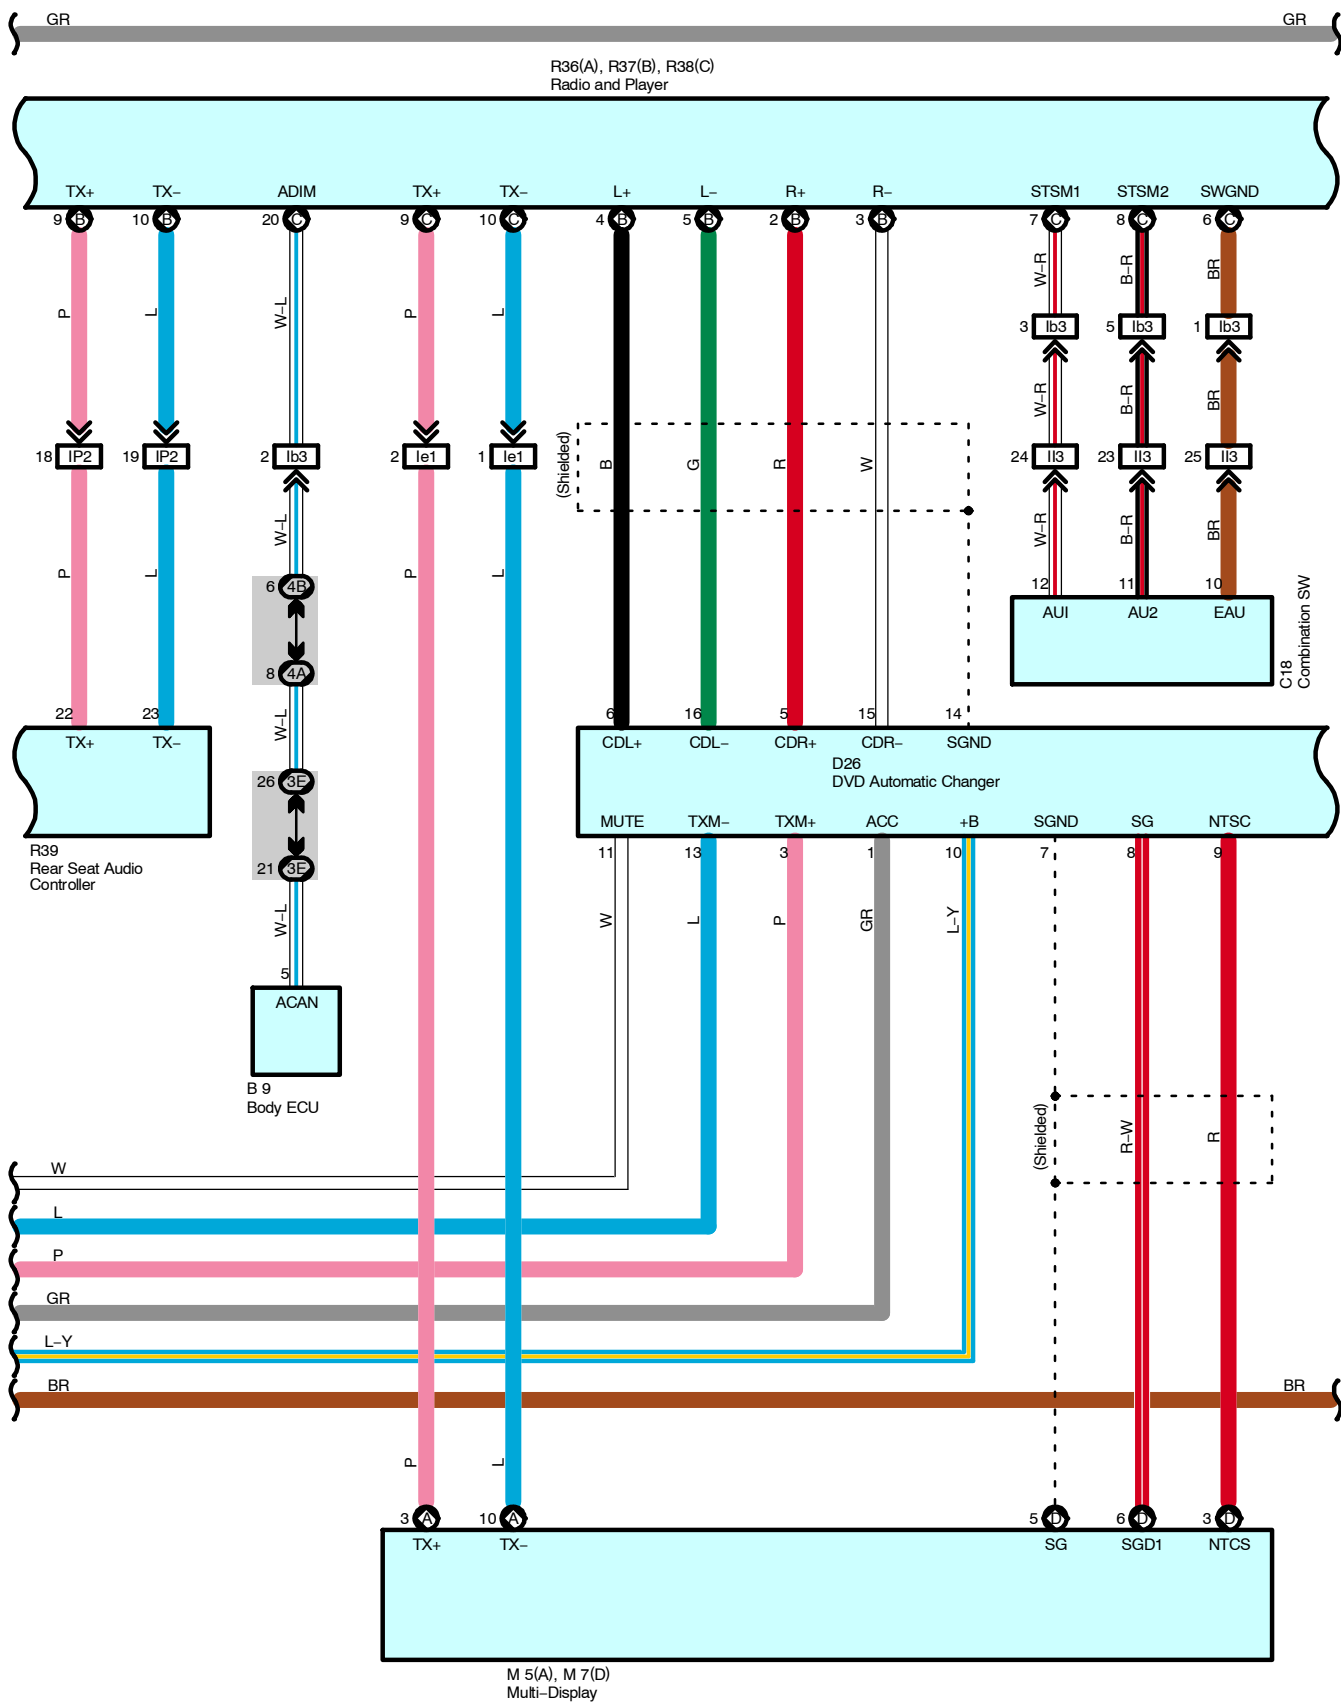

Radio and Player (w/ Navigation System)

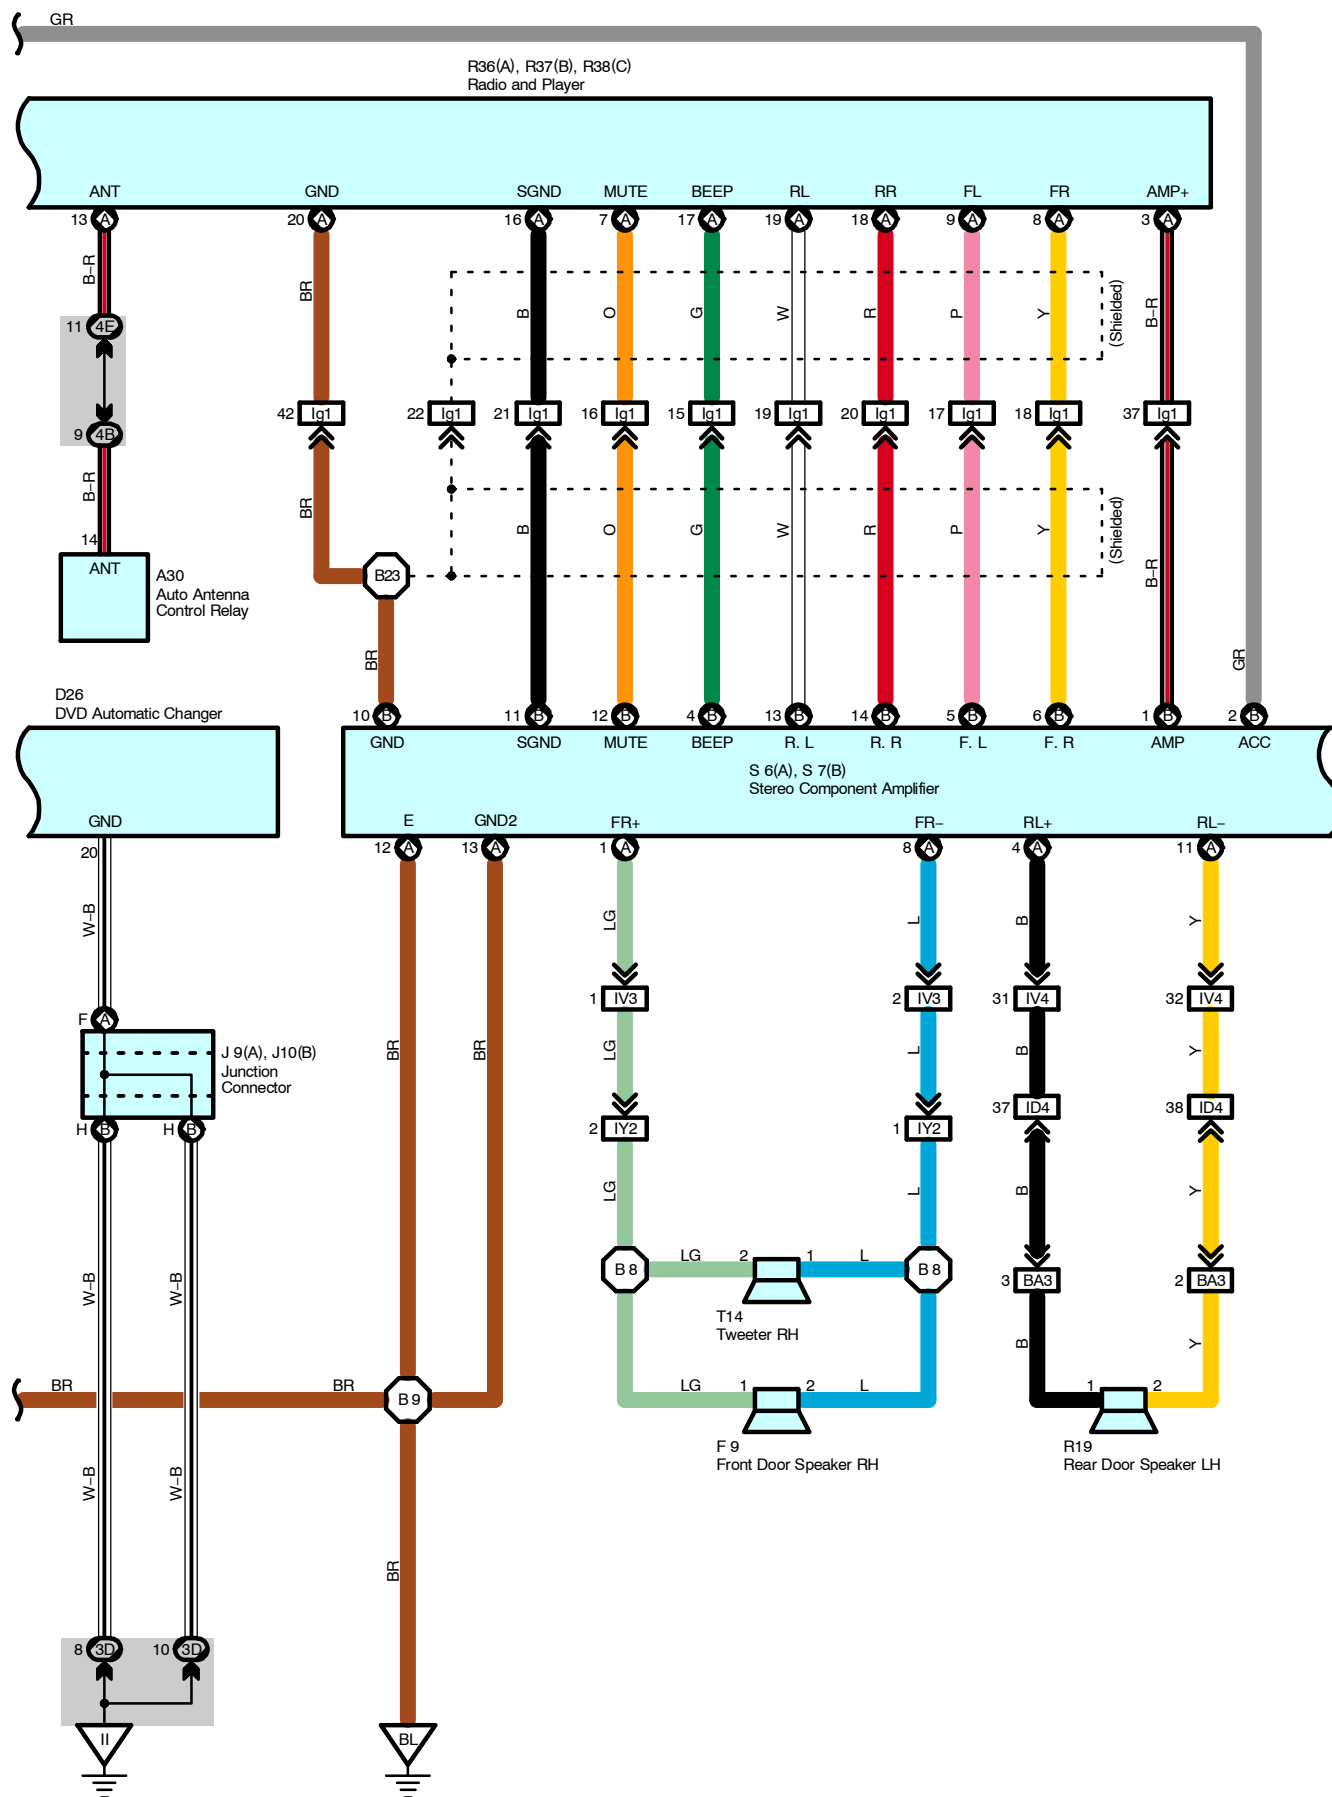

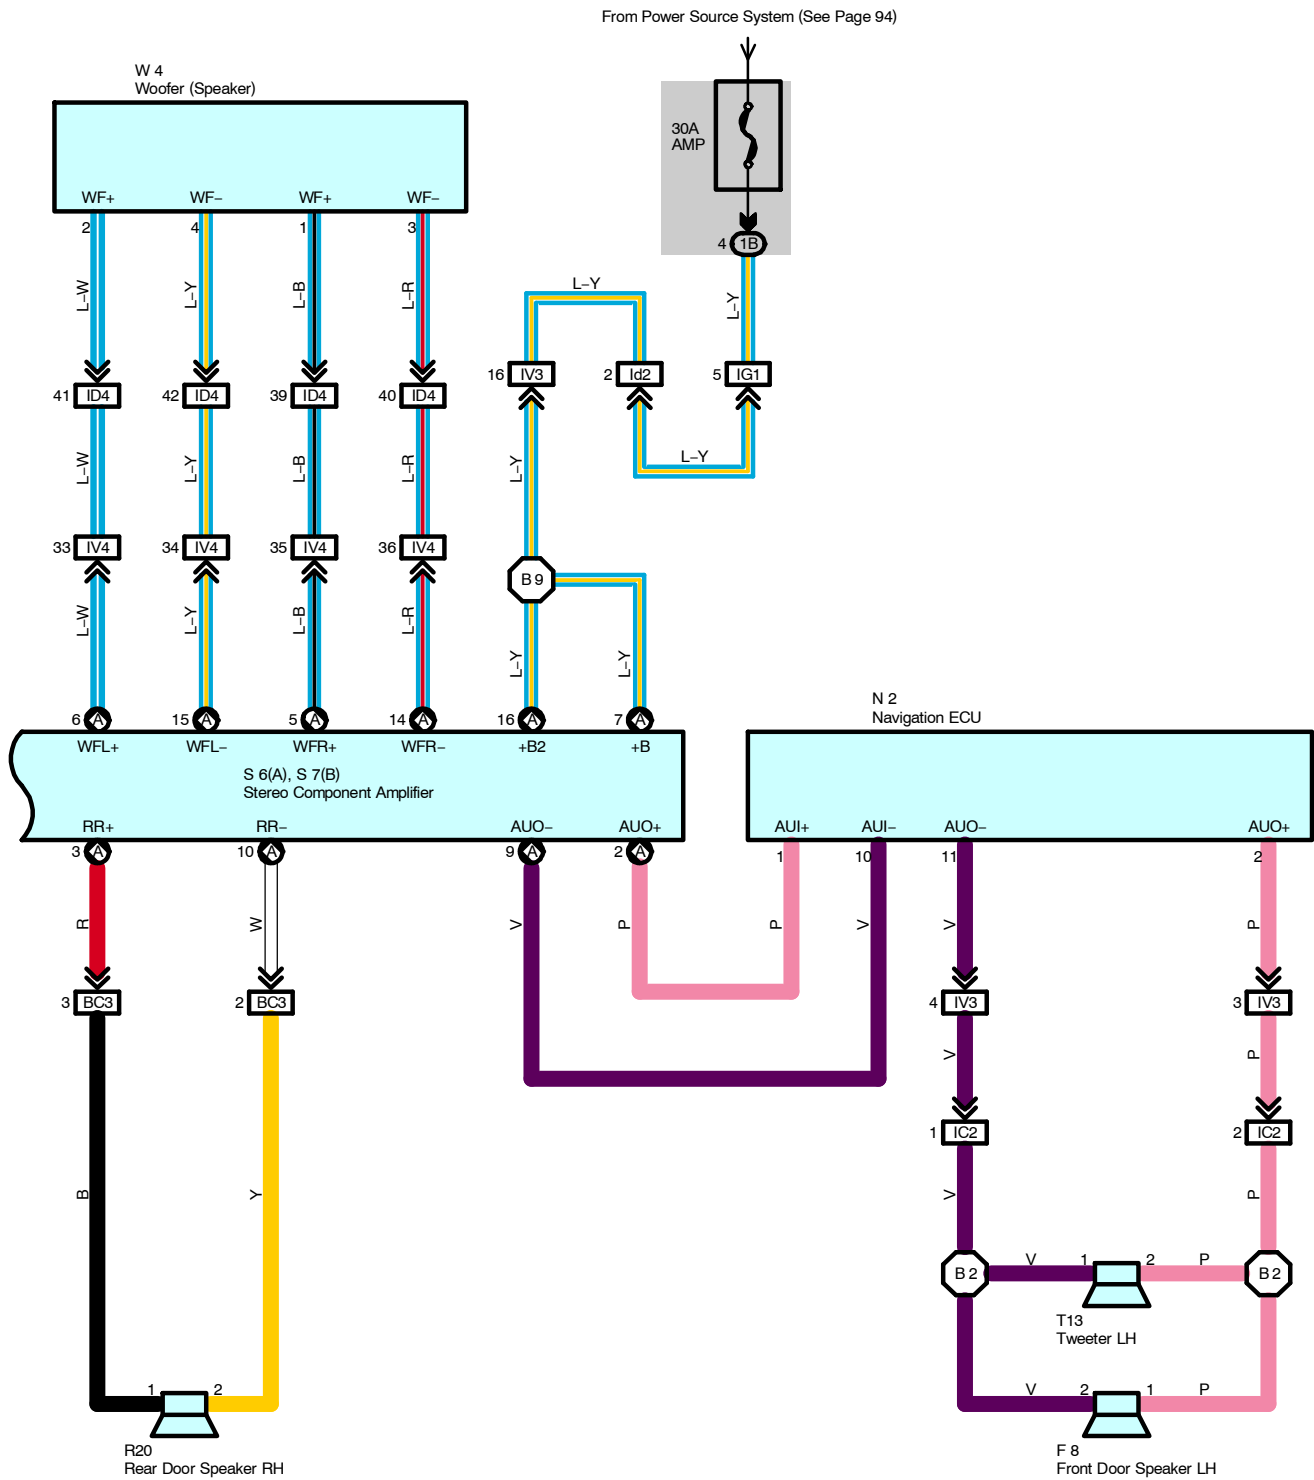

Radio and Player (w/ Navigation System)

Service Hints

R36 Radio and Player

- 1–Ground : Always approx. 12 volts
- 11–Ground : Approx. 12 volts with ignition SW at ACC or ON position

S6 (A), S7 (B) Stereo Component Amplifier

- (A) 7, (A) 16–Ground : Always approx. 12 volts
- (B) 2–Ground : Approx. 12 volts with ignition SW at ACC or ON position
- (A) 12, (A) 13–Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A30	70	M5	A 71	R39	71
B9	70	M7	D 71	S6	A 73
C18	70	N2	72	S7	B 73
D26	70	R19	73	T13	73
F8	72	R20	73	T14	73
F9	72	R36	A 71	W4	73
J9	A 71	R37	B 71		
J10	B 71	R38	C 71		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4B		
4E		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	78	Front Door LH Wire and Dash Wire (Left Kick Panel)
ID4	78	Dash Wire and Floor No.1 Wire (Left Kick Panel)
IG1	78	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
II3	80	Dash Wire and Column Wire (Near the Ignition SW)
IP2	80	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IV3	82	Dash Wire and Floor No.2 Wire (Right Kick Panel)
IV4		
IY2	82	Front Door RH Wire and Dash Wire (Right Kick Panel)
Ib3	84	Dash Wire and Dash Wire (Behind the Combination Meter)
Id2	84	Dash Wire and Dash Wire (Instrument Panel Center)
Ie1	84	Dash Wire and Dash Wire (Behind the Glove Box)
Ig1	84	Dash Wire and Floor No.2 Wire (Right Side of Front Console)
BA3	86	Rear Door LH Wire and Floor No.1 Wire (Left Side of Center Pillar)
BC3	86	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)

▽ : Ground Points

Code	See Page	Ground Points Location
II	78	Set Bolt of Cowl Side J/B RH
BL	86	Rear Side Under the Front Passenger's Seat



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B2	88	Front Door LH Wire	B9	88	Floor No.2 Wire
B8	88	Front Door RH Wire	B23		