


Multi-Display (w/o Navigation System)

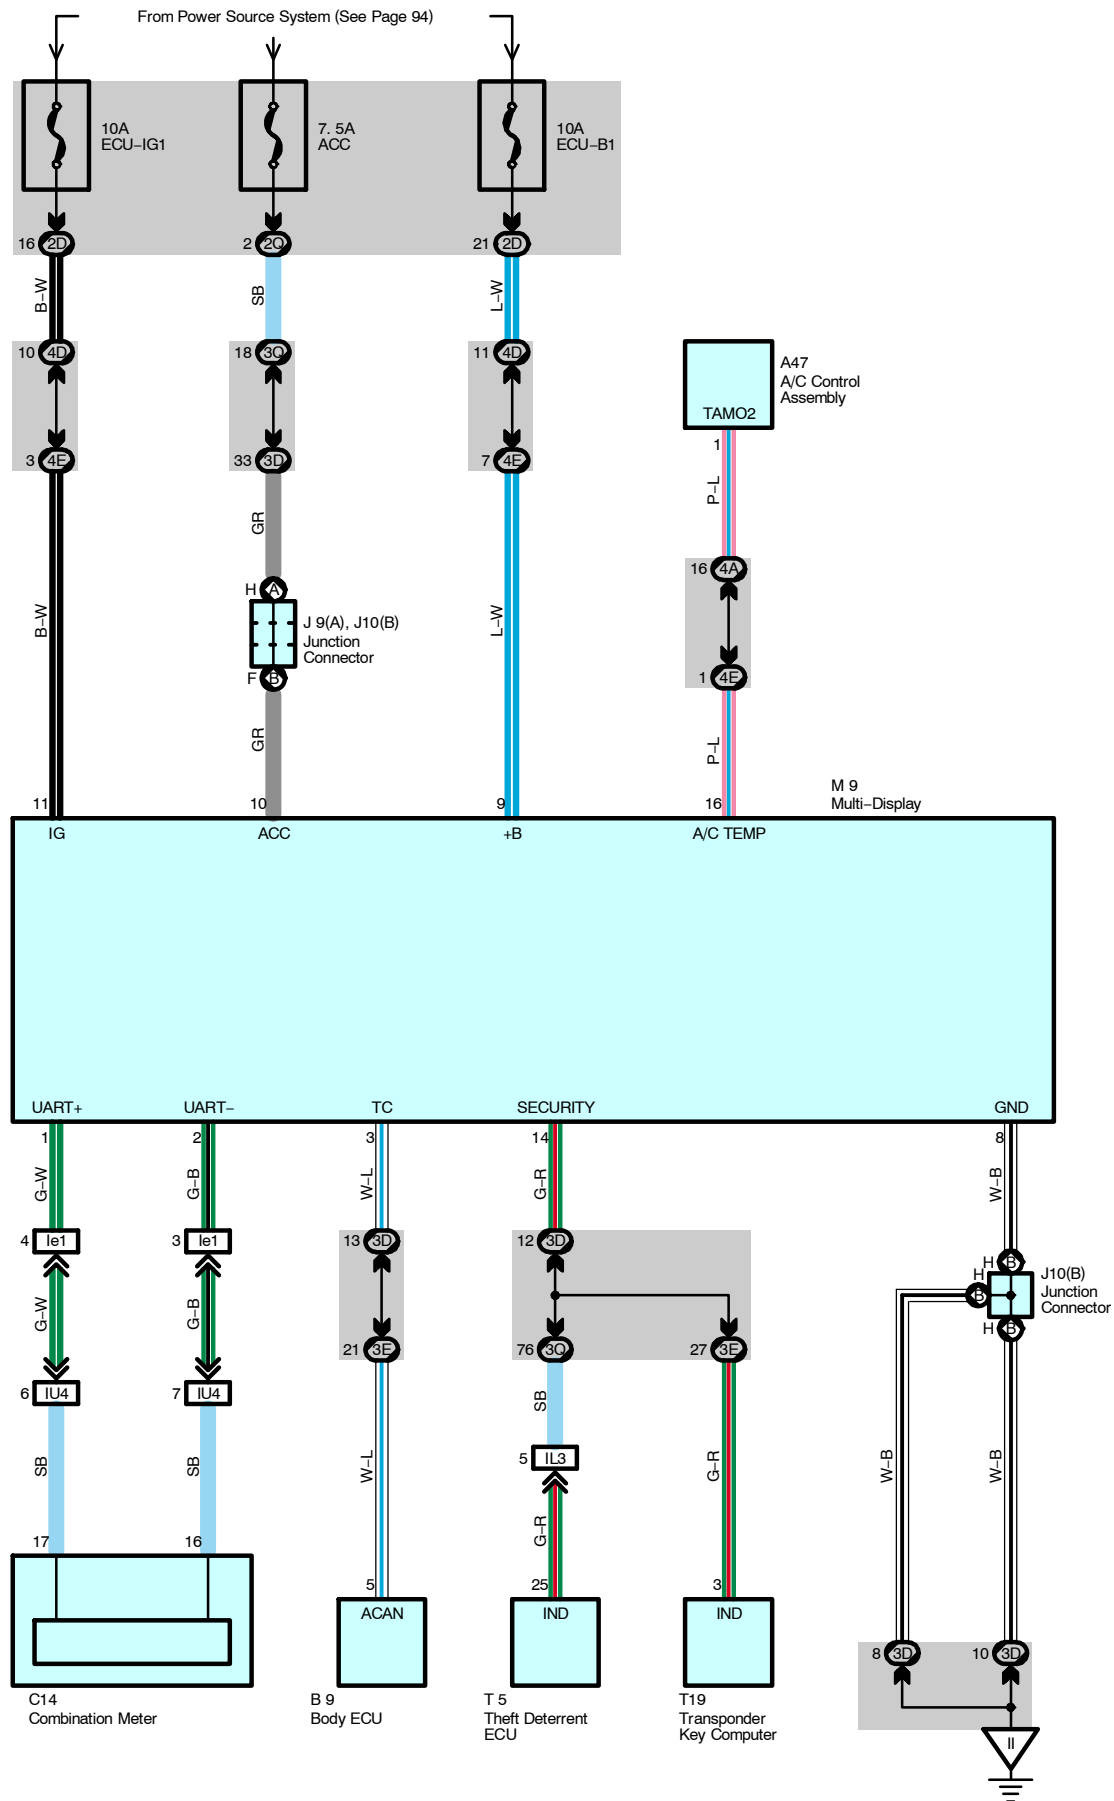

Service Hints

M9 Multi-Display

- 9-Ground : Always approx. 12 volts
- 10-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 11-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 8-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A47	70	J9	A	71	T5
B9	70	J10	B	71	T19
C14	70	M9	71		

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4D		
4E		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IL3	80	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IU4	82	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
Ie1	84	Dash Wire and Dash Wire (Behind the Glove Box)

▽ : Ground Points

Code	See Page	Ground Points Location
II	78	Set Bolt of Cowl Side J/B RH