



Combination Meter

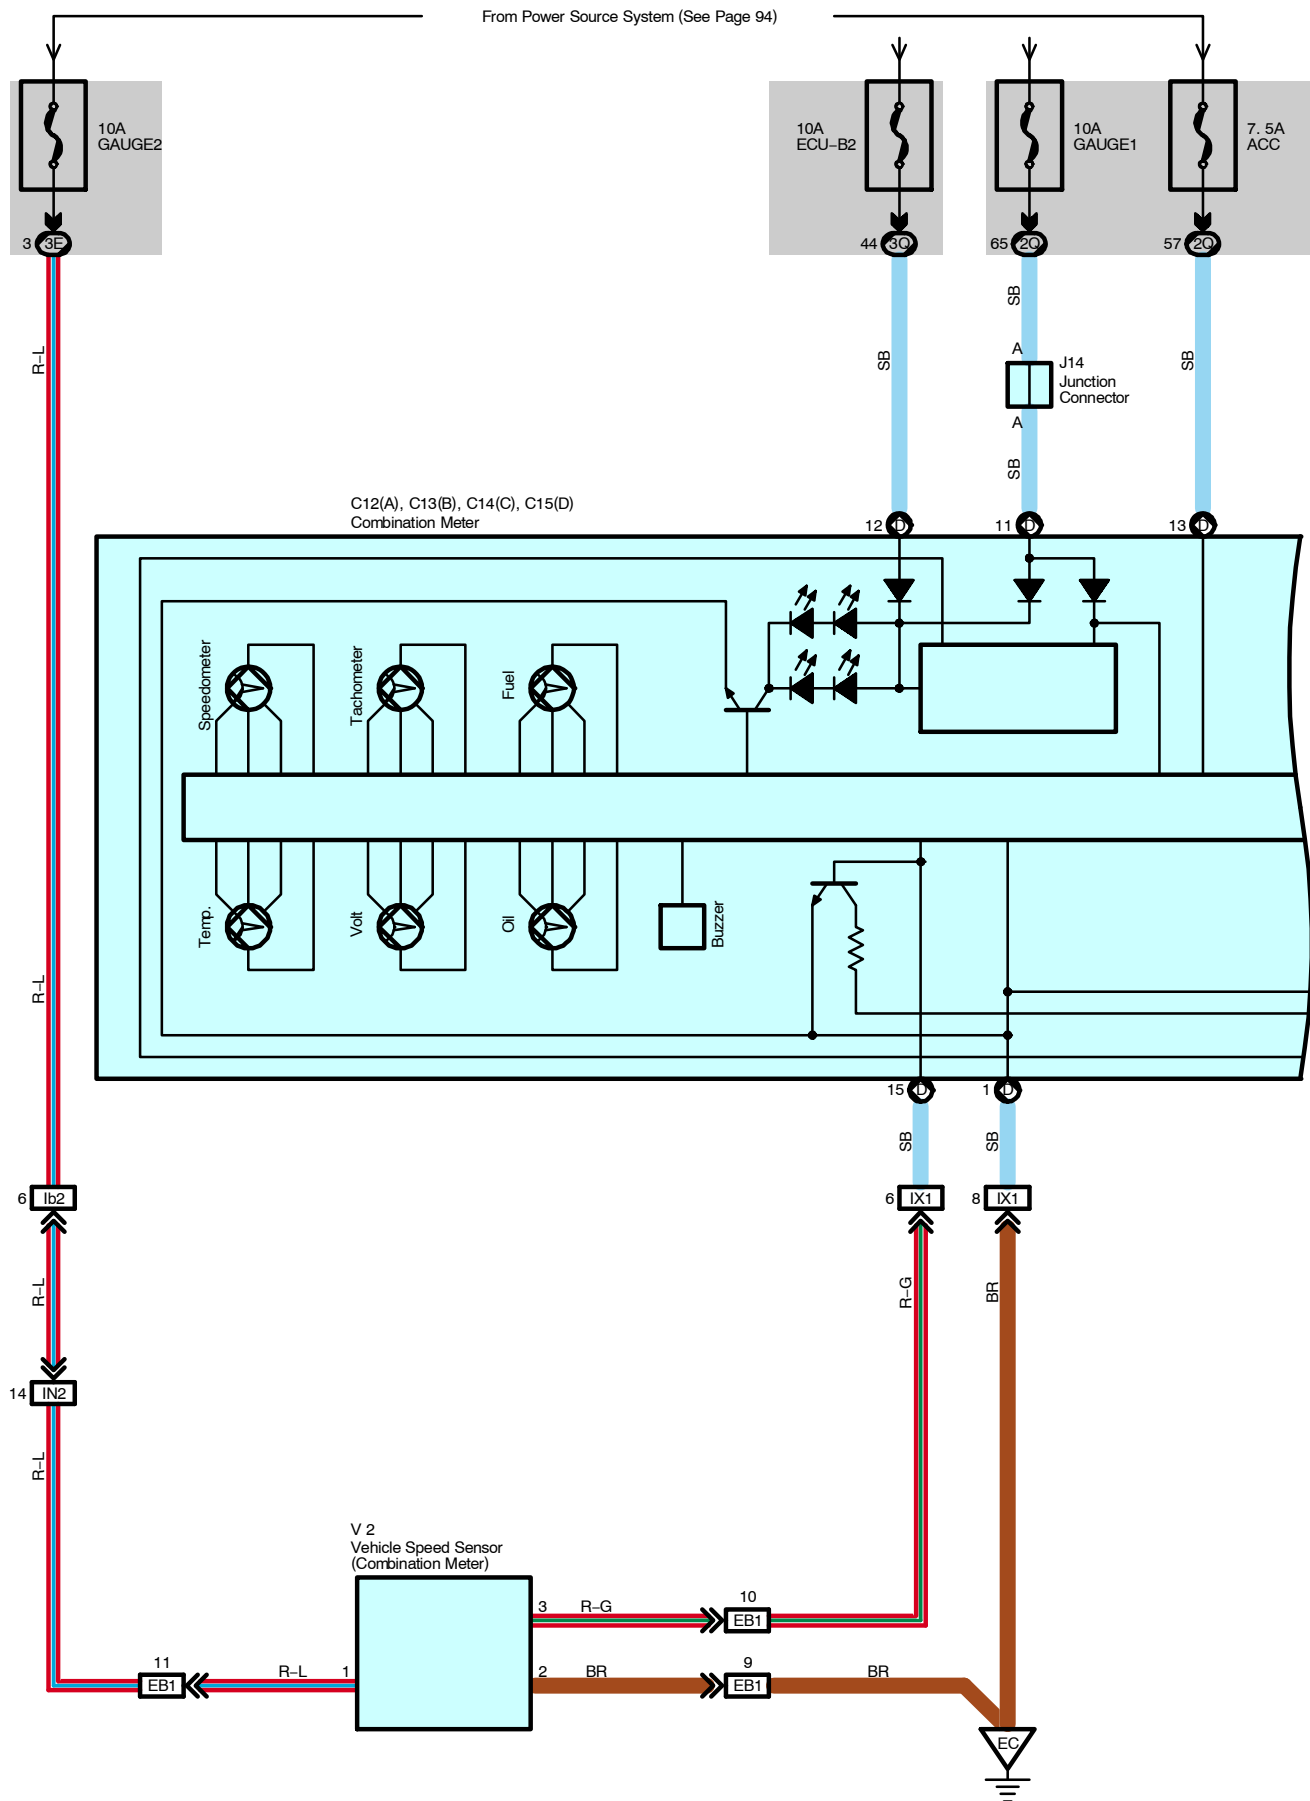


From Power Source System (See Page 94)


* 1 : w/ Navigation System

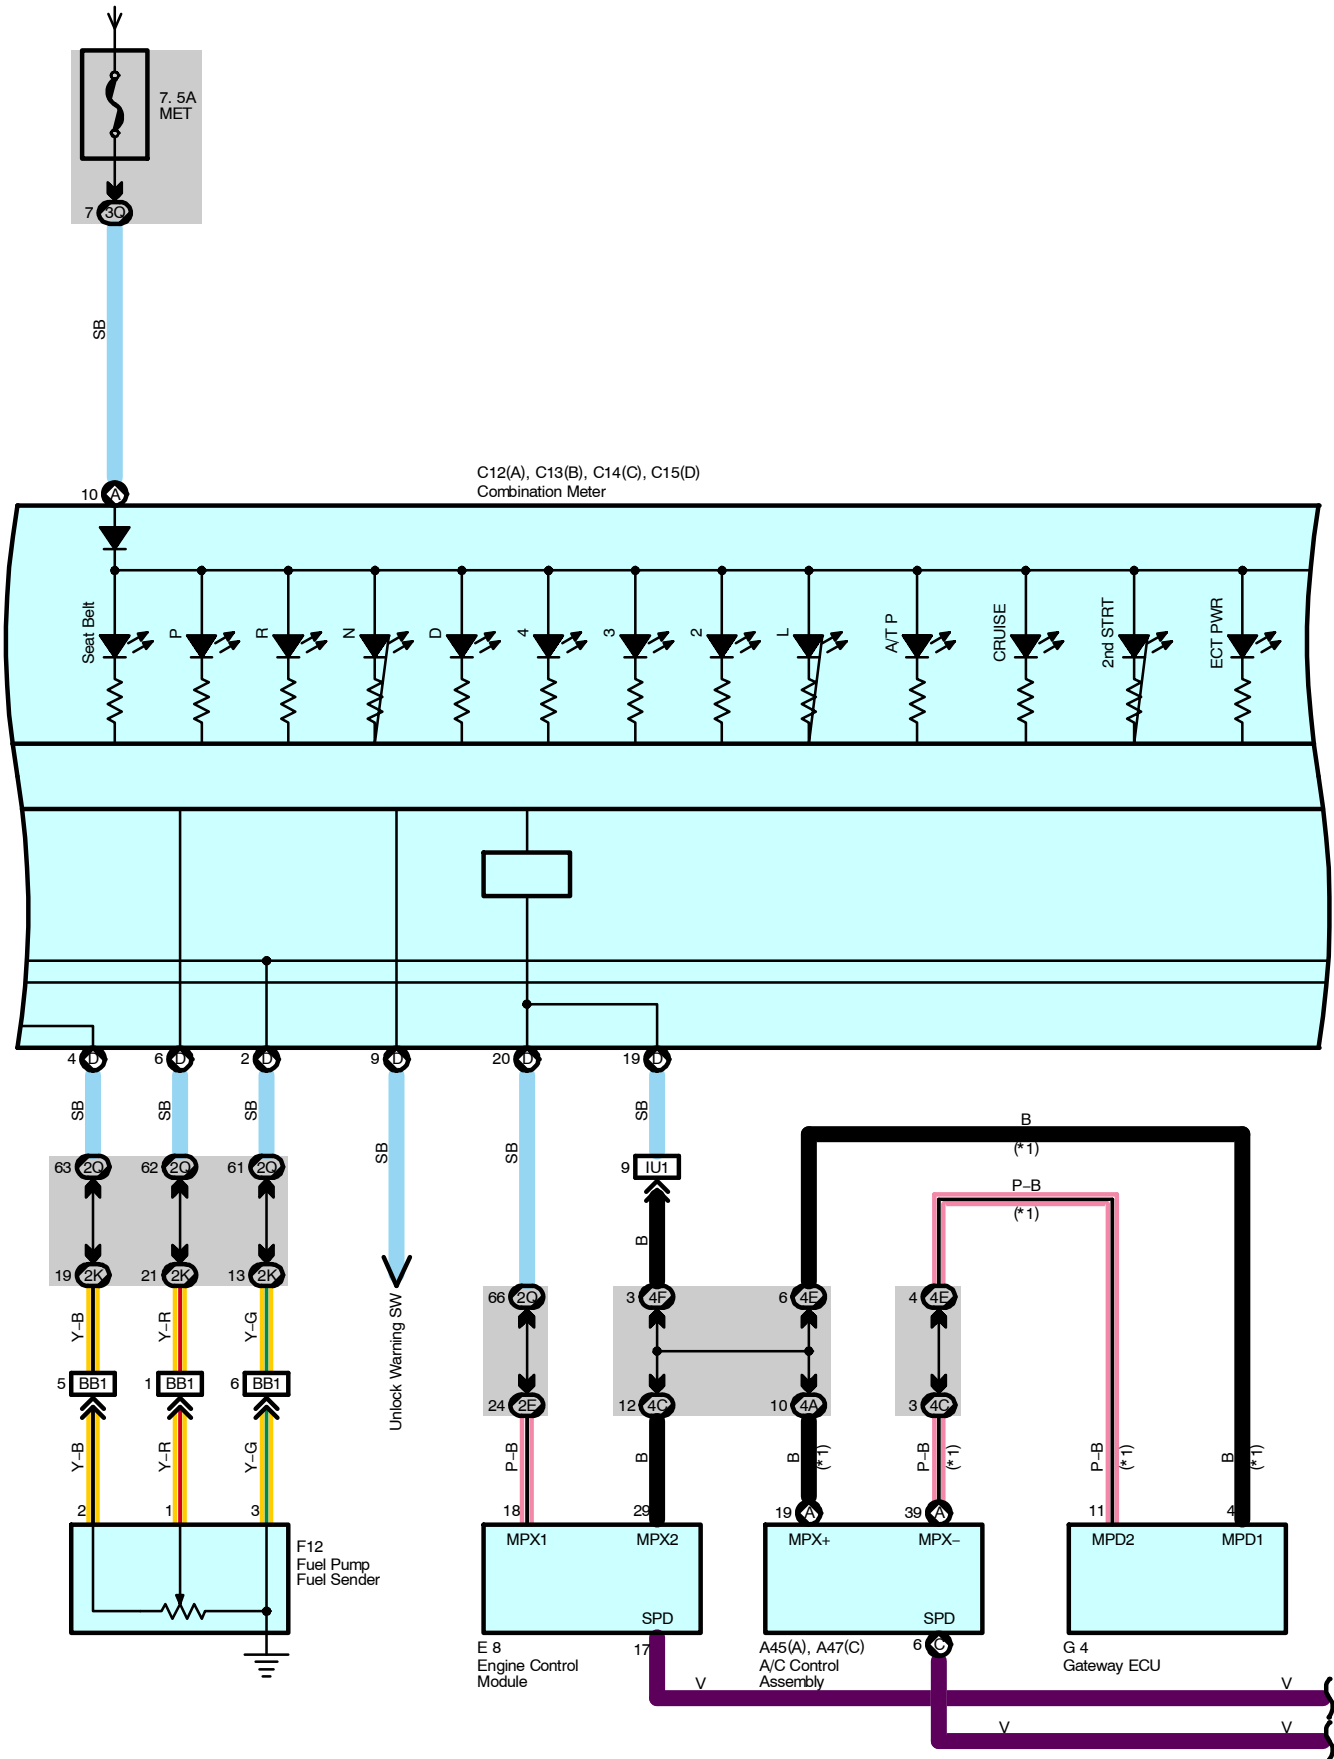

Combination Meter

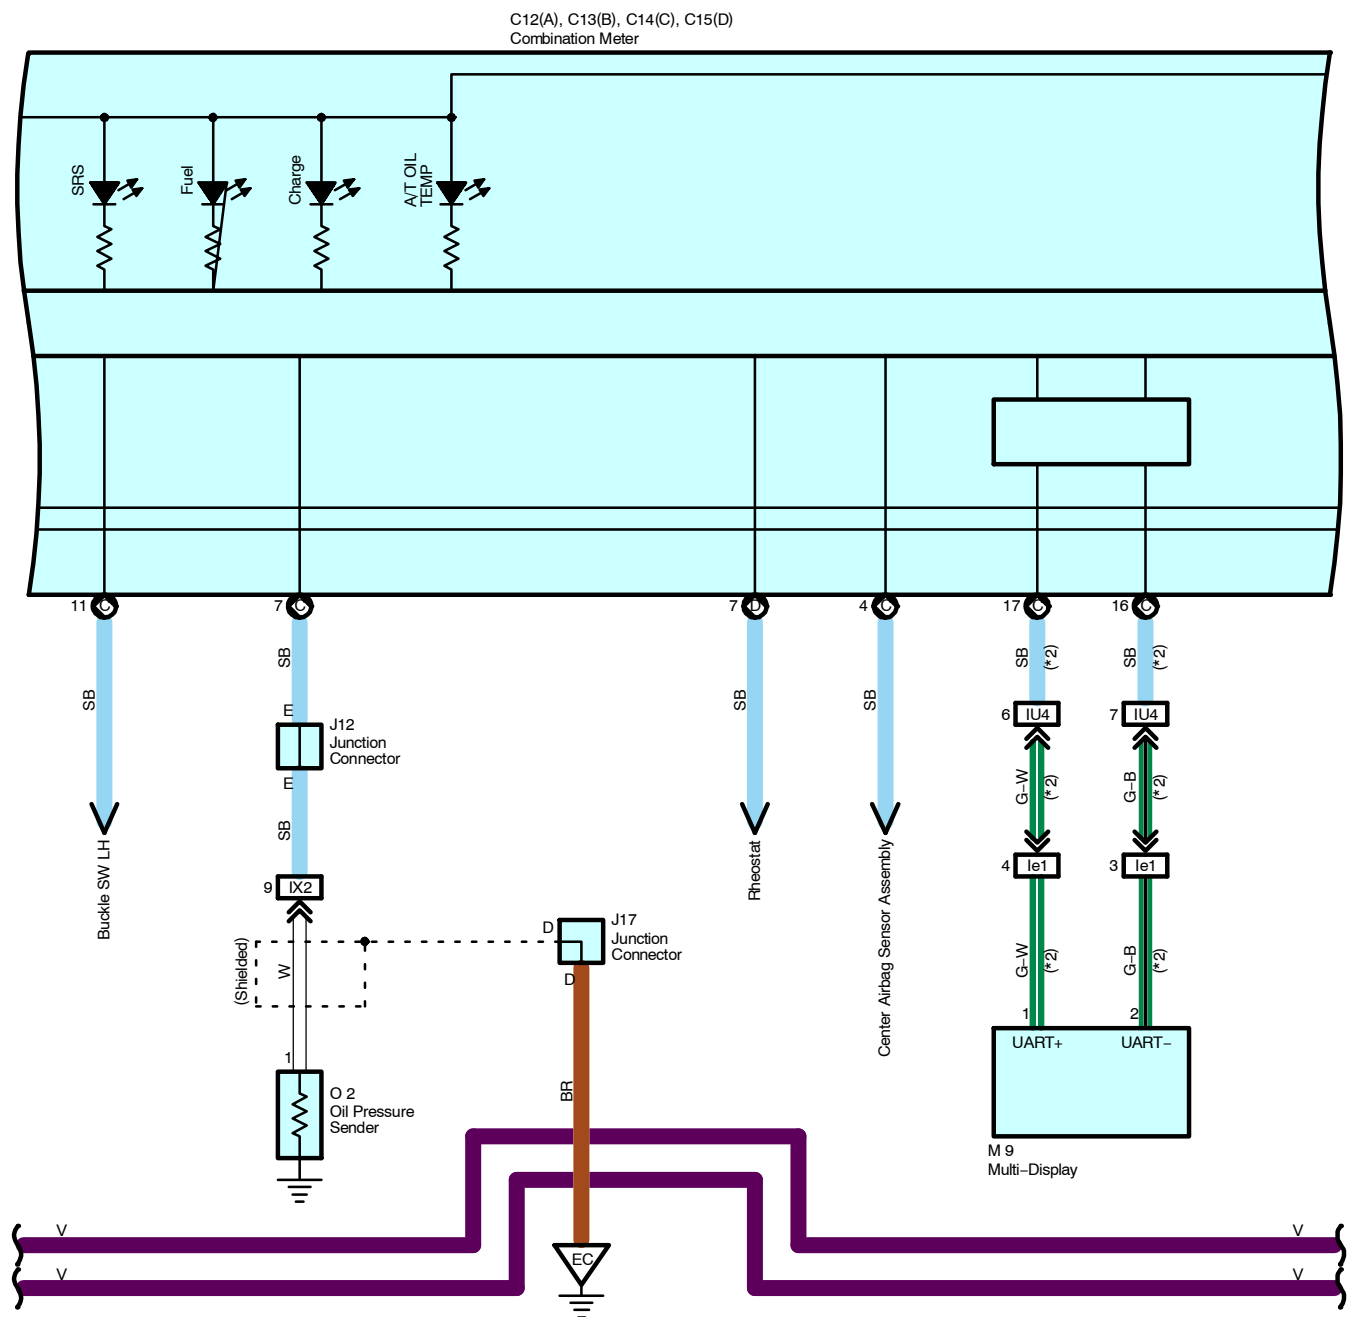

Combination Meter

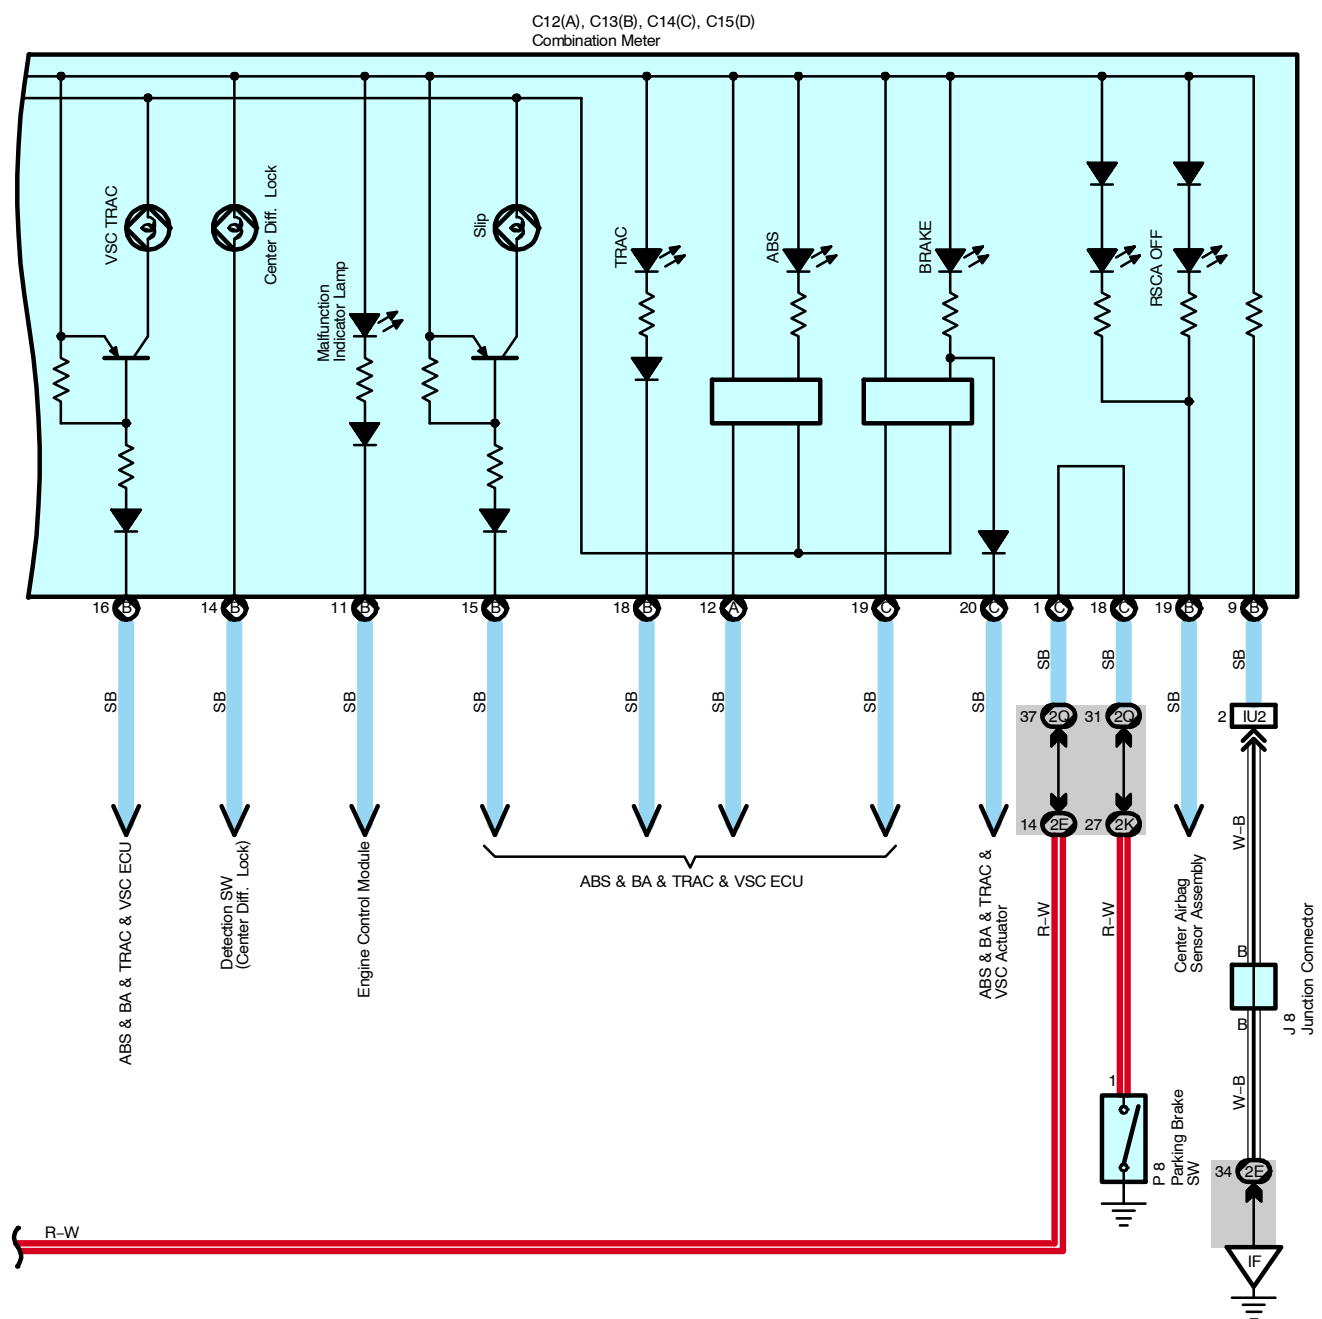

Service Hints

P8 Parking Brake SW

1-Ground : Closed with parking brake lever pulled up

C12 (A), C13 (B), C15 (D) Combination Meter

(D) 12, (D) 14-Ground : Always approx. 12 volts

(D) 13-Ground : Approx. 12 volts with ignition SW at ACC or ON position

(A) 10, (D) 11-Ground : Approx. 12 volts with ignition SW at ON or ST position

(B) 8-Ground : Approx. 12 volts with light control SW at TAIL or HEAD position

(B) 9, (D) 1-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A45	A	70	C15	D	70
A47	C	70	E8		70
B8	B	70	F12		72
B9	C	70	G4		70
C12	A	70	J8		71
C13	B	70	J12		71
C14	C	70	J14		71
				J17	71
				M5	71
				M9	71
				N2	72
				O2	69
				P8	73
				V2	69

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4C		
4E		
4F		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	76	Engine Wire and Transmission Wire (On the Transmission)
IN2	80	Engine Wire and Dash Wire (Behind the Glove Box)
IU1	82	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU2		
IU3		
IU4		
IX1	82	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
IX2		
Ib2	84	Dash Wire and Dash Wire (Behind the Combination Meter)
Ie1	84	Dash Wire and Dash Wire (Behind the Glove Box)
BB1	86	Floor No.1 Wire and Fuel Tank Wire (Near the Fuel Tank)

▽ : Ground Points

Code	See Page	Ground Points Location
EC	76	Rear Bank of Right Cylinder Head



: **Ground Points**

Code	See Page	Ground Points Location
IF	78	Set Bolt of Cowl Side J/B LH