

# TERMS

## ABBREVIATIONS USED IN THIS MANUAL

IN04Q-26

| Abbreviations | Meaning                            |
|---------------|------------------------------------|
| A/C           | Air Conditioning                   |
| AC            | Alternating Current                |
| ACC           | Accessory                          |
| ACIS          | Acoustic Control Induction System  |
| ACSD          | Automatic Cold Start Device        |
| ALT           | Alternator                         |
| AMP           | Amplifier                          |
| APPROX.       | Approximately                      |
| A/T           | Automatic Transmission (Transaxle) |
| BACS          | Boost Altitude Compensation System |
| BAT           | Battery                            |
| BTDC          | Before Top Dead Center             |
| BVSV          | Bimetallic Vacuum Switching Valve  |
| CB            | Circuit Breaker                    |
| CCO           | Catalytic Converter for Oxidation  |
| DC            | Direct Current                     |
| DLC           | Data Link Connector                |
| DTC           | Diagnostic Trouble Code            |
| ECD           | Electronic Control Diesel          |
| ECT           | Electronic Control Transmission    |
| ECU           | Electronic Control Unit            |
| EDU           | Electronic Driving Unit            |
| EFI           | Electronic Fuel Injection          |
| E/G           | Engine                             |
| EGR           | Exhaust Gas Recirculation          |
| EVAP          | Evaporative Emission Control       |
| E-VRV         | Electronic Vacuum Regulating Valve |
| EX            | Exhaust                            |
| FIPG          | Formed In Place Gasket             |
| FL            | Fusible Link                       |
| Fr            | Front                              |
| GND           | Ground                             |
| HAC           | High Altitude Compensator          |
| IG            | Ignition                           |
| IIA           | Integrated Ignition Assembly       |
| IN            | Intake                             |
| ISC           | Idle Speed Control                 |
| J/B           | Junction Block                     |
| J/C           | Junction Connector                 |
| LCD           | Liquid Crystal Display             |
| LED           | Light Emitting Diode               |
| LH            | Left-Hand                          |

|        |                                       |
|--------|---------------------------------------|
| LHD    | Left-Hand Drive                       |
| LO     | Low                                   |
| MAP    | Manifold Absolute Pressure            |
| MAX.   | Maximum                               |
| MIL    | Malfunction Indicator Lamp            |
| MIN.   | Minimum                               |
| MP     | Multipurpose                          |
| M/T    | Manual Transmission                   |
| N      | Neutral                               |
| O2S    | Oxygen Sensor                         |
| O/D    | Overdrive                             |
| O/S    | Oversize                              |
| PKB    | Parking Brake                         |
| PS     | Power Steering                        |
| RAM    | Random Access Memory                  |
| R/B    | Relay Block                           |
| RH     | Right-Hand                            |
| RHD    | Right-Hand Drive                      |
| ROM    | Read Only Memory                      |
| Rr     | Rear                                  |
| SICS   | Starting Injection Control System     |
| SPEC   | Specification                         |
| SSM    | Special Service Materials             |
| SST    | Special Service Tools                 |
| STD    | Standard                              |
| SW     | Switch                                |
| TACH   | Tachometer                            |
| TDC    | Top Dead Center                       |
| TEMP.  | Temperature                           |
| TM     | Transmission                          |
| TMC    | TOYOTA Motor Corporation              |
| TWC    | Three-Way Catalyst                    |
| U/D    | Underdrive                            |
| VCV    | Vacuum Control Valve                  |
| VIN    | Vehicle Identification Number         |
| VSV    | Vacuum Switching Valve                |
| w/     | With                                  |
| W/H    | Wire Harness                          |
| w/o    | Without                               |
| WU-TWC | Warm Up Three-Way Catalytic Converter |
| 2WD    | Two Wheel Drive Vehicle (4x2)         |
| 4WD    | Four Wheel Drive Vehicle (4x4)        |