


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1HZ]

- * 1:Center Diff. Lock
* 2:Except *1

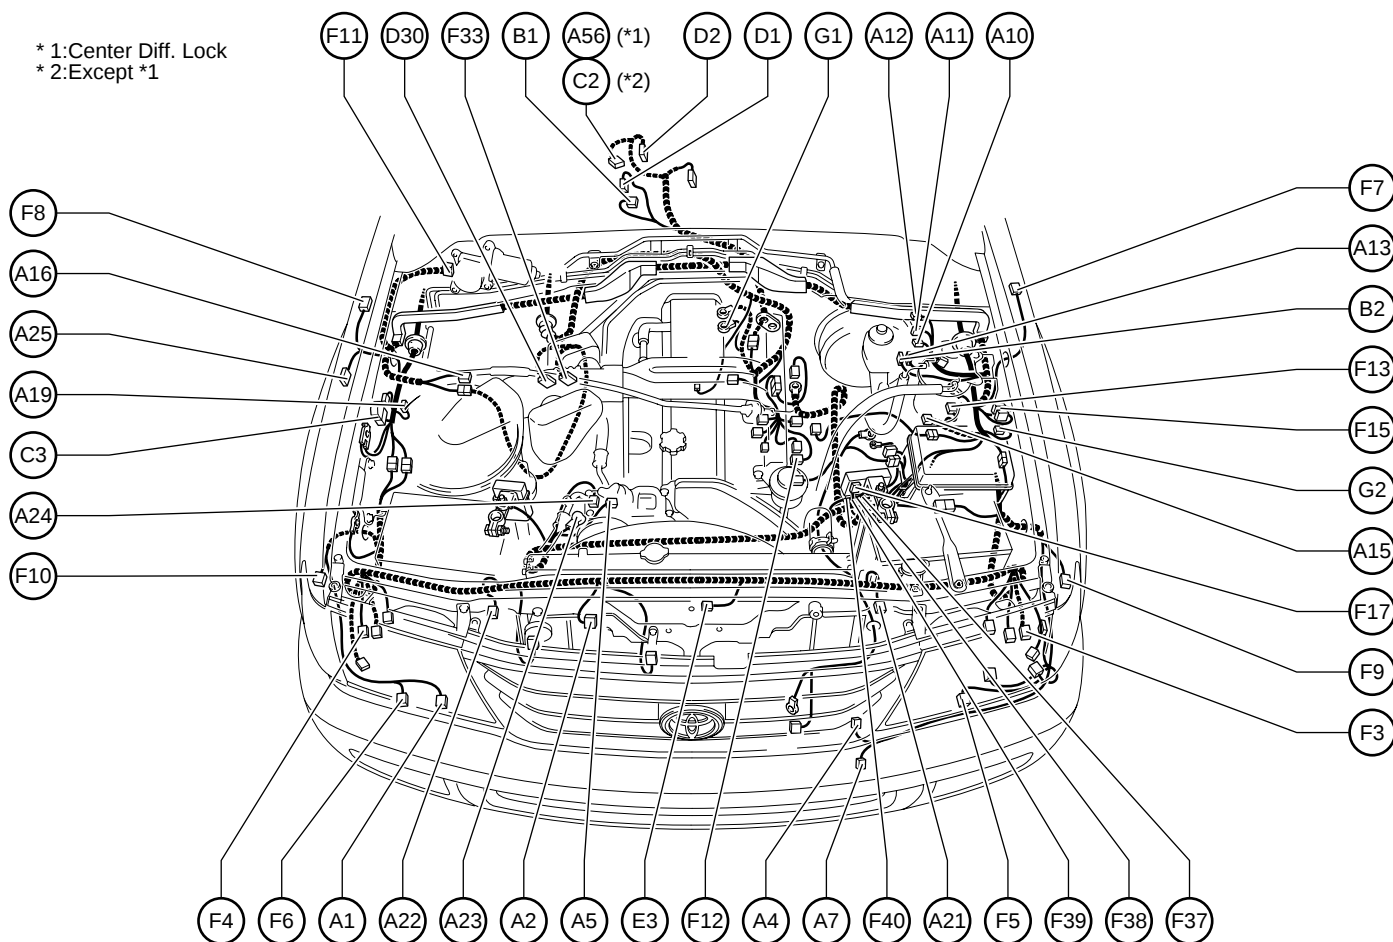

- A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 4 Pressure SW
A 5 A/C Magnetic Clutch
A 7 A/C Magnetic Valve
A10 ABS Actuator
A11 ABS Actuator
A12 ABS Actuator
A13 ABS Actuator
A15 ABS Speed Sensor Front LH
A16 ABS Speed Sensor Front RH
A19 Air Cleaner Warning Sensor
A21 Airbag Sensor Front LH
A22 Airbag Sensor Front RH
A23 Alternator
A24 Alternator
A25 Auto Antenna Motor
A56 ADD Control Motor

- B 1 Back-Up Light SW
B 2 Brake Fluid Level Warning SW

- C 2 Center Diff. Lock Control Motor
C 3 Check Connector

- D 1 Detection SW (Center Diff. Lock)
D 2 Detection SW (Transfer L Position)
D30 Detection SW (Front Diff. Lock)

- E 3 Engine Hood Courtesy SW

- F 3 Front Clearance Light LH
F 4 Front Clearance Light RH
F 5 Front Fog Light LH
F 6 Front Fog Light RH
F 7 Front Side Turn Signal Light LH
F 8 Front Side Turn Signal Light RH
F 9 Front Turn Signal Light LH
F10 Front Turn Signal Light RH
F11 Front Wiper Motor
F12 Fuel Cut Valve Controller
F13 Fuel Heater SW
F15 Fuel Sediment SW
F17 Fusible Link Block
F33 Front Diff. Lock Motor
F37 Fusible Link Block
F38 Fusible Link Block
F39 Fusible Link Block
F40 Fusible Link Block

- G 1 Glow Plug
G 2 Glow Plug Relay