

PRECAUTION

NOTICE:

Perform the RESET MEMORY (AT initialization) when replacing the automatic transmission assy, engine assy or the ECM ([See page DI-5](#)).

HINT:

Initialization can not be completed by only disconnecting the battery terminal.

