


COUNTER CLEARANCE

HINT:

- Perform the following procedure to clear the DTC C1555/55.
- When clearing the DTCs in DTC clear menu of the hand-held tester or SST check wire, DTC C1555/55 cannot be cleared.
- When clearing DTCs using the SST check wire, perform the VGRS system calibration.

1. **Connect the hand-held tester to DLC3.**
2. **Turn the ignition switch ON.**
3. **Perform the counter clearance procedure from the VGRS menu.**

Tester menu flow:

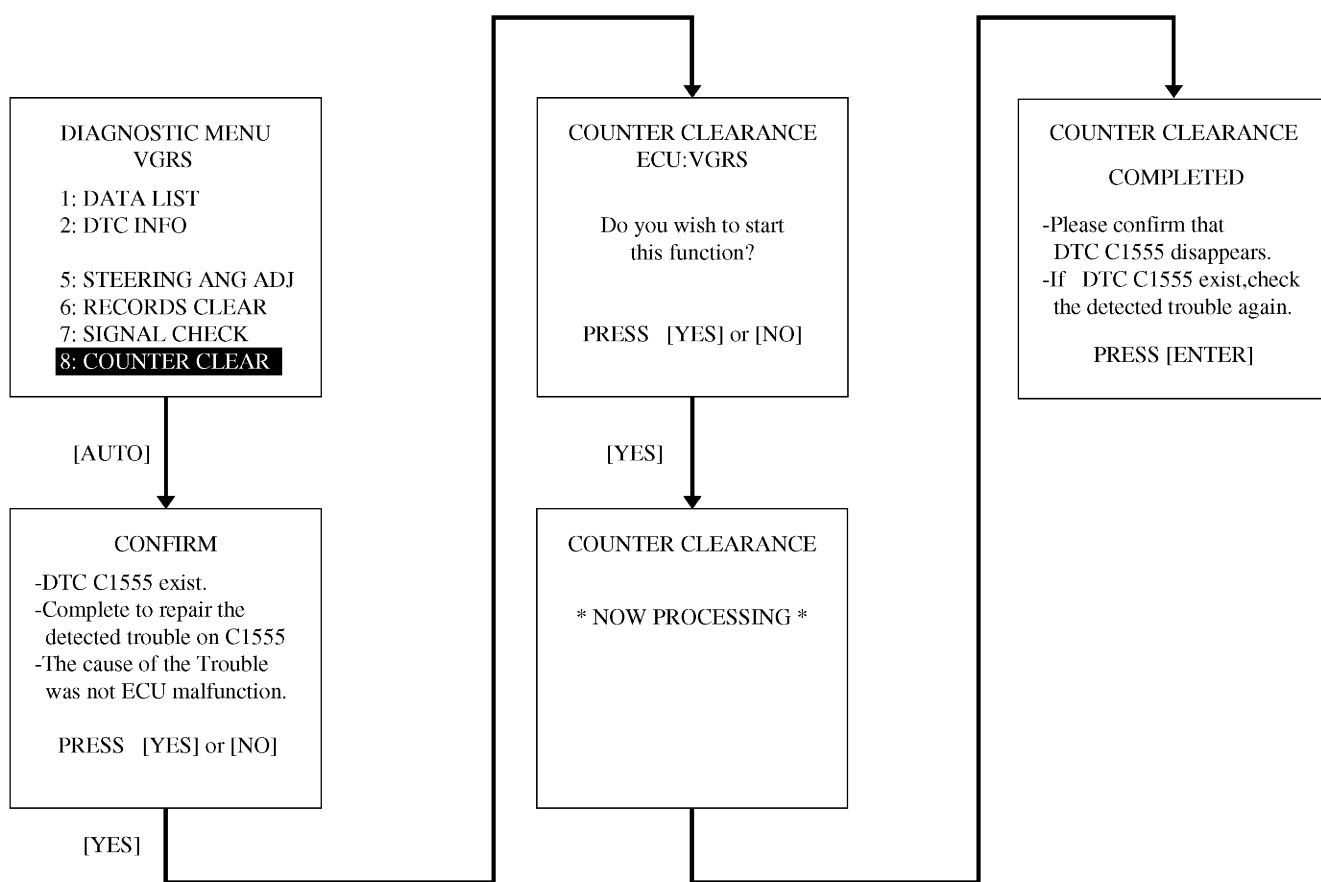

C

F17976