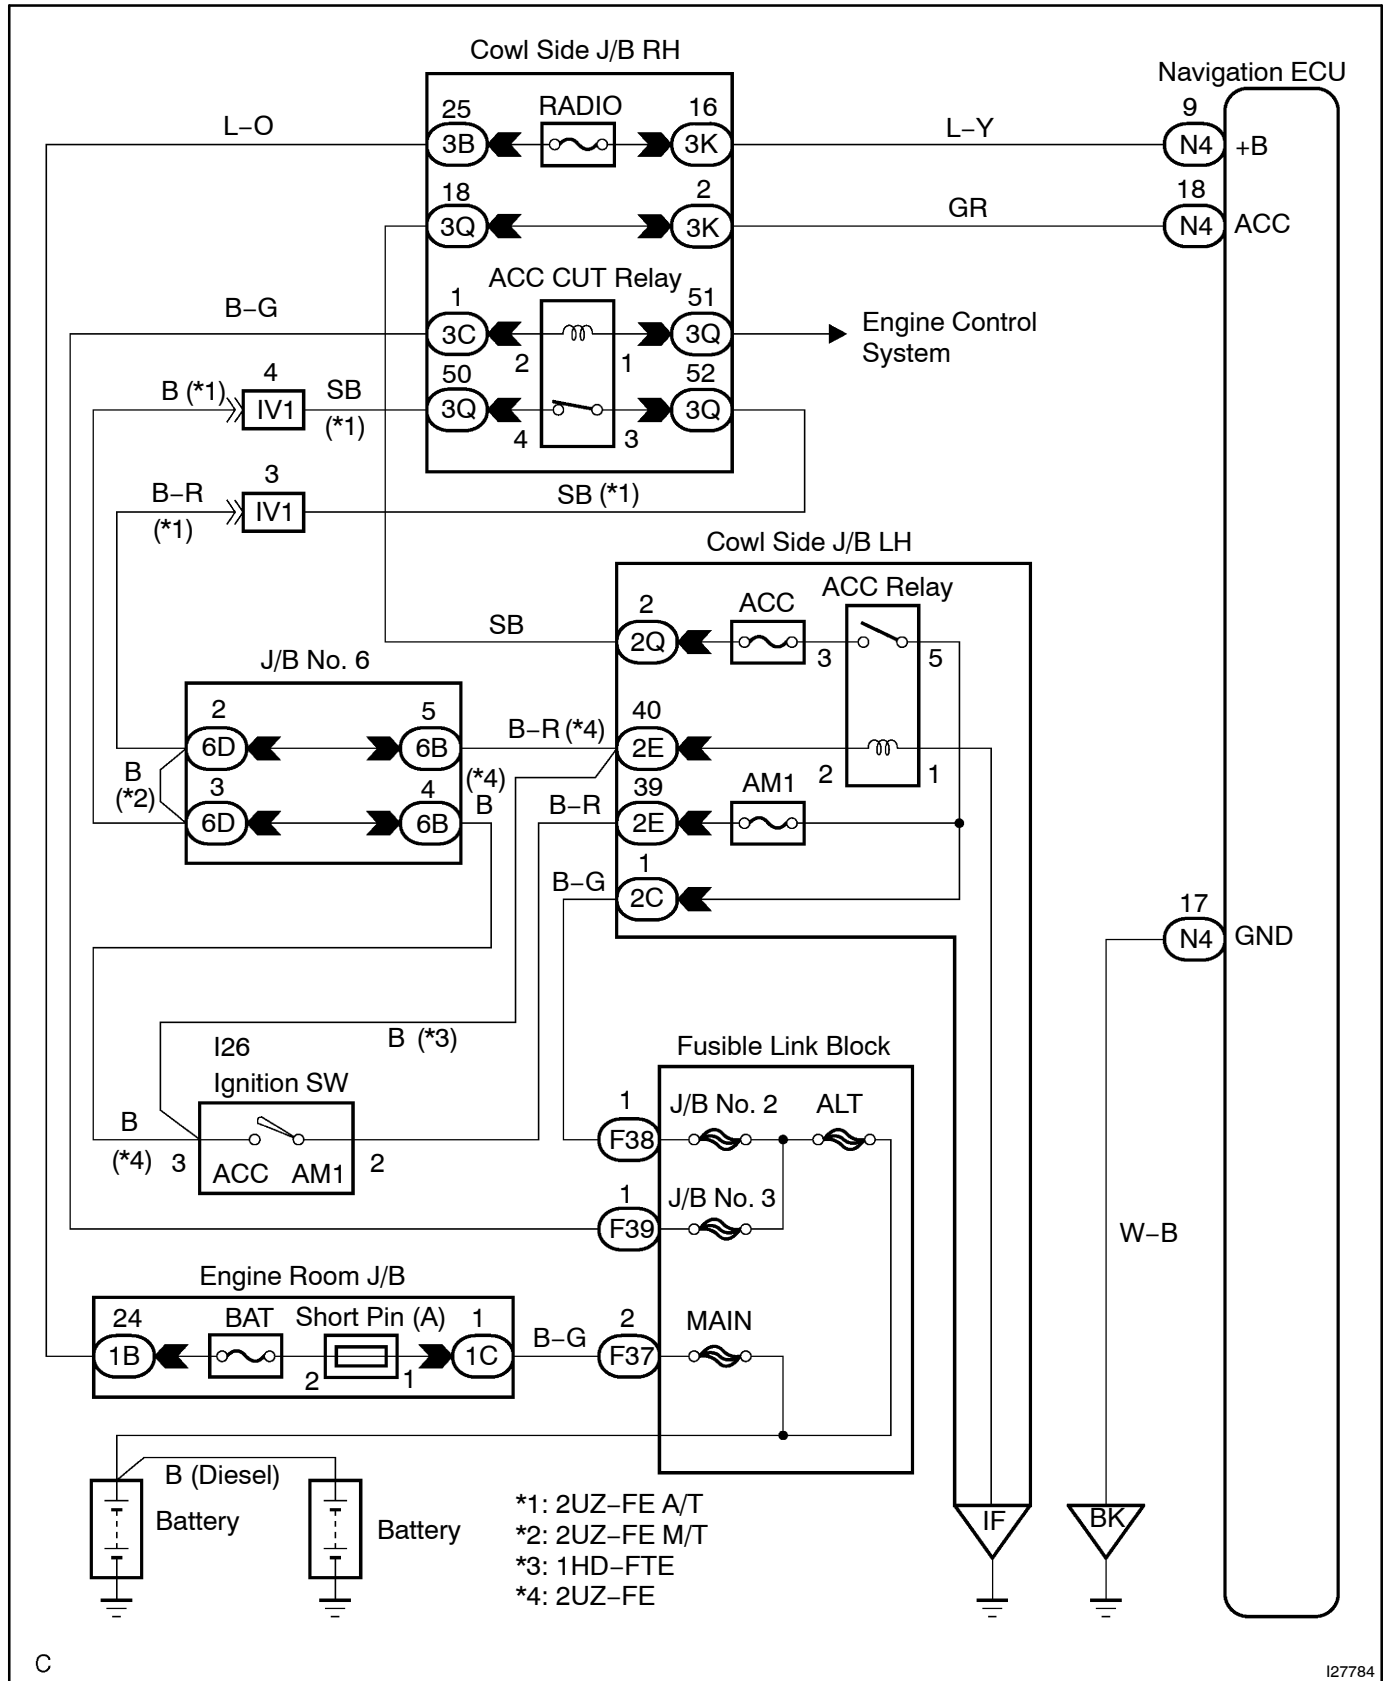


Power Source Circuit (Navigation ECU)

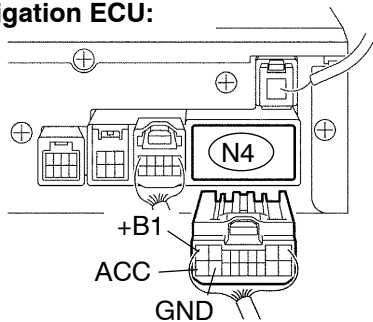
CIRCUIT DESCRIPTION

This circuit is the power source circuit to operate the navigation ECU.

WIRING DIAGRAM



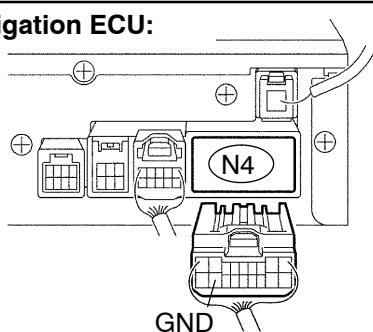
INSPECTION PROCEDURE

1 Check voltage between terminals +B1, ACC and GND of navigation ECU.**Navigation ECU:**

- (a) Disconnect the connector from the navigation ECU.
 (b) Measure the voltage according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
+B1 - GND	Always	10 to 14 V
ACC - GND	Ignition SW ACC	10 to 14 V

OK**Proceed to next circuit inspection shown in problem symptoms table. (See page DI-209)****NG****2 Check continuity between terminal GND of navigation ECU and body ground.****Navigation ECU:**

- (a) Disconnect the connector from the navigation ECU.
 (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
GND - Body ground	Always	Below 1 Ω

OK**Repair or replace harness or connector between navigation ECU and fuse.****NG****Repair or replace harness or connector between navigation ECU and body ground.**