

REMOVAL


1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, evacuate air from refrigeration system and charge the system with the refrigerant and inspect for leaks of the refrigerant.


Specified amount: 1,050 ± 50 g (37.03 ± 1.76 oz.)

2. DISCONNECT LIQUID AND SUCTION TUBES FROM FRONT COOLING UNIT (See page [AC-24](#))
3. REMOVE INSTRUMENT PANEL (See page [BO-84](#))

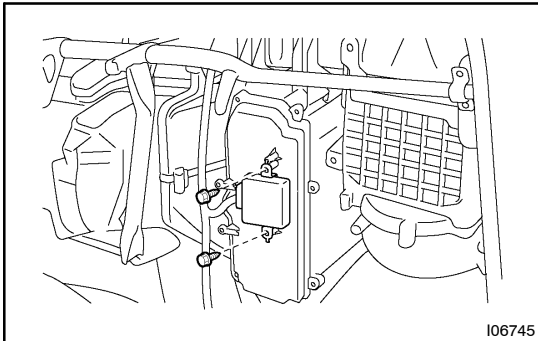

4. REMOVE ANTENNA RELAY

- (a) Disconnect the connector.
- (b) Remove the 2 screws and the antenna relay.

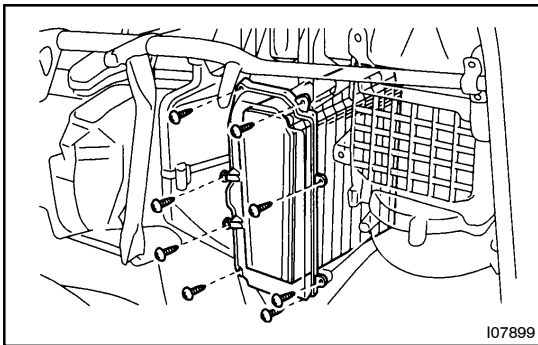

5. REMOVE EVAPORATOR

- (a) Disconnect the connector.
- (b) Disconnect the connector clamp.
- (c) Remove the 8 screws and the No .1 cooler cover.
- (d) Pull out the evaporator.