



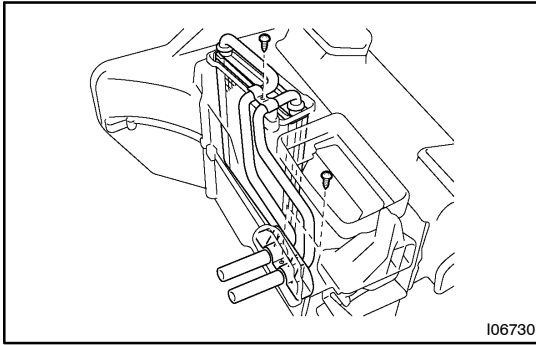

DISASSEMBLY


1. REMOVE HEATER RADIATOR

- Pry out the packing.
- Remove the screw and the bracket.
- Remove the screw and the clamp.
- Pull out the heater radiator.

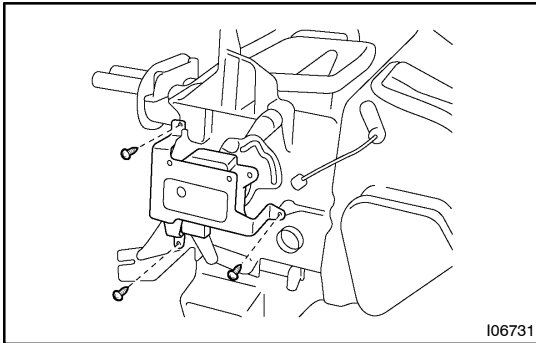


2. REMOVE AIR OUTLET SERVOMOTOR

Remove the 3 screws and the air outlet servomotor.

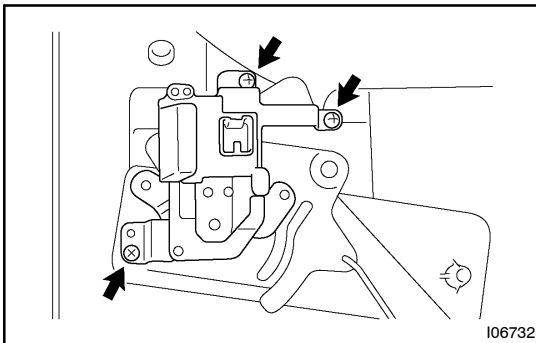


3. REMOVE AIR MIX SERVOMOTOR

- Disconnect the connector.
- Remove the 3 screws and the air mix servomotor.
- Release the claw and remove the wire harness.

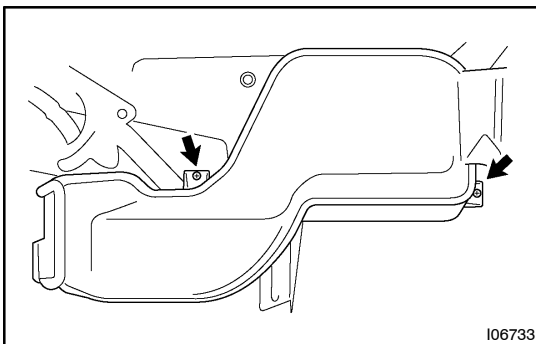

4. REMOVE AIR DUCT (Foot Duct)

Remove the 2 screws and air duct.

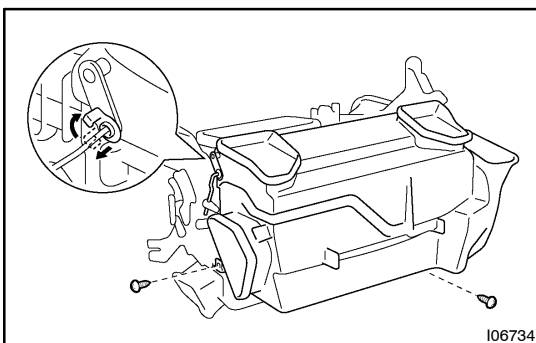

5. REMOVE AIR DUCT (Vent Duct)

- Disconnect the mode damper control link.
- Remove the 2 screws and the air duct.