


PRESSURE SWITCH ON-VEHICLE INSPECTION

AC30W-01


1. SET VEHICLE IN THESE CONDITION

- Engine speed at 1,500 rpm
- Blower speed control switch at "HI" position
- Temperature control dial at "MAX. COOL" position
- Manifold gauge set setting

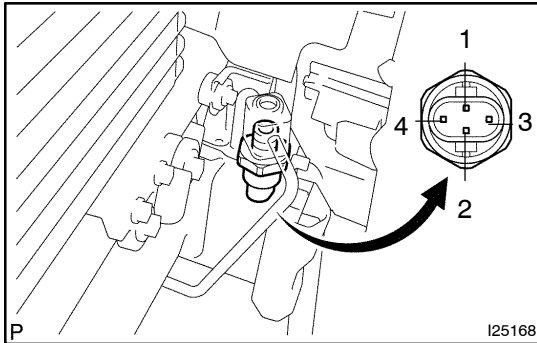

2. INSPECT PRESSURE SWITCH OPERATION

- Disconnect the connector.

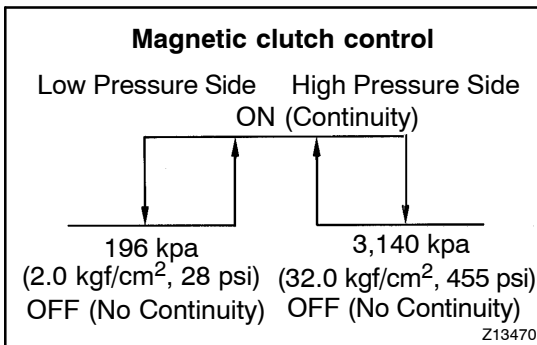

- Inspect pressure switch continuity (Magnetic Clutch Control)
 - Connect the positive (+) lead from the ohmmeter to terminal 1 and the negative (-) lead to terminal 2.
 - Check continuity between terminals when the refrigerant pressure is changed, as shown in the illustration.

If continuity is not as specified, replace the pressure switch.