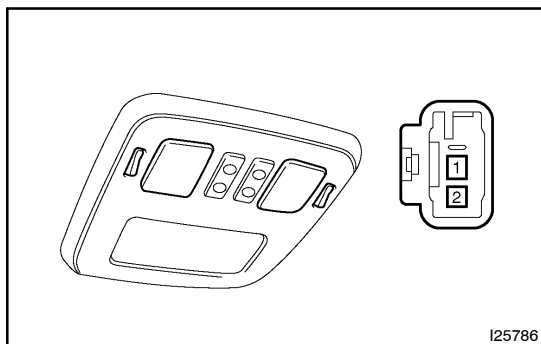




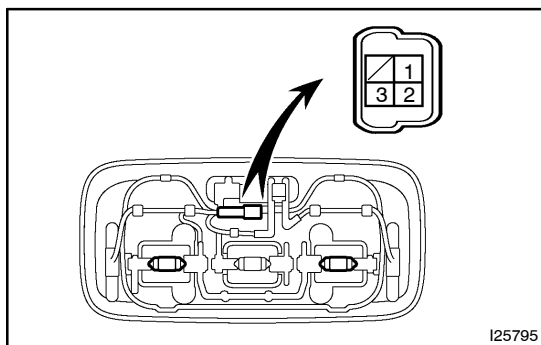
I25786

INSPECTION

1. INSPECT FRONT PERSONAL LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	1 – 2	Continuity

If continuity is not as specified, replace the light assembly or bulb.

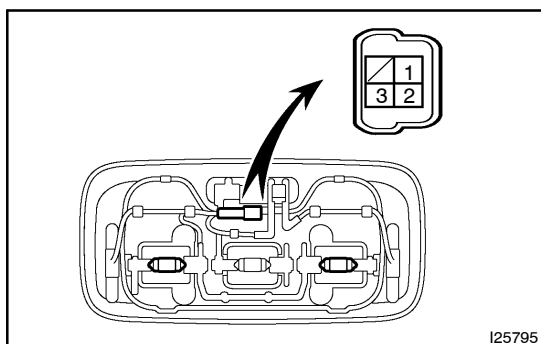


I25795

2. INSPECT REAR PERSONAL LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	1 – 3	Continuity

If continuity is not as specified, replace the light assembly or bulb.

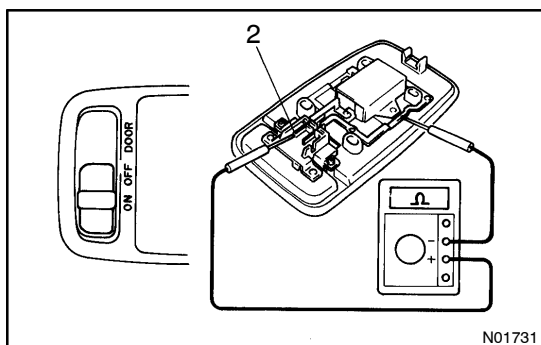


I25795

3. INSPECT ROOM LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Room Light Switch OFF	–	No continuity
Room Light Switch DOOR	2 – 3	Continuity
Room Light Switch ON	1 – 3	Continuity

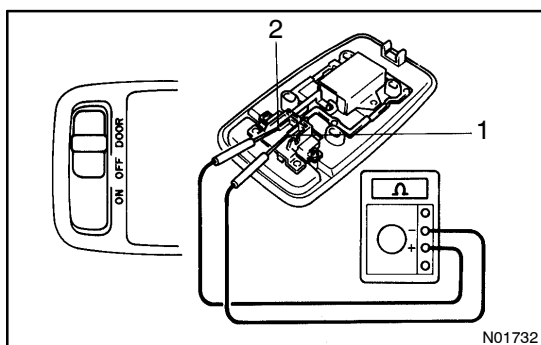
If continuity is not as specified, replace the light assembly or bulb.



N01731

4. INSPECT REAR ROOM LIGHT SWITCH CONTINUITY

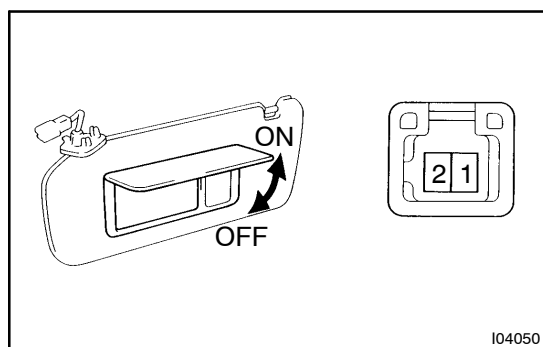
- Disconnect the connector from room light assembly.
- Turn the room light switch ON, check that continuity exists between terminal 2 and body ground.



N01732

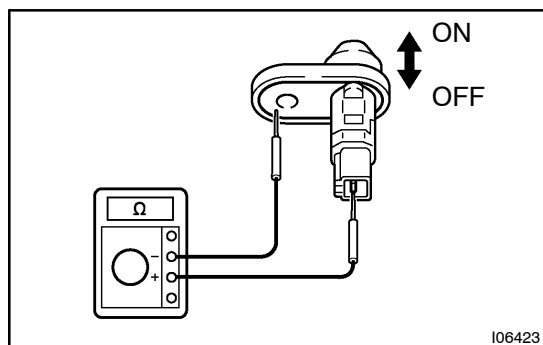
- Turn the room light switch DOOR, check that continuity exists between terminal 1 and 2.

If operation is not as specified, replace the light assembly or bulb.

**5. INSPECT VANITY LIGHT CONTINUITY**

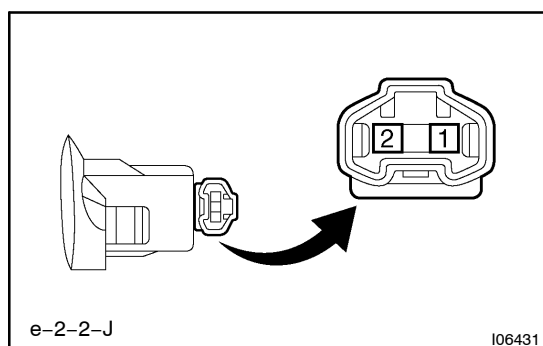
Switch position	Tester connection	Specified condition
OFF (closed)	–	No continuity
ON (opened)	1 – 2	Continuity

If continuity is not as specified, replace the vanity light assembly or bulb.

**6. INSPECT DOOR COURTESY SWITCH CONTINUITY**

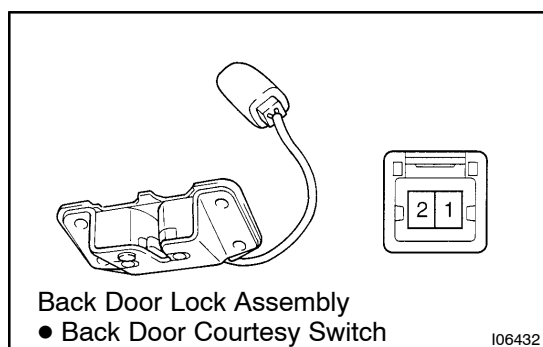
- Check that continuity exists between terminal and switch body with the switch ON (switch pin released).
- Check that no continuity exists between terminal and switch body with the switch OFF (switch pin pushed).

If continuity is not as specified, replace the switch.

**7. INSPECT DOOR COURTESY LIGHT CONTINUITY**

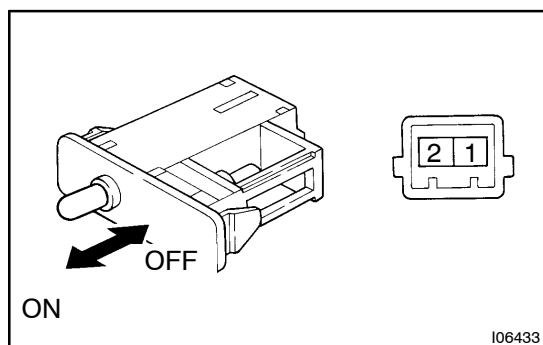
Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.

**8. INSPECT BACK DOOR COURTESY SWITCH CONTINUITY**

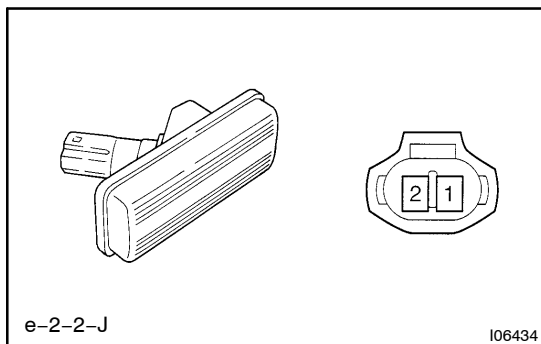
Switch position	Tester connection	Specified condition
OFF (closed)	–	No continuity
ON (opened)	1 – 2	Continuity

If continuity is not as specified, replace the back door lock assembly.

**9. INSPECT GLOVE COMPARTMENT DOOR COURTESY SWITCH CONTINUITY**

Switch position	Tester connection	Specified condition
OFF (closed)	–	No continuity
ON (opened)	1 – 2	Continuity

If continuity is not as specified, replace the switch.

**10. INSPECT LICENCE PLATE LIGHT CONTINUITY**

Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.