

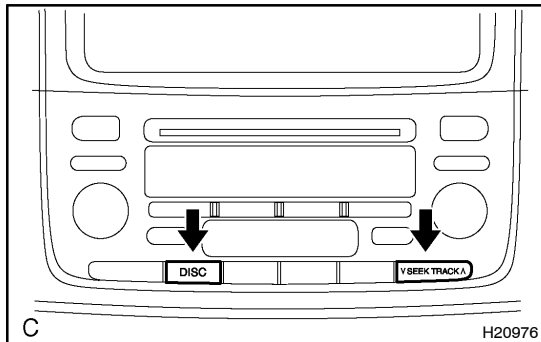
REMOVAL

1. w/ CD Changer Built In The Audio System: SHIP MODE SETTING

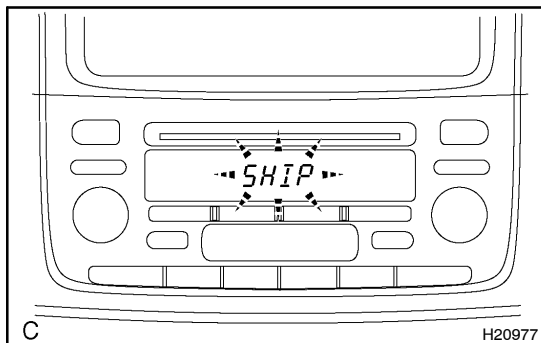
- (a) Take out all of the CDs.

NOTICE:

If they cannot be taken out, do not attempt to take out forcibly and send the unit for repair.



- (b) Turn the ignition switch to ACC as pressing the "SEEK UP" and "DISC" switches at the same time.



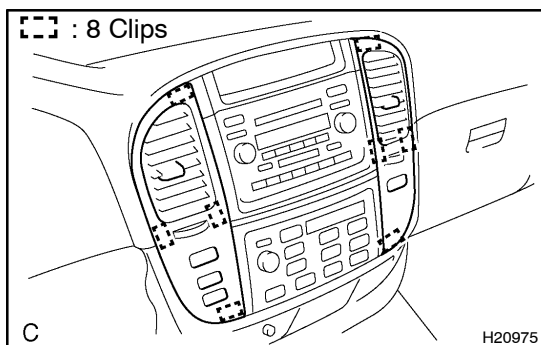
HINT:

When the ship mode has been set, "SHIP" must be displayed.

- (c) Turn the ignition switch to OFF and disconnect the battery negative cable.

NOTICE:

Connecting the battery negative cable automatically ends the ship mode.

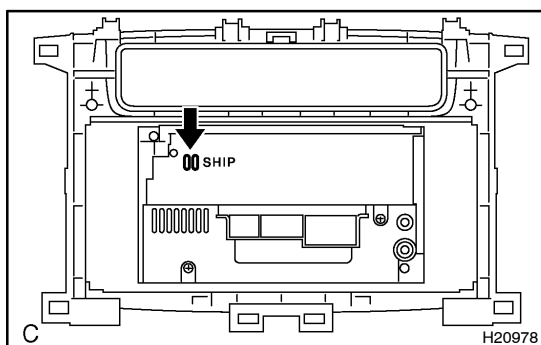


2. REMOVE CENTER REGISTER

- (a) Using a moulding remover, remove the center register.
(b) Disconnect the connector.
(c) Use the same manner described above to the other side.

3. REMOVE RADIO WITH A/C CONTROL ASSEMBLY

- (a) Remove the 4 bolts.
(b) Disconnect the radio with A/C control assembly cable and remove the radio with A/C control assembly.



4. w/ CD Changer Built In The Audio System: SHIP MODE CONFIRMATION

Check that a metal can be seen from holes marked "SHIP" on the back of the radio with A/C control assembly.

NOTICE:

If a metal cannot be seen from a hole on the back of the radio with A/C control assembly, repeat "SHIP MODE".

5. REMOVE FRONT DOOR SCUFF PLATES
6. REMOVE COWL SIDE TRIMS
7. REMOVE FRONT DOOR OPENING TRIMS

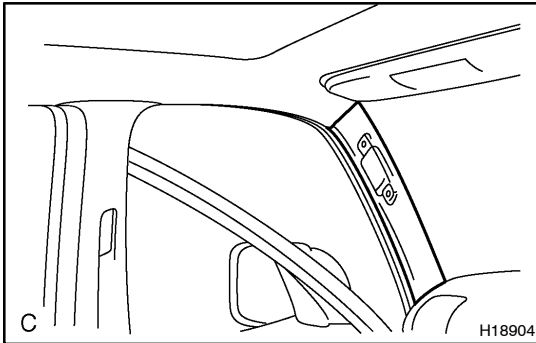
8. REMOVE FRONT ASSIST GRIP

- (a) Using a screwdriver, remove the assist grip plugs, then remove the 2 screws and assist grip.

HINT:

Tape up the screwdriver tip before use.

- (b) Use the same manner described above to the other side.

**9. REMOVE FRONT PILLAR GARNISH**

- (a) Using a screwdriver, remove the front pillar garnish.

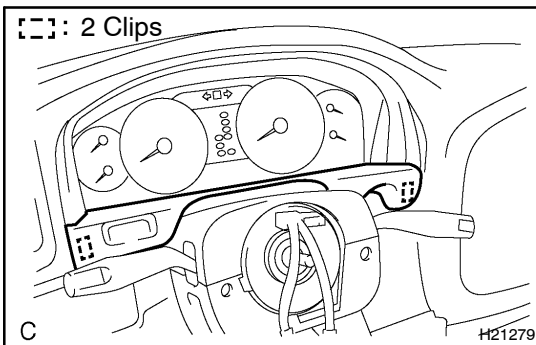
HINT:

Tape up the screwdriver tip before use.

- (b) Use the same manner described above to the other side.

10. REMOVE STEERING WHEEL

(See page [SR-14](#) or [SR-29](#))

**11. REMOVE CLUSTER FINISH PANEL**

Using a screwdriver, remove the cluster finish panel, then disconnect the connector.

HINT:

Tape up the screwdriver tip before use.

12. REMOVE HOOD LOCK CONTROL CABLE LEVER AND FUEL LID CONTROL CABLE LEVER

- (a) Remove the 2 screws and the hood lock control cable lever.
- (b) Remove the 2 screws and the fuel lid control cable lever.

13. REMOVE LOWER NO. 1 PANEL

- (a) Remove the screw.
- (b) Using a screwdriver, remove the lower No. 1 panel, then disconnect the connectors.

HINT:

Tape up the screwdriver tip before use.

14. REMOVE LH LOWER PANEL

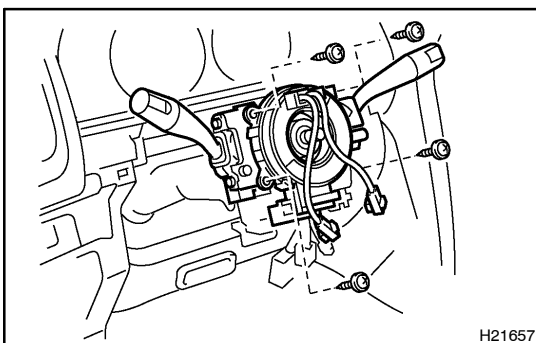
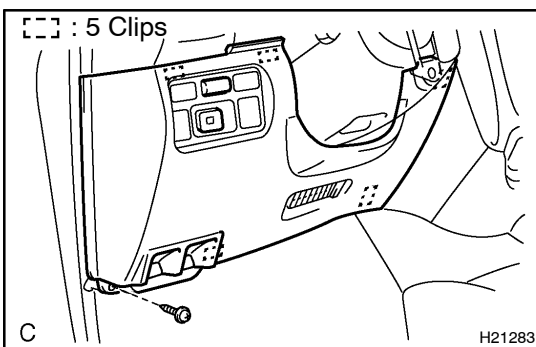
Remove the 3 bolts and the LH lower panel.

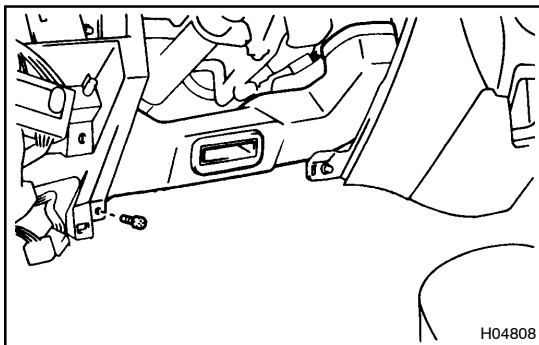
15. REMOVE COLUMN COVERS

Remove the 3 screws and the column covers.

16. REMOVE COMBINATION SWITCH

- (a) Disconnect the connectors.
- (b) Remove the clamp.
- (c) Remove the 4 screws and the combination switch.

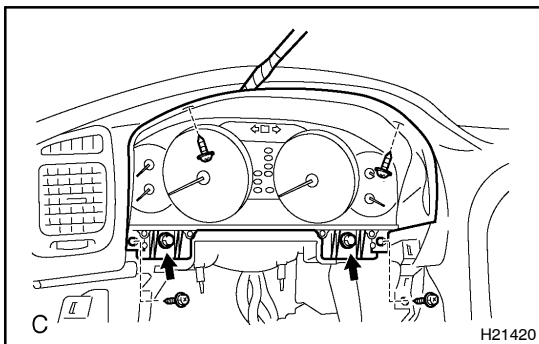


**17. REMOVE NO. 2 HEATER TO REGISTER DUCT**

Remove the screw and the No. 2 heater to register duct as shown in the illustration.

18. REMOVE STEERING COLUMN

(See page [SR-14](#) or [SR-29](#))

**19. REMOVE COMBINATION METER**

- (a) Disconnect the connectors.

HINT:

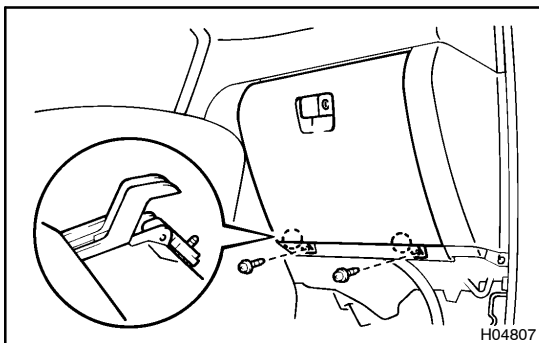
The connectors can be disconnected by loosening the bolts.

- (b) Remove the 4 screws.

- (c) Using a screwdriver, remove the combination meter.

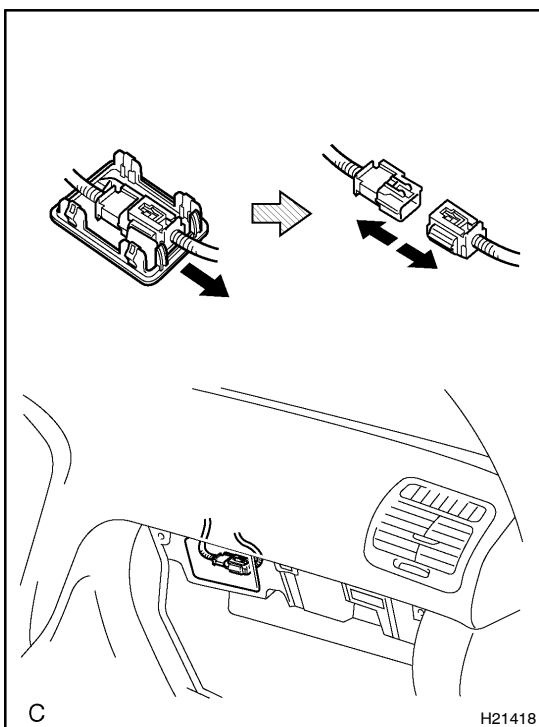
HINT:

Tape up the screwdriver tip before use.

**20. REMOVE GLOVE COMPARTMENT DOOR**

- (a) Remove the 2 screws.

- (b) Remove the glove compartment door, then disconnect the glove compartment door damper clip.

**21. DISCONNECT AIRBAG CONNECTOR**

(See page [RS-31](#))

- (a) Using a screwdriver, remove the No. 1 under cover.

HINT:

Tape up the screwdriver tip before use.

- (b) Slide the airbag connector to pull out from the No. 1 under cover.

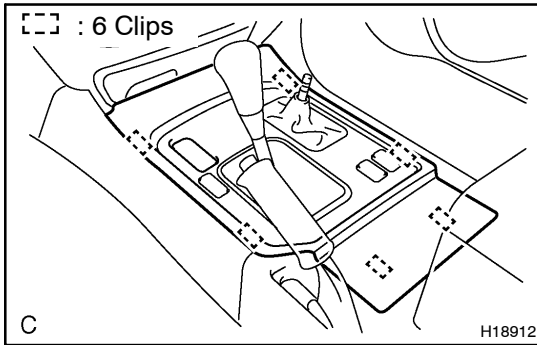
- (c) Disconnect the airbag connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

22. REMOVE LOWER NO. 2 PANEL

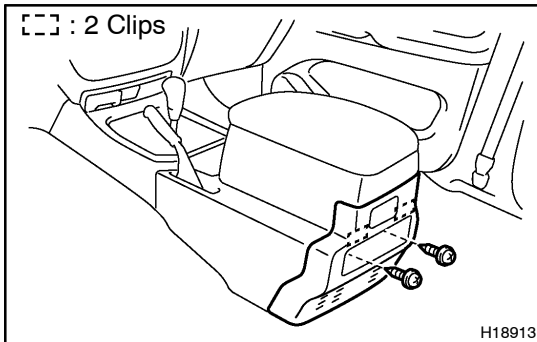
Remove the 3 screws and the lower No. 2 panel.

**23. REMOVE FRONT CONSOLE PANEL**

- (a) Remove the transfer shift lever knob.
- (b) Using a screwdriver, remove the front console panel.

HINT:

Tape up the screwdriver tip before use.

**24. REMOVE CONSOLE REAR END PANEL**

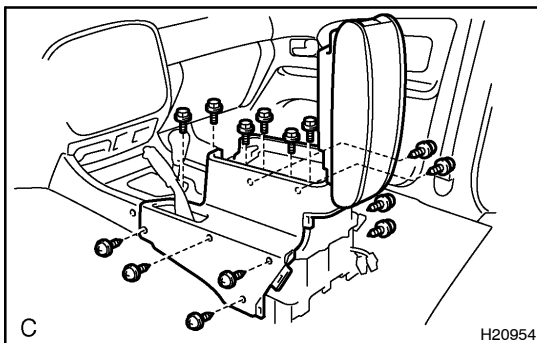
- (a) Remove the rear console cup holder box.
- (b) Remove the 2 screws.
- (c) Using a screwdriver, remove the console rear end panel.

HINT:

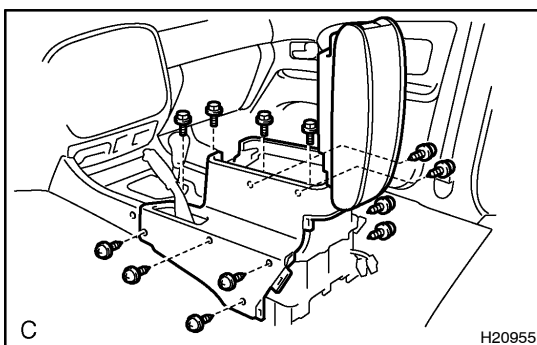
Tape up the screwdriver tip before use.

25. REMOVE REAR RADIO CONTROL PANEL

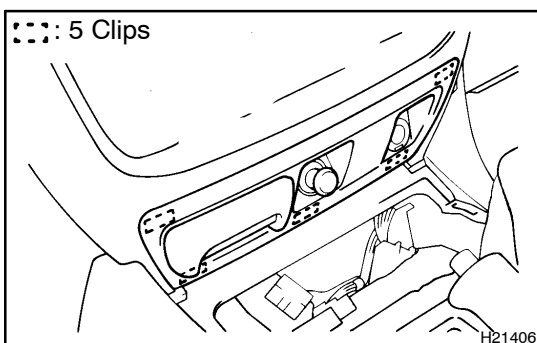
Disconnect the connector, then remove the 3 screws and the rear radio control panel.

**26. REMOVE REAR CONSOLE BOX**

- (a) w/o Disc player changer :
Remove the 6 bolts, the 8 screws and the rear console box.



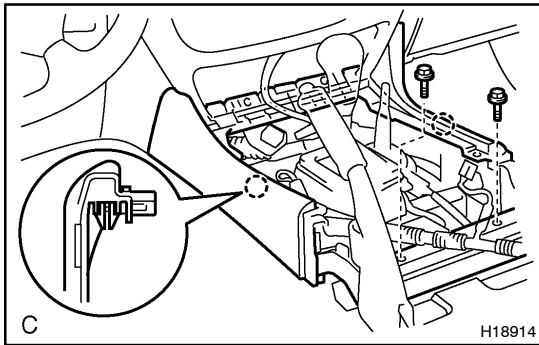
- (b) w/ Disc player changer :
Remove the 4 bolts, the 8 screws and the rear console box.

**27. REMOVE CENTER LOWER CLUSTER FINISH PANEL**

Using a screwdriver, remove the center lower cluster finish panel, then disconnect the connector.

HINT:

Tape up the screwdriver tip before use.



28. REMOVE FRONT CONSOLE BOX AND FRONT CONSOLE BOX BRACKET

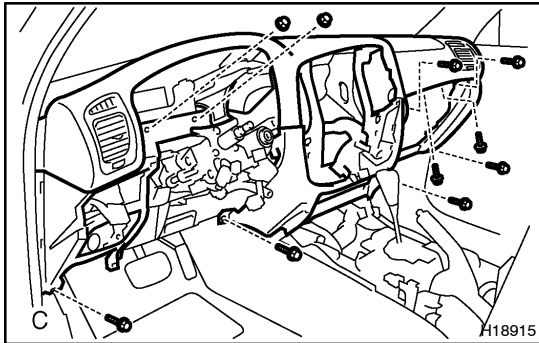
Remove the 2 bolts, the front console box and the front console box bracket.

29. REMOVE INSTRUMENT PANEL

(a) Disconnect the junction connectors.

HINT:

The connectors can be disconnected by loosening the bolts.



(b) Disconnect the connector, then remove the 8 bolts, the 2 nuts and the instrument panel.

30. REMOVE ECM (See page [SF-60](#))

31. REMOVE NO. 3 HEATER TO REGISTER DUCT

32. REMOVE NO. 4 HEATER TO REGISTER DUCT

33. REMOVE GLOVE COMPARTMENT DOOR DAMPER

34. REMOVE FLOOR BRACE

35. REMOVE NO. 1 BRACE

36. REMOVE REINFORCEMENT