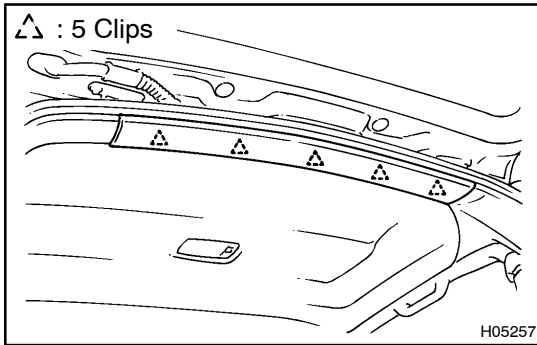




REMOVAL

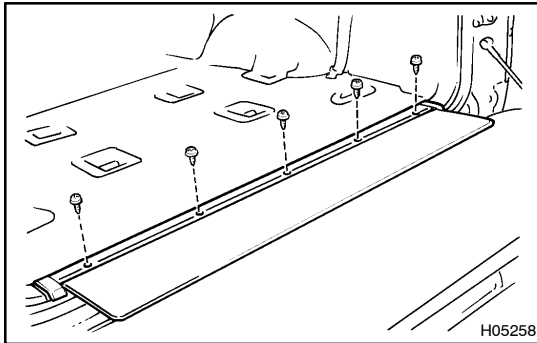
1. REMOVE ROOF HEADLINING REAR TRIM

Using a screwdriver, remove the roof headlining rear trim.

HINT:

Tape up the screwdriver tip before use.

2. REMOVE REAR NO. 2 SEATS



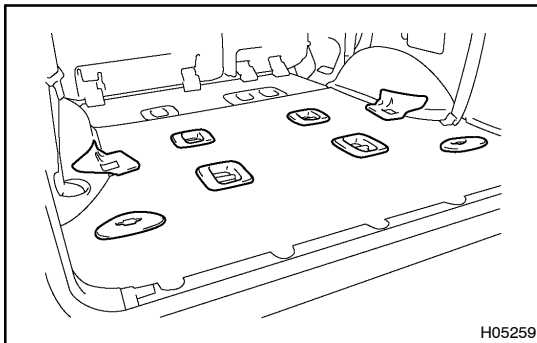
3. REMOVE REAR MAT SET PLATE

(a) Remove the 5 screws.

(b) Using a screwdriver, remove the rear mat set plate.

HINT:

Tape up the screwdriver tip before use.



4. REMOVE STRIKER PLATES

(a) Remove the 6 screws.

(b) Using a screwdriver, remove the striker plates.

HINT:

Tape up the screwdriver tip before use.

5. REMOVE REAR MAT

6. REMOVE REAR NO. 2 SEAT OUTER BELT FLOOR ANCHOR

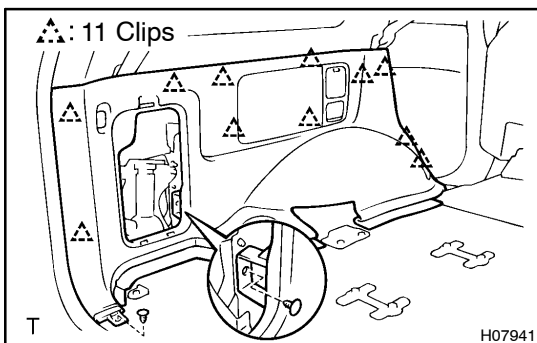
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

7. REMOVE REAR NO. 1 SEAT OUTER BELT FLOOR ANCHOR

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

8. REMOVE REAR DOOR SCUFF PLATES

9. REMOVE REAR DOOR OPENING TRIMS

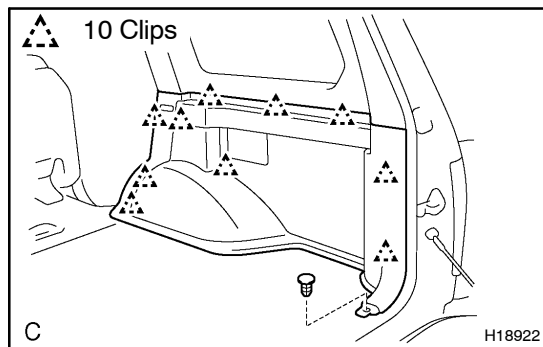


10. REMOVE QUARTER TRIM PANEL LH

(a) Remove the quarter trim jack cover.

(b) Using a clip remover, remove the 2 clips.

(c) Remove the quarter trim panel LH, then disconnect the connector.

**11. REMOVE QUARTER TRIM PANEL RH**

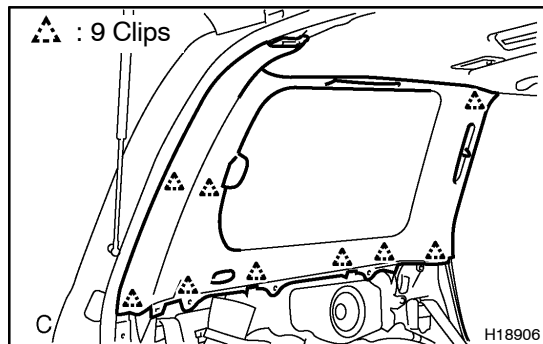
- (a) Using a clip remover, remove the clip.
- (b) Remove the quarter trim panel RH.

12. REMOVE REAR NO. 2 SEAT OUTER BELT SHOULDER ANCHORS

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

13. REMOVE REAR NO. 1 SEAT OUTER BELT SHOULDER ANCHORS

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

**14. REMOVE UPPER ROOF SIDE INNER GARNISHES**

- (a) Using a screwdriver, remove the 2 assist grip plugs, then remove the 2 screws and the assist grip.

HINT:

Tape up the screwdriver tip before use.

- (b) Using a clip remover, remove the clip.
- (c) Using a screwdriver, remove the upper roof side inner garnish.

HINT:

Tape up the screwdriver tip before use.

- (d) Use the same manner described above to the other side.

15. REMOVE FRONT DOOR SCUFF PLATES**16. REMOVE COWL SIDE TRIMS****17. REMOVE FRONT DOOR OPENING TRIMS****18. REMOVE FRONT ASSIST GRIP**

- (a) Using a screwdriver, remove the 2 assist grip plugs, then remove the 2 screws and front assist grip.

HINT:

Tape up the screwdriver tip before use.

- (b) Use the same manner described above to the other side.

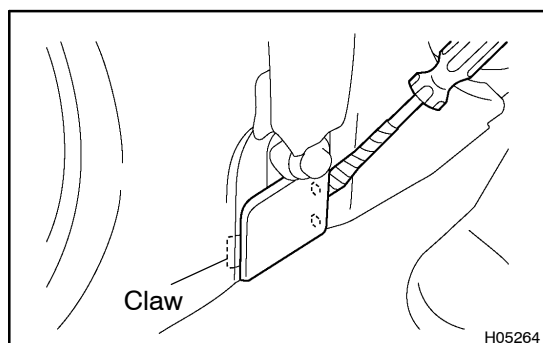
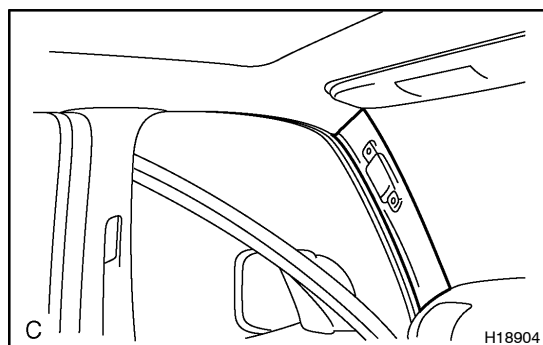
19. REMOVE FRONT PILLAR GARNISH

- (a) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape up the screwdriver tip before use.

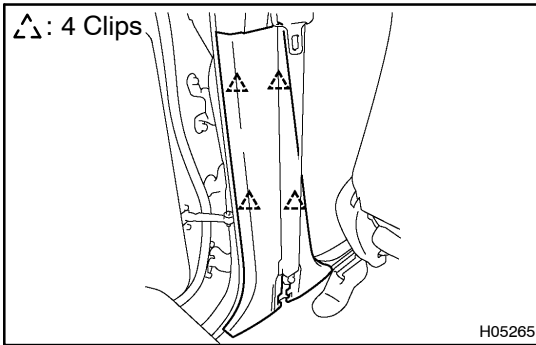
- (b) Use the same manner described above to the other side.

**20. REMOVE CENTER PILLAR LOWER GARNISH**

- (a) Using a screwdriver, remove the center pillar garnish cover.

HINT:

Tape up the screwdriver tip before use.

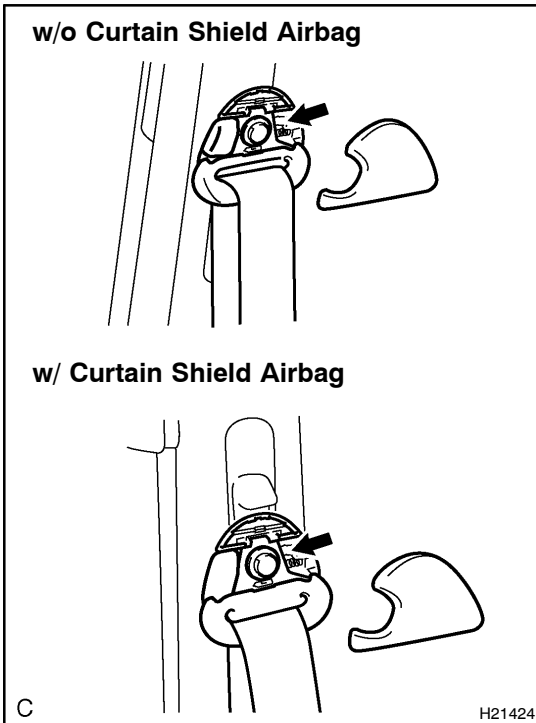


- (b) Using a screwdriver, remove the center pillar lower garnish as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

- (c) Use the same manner described above to the other side.



21. REMOVE CENTER PILLAR GARNISH

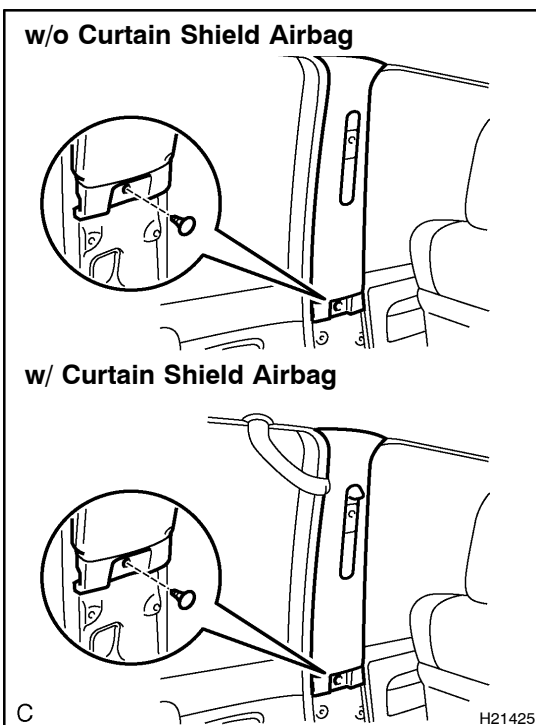
- (a) Using a screwdriver, remove the seat belt anchor cover cap.

HINT:

Tape up the screwdriver tip before use.

- (b) Remove the bolt and the front seat outer belt shoulder anchor.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)



- (c) Using a clip remover, remove the clip.

- (d) Using a screwdriver, remove the center pillar garnish.

HINT:

Tape up the screwdriver tip before use.

- (e) Use the same manner described above to the other side.

22. REMOVE SUN VISOR

- (a) Using a screwdriver, remove the caps.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the screws, then disconnect the connectors.

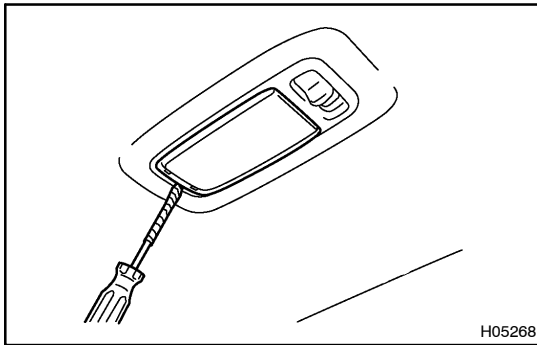
- (c) Remove the sun visors.

23. REMOVE DOUBLE VISOR

Remove the screws and the double visors.

24. REMOVE HOLDER

Remove the screws and the holders.

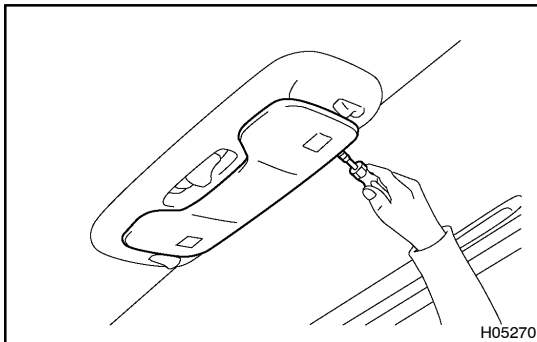
**25. REMOVE DOME LIGHT**

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

- (b) Remove the 4 screws and the dome light, then disconnect the connector.

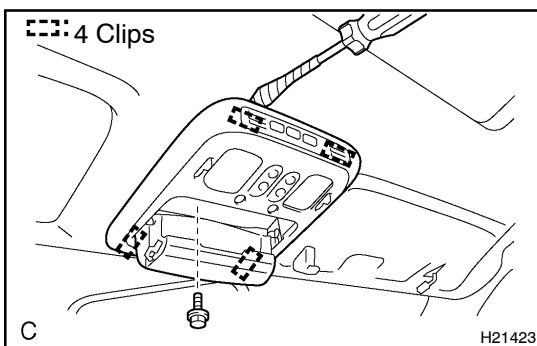
**26. REMOVE MAP LAMP**

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

- (b) Remove the 4 screws and the map lamp, then disconnect the connector.

**27. REMOVE OVERHEAD CONSOLE BOX**

- (a) Remove the bolt.
- (b) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:

Tape up the screwdriver tip before use.

28. REMOVE REAR A/C CONTROL PANEL

Using a screwdriver, release the 4 claws and pull out the rear A/C control panel, then disconnect the connector.

HINT:

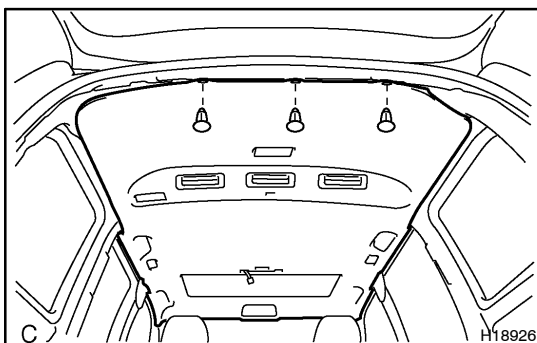
Tape up the screwdriver tip before use.

29. REMOVE ROOM TEMPERATURE SENSOR

Using a screwdriver, pull out the room temperature sensor, then disconnect the connector.

HINT:

Tape up the screwdriver tip before use.

30. REMOVE ASSIST GRIPS**31. w/o Curtain Shield Airbag:****REMOVE CENTER ASSIST GRIPS****32. REMOVE ROOF HEADLINING**

Using a clip remover, remove the 3 clips and the roof headlining.

33. REMOVE REAR A/C REGISTER**34. w/ Curtain Shield Airbag:****REMOVE ADJUSTABLE ANCHOR**

Remove the 2 bolts and the adjustable anchor.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

35. w/ Curtain Shield Airbag:**REMOVE CENTER ASSIST GRIPS**