


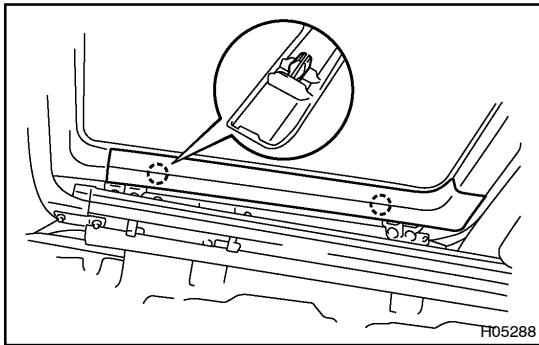


## ADJUSTMENT

### 1. REMOVE SIDE GARNISH

Before making adjustment, using a screwdriver, remove the side garnishes.


#### HINT:

- Tape the screwdriver tip before use.
- After adjustment, reinstall the side garnishes.

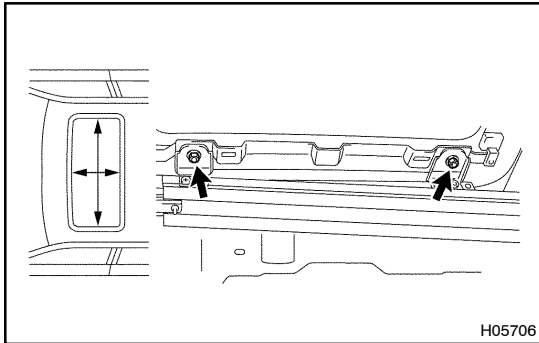


### 2. ADJUST SLIDING ROOF GLASS IN FORWARD/REARWARD AND LEFT/RIGHT DIRECTIONS

- Loosen the sliding roof glass installation nuts.
- Adjust the sliding roof glass forward/rearward or left/right.

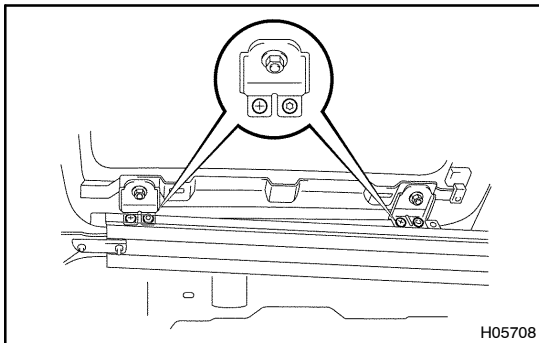

### 3. ADJUST SLIDING ROOF GLASS IN UPWARD OR DOWNWARD DIRECTIONS

- Loosen the screws shown in the illustration.
- Adjust the sliding roof glass upward or downward.

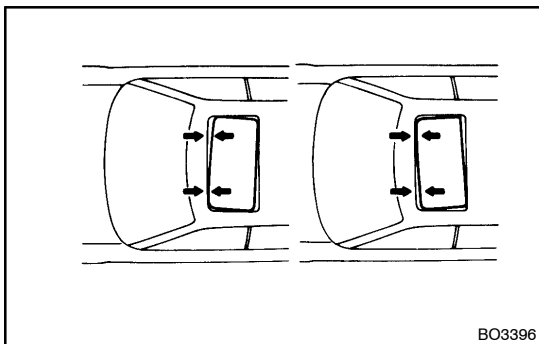


### 4. ADJUST SLIDING ROOF GLASS IN CLEARANCE (Difference in left and right clearance)

- When the front or rear alignment is not correct, remove the drive gear and sliding roof glass, then adjust the drive cables.

#### NOTICE:

**Remove the drive gear with the sliding roof fully closed.**

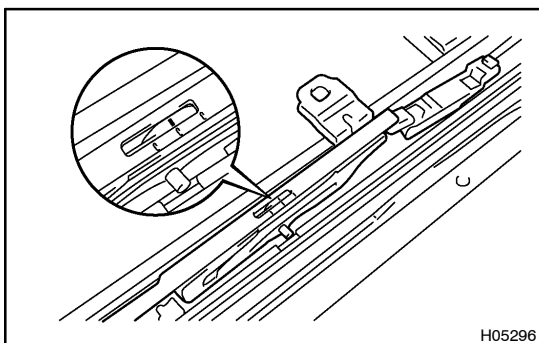

- Adjust by sliding the cables forward or rearward to align the 2 marks as shown.
- Install the drive gear and sliding roof glass.