


Parking brake switch circuit

WIRING DIAGRAM

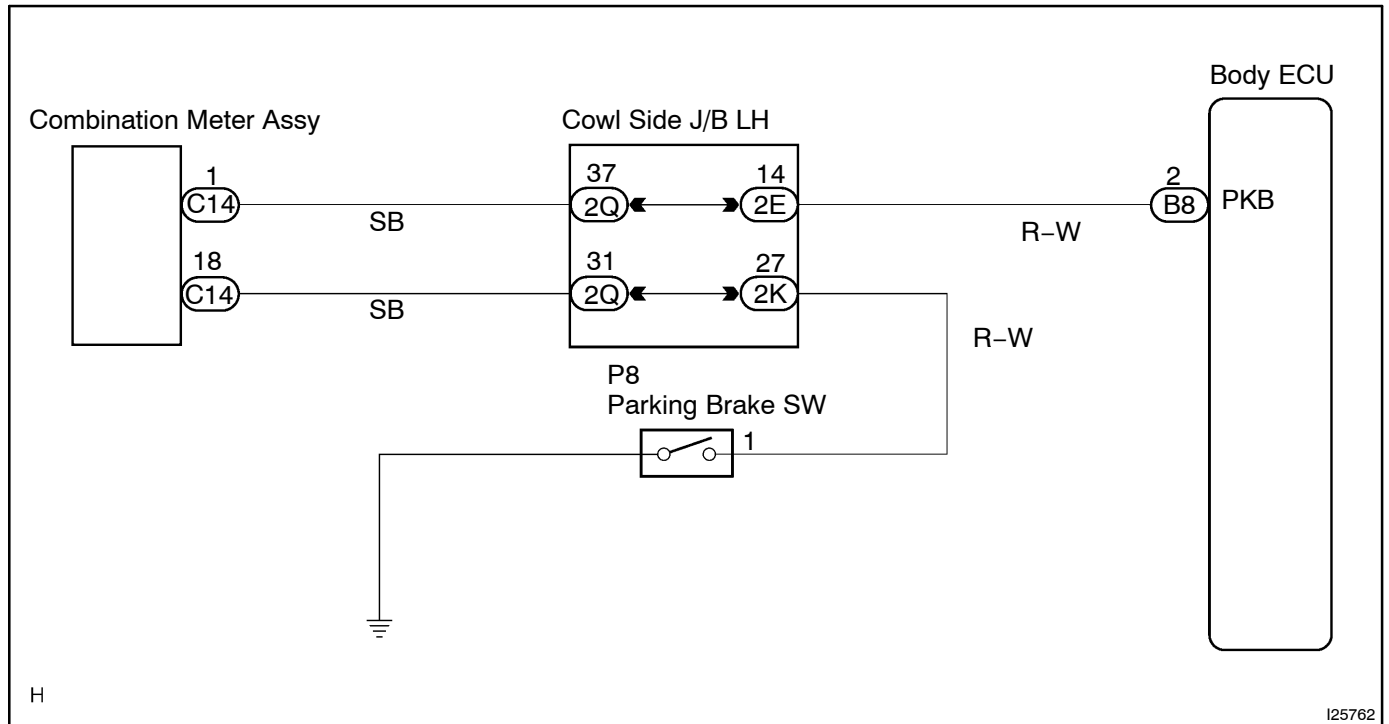

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check parking brake switch using hand-held tester.
---	--

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the parking brake switch operate in DATA LIST (See page [DI-1040](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1051](#)).

NG

2**Check parking brake switch.****NG****Replace the parking brake switch.****OK****3****Check wire harness and connector between parking brake switch and Body ECU(See page [IN-36](#)).****OK****Repair or replace wire harness or connector.****OK****Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-1051](#)).**