


Power source circuit

CIRCUIT DESCRIPTION

This circuit supplies power to operate the power window master switch.

WIRING DIAGRAM

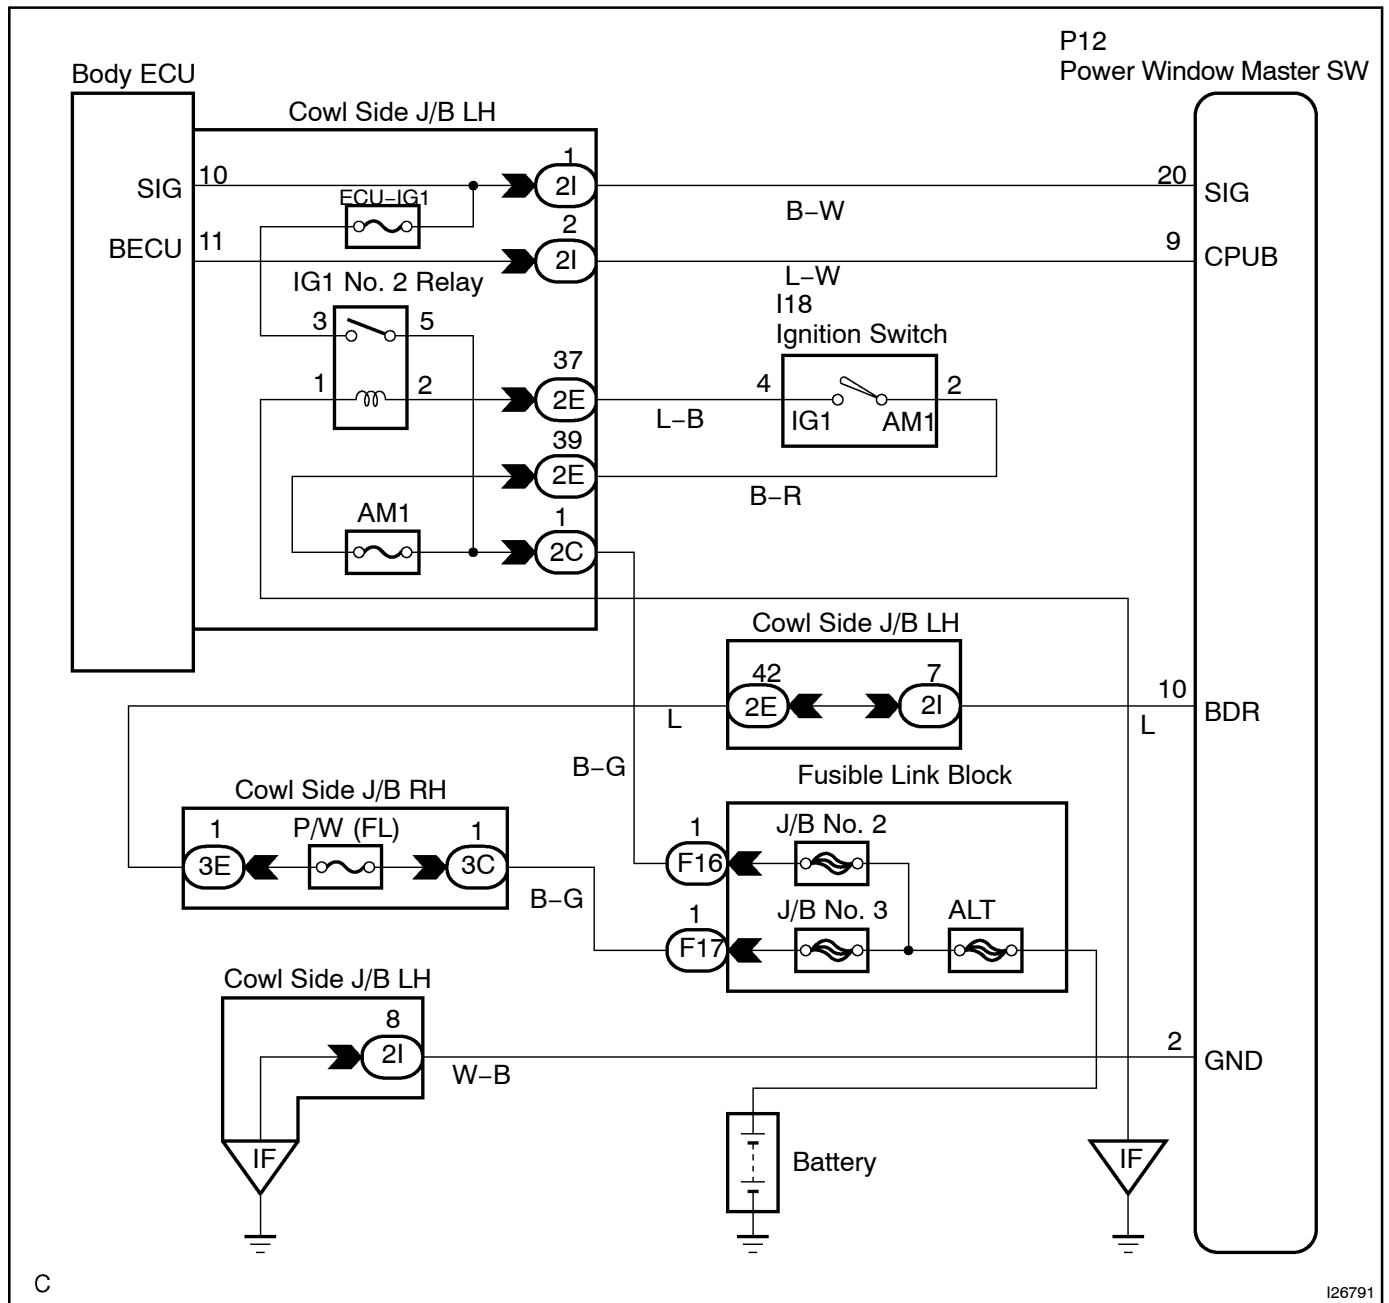

C

I26791

INSPECTION PROCEDURE

1	Check ECU-IG1 and AM1 fuse.
---	------------------------------------

CHECK:

Check continuity of ECU-IG1 and AM1 fuse.

OK:

Continuity

NG

Replace faulty fuse.

OK

2	Check voltage between terminals CPUB, SIG, BDR and GND of power window master switch connector.
---	--

PREPARATION:

Turn the ignition switch OFF.

CHECK:

Measure the voltage between terminals CPUB, SIG, BDR and GND.

OK:

Voltage: 10 - 14V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1097).

NG

3	Check wire harness and connector between power window master switch and body ground (See page IN-36).
---	--

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1097).
