

15. Touch switch does not function. (Navigation screen only)**INSPECTION PROCEDURE**

- | | |
|----------|--|
| 1 | Display check mode (Touch switch, Touch point screen) |
|----------|--|

NG**Replace the multi-display.****OK**

- | | |
|----------|--|
| 2 | Check "AVC-LAN communication circuit". (See page DI-1263) |
|----------|--|

NG**Replace or repair AVC-LAN circuit.****OK****Replace the navigation ECU.**