

16. Touch switch does not function. (A/C control screen only)**INSPECTION PROCEDURE**

- | | |
|---|---|
| 1 | Display check mode (Touch switch, Touch point screen) |
|---|---|

NG**Replace the multi-display.****OK**

- | | |
|---|--|
| 2 | Check "AVC-LAN communication circuit". (See page DI-1263) |
|---|--|

NG**Replace or repair AVC-LAN circuit.****OK**

- | | |
|---|---|
| 3 | Check wire harness between gateway ECU and A/C amplifier (Center ECU) (See page IN-36) |
|---|---|

NG**Reapair or replace wire harness and connector.****OK****Check and replace A/C amplifier (Center ECU).**