

17. Panel switch does not function. (Navigation screen only)

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Display check mode (Panel switch check screen) |
|---|--|

NG

Replace the multi display.

OK

- | | |
|---|--|
| 2 | Check "AVC-LAN communication circuit". (See page DI-1263) |
|---|--|

NG

Replace or repair AVC-LAN circuit.

OK

Replace the navigation ECU.