

3. No navigation screen displayed when "MAP", "Menu", or "DEST" switch pressed. (Screen cannot be switched.)

INSPECTION PROCEDURE

1 Service check mode (Check the navigation ECU)

NG

Troubleshoot for each diagnosis.

OK

Replace multi-display.

Ncon

2 Check the navigation ECU power source circuit (see page [DI-1244](#)).

NG

Replace or repair wire harness or connector.

OK

3 Check multi-display power source circuit (see page [DI-1247](#)).

NG

Replace or repair wire harness or connector.

OK

4 Check the display signal circuit (see page [DI-1258](#)).

NG

Replace or repair wire harness or connector.

OK

Replace multi display.