


TERMINALS OF ECU

1. w/o Side Airbag:

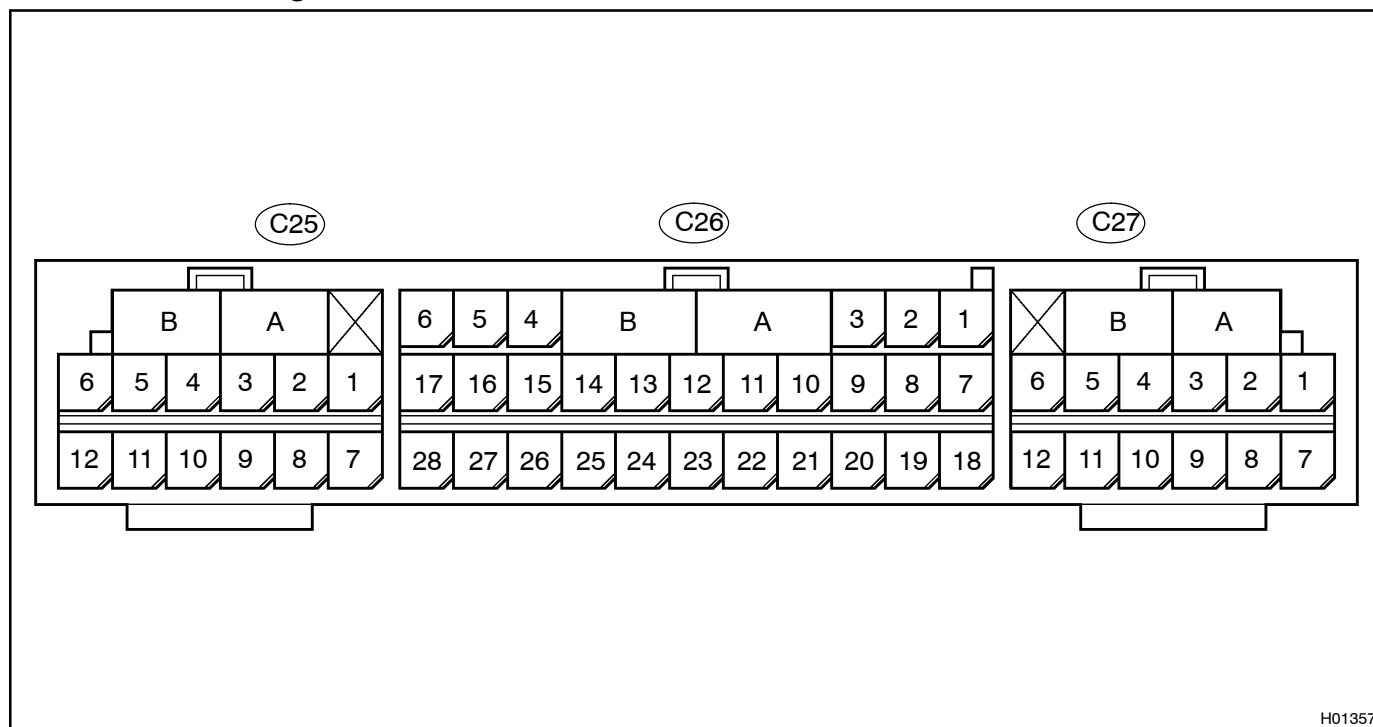


H01357

No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
C26 – 3	LA	SRS Warning Light
C26 – 5	IG2	Power Source
C26 – 7	P2–	Squib (Passenger, 2nd step)
C26 – 8	P2+	Squib (Passenger, 2nd step)
C26 – 9	+SR	Front Airbag Sensor RH
C26 – 10	P+	Squib (Passenger)
C26 – 11	P–	Squib (Passenger)
C26 – 12	SIL	Diagnosis
C26 – 13	D–	Squib (Driver)
C26 – 14	D+	Squib (Driver)
C26 – 15	+SL	Front Airbag Sensor LH
C26 – 16	D2+	Squib (Driver, 2nd step)
C26 – 17	D2–	Squib (Driver, 2nd step)
C26 – 19	TC	Diagnosis
C26 – 20	–SR	Front Airbag Sensor RH
C26 – 23	GSW2	Engine ECU
C26 – 26	–SL	Front Airbag Sensor LH
C26 – 27	E1	Ground
C26 – 28	E2	Ground
C25 – 1	PL–	Squib (Seat Belt Pretensioner, LH)
C25 – 2	PL+	Squib (Seat Belt Pretensioner, LH)
C25 – 3	LSP+	Seat Position Sensor Assembly

DIAGNOSTICS - SUPPLEMENTAL RESTRAINT SYSTEM

No.	Symbol	Terminal Name
C25 - 8	LSP-	Seat Position Sensor Assembly
C25 - 11	LBE+	Seat Belt Buckle Switch LH
C27 - 5	PR+	Squib (Seat Belt Pretensioner, RH)
C27 - 6	PR-	Squib (Seat Belt Pretensioner, RH)

2. w/ Side Airbag:

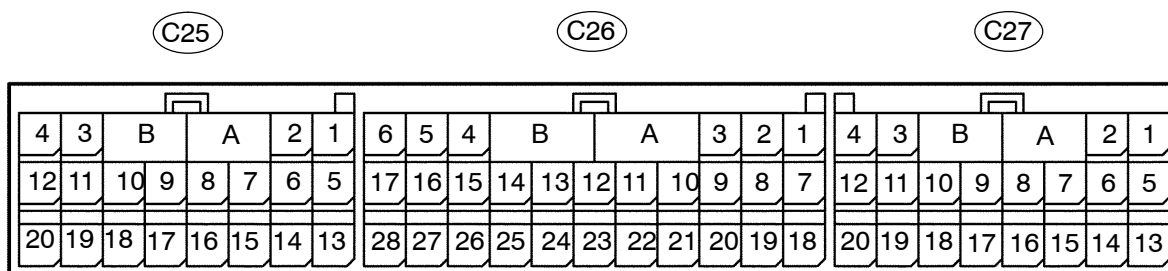

P

H16828

No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
C26 – 3	LA	SRS Warning Light
C26 – 5	IG2	Power Source
C26 – 7	P2–	Squib (Passenger, 2nd step)
C26 – 8	P2+	Squib (Passenger, 2nd step)
C26 – 9	+SR	Front Airbag Sensor RH
C26 – 10	P+	Squib (Passenger)
C26 – 11	P–	Squib (Passenger)
C26 – 12	SIL	Diagnosis
C26 – 13	D–	Squib (Driver)
C26 – 14	D+	Squib (Driver)
C26 – 15	+SL	Front Airbag Sensor LH
C26 – 16	D2+	Squib (Driver, 2nd step)
C26 – 17	D2–	Squib (Driver, 2nd step)
C26 – 19	TC	Diagnosis
C26 – 20	–SR	Front Airbag Sensor RH
C26 – 21	RMSW	RSCA Off Switch
C26 – 22	MPX2	Instrument Panel Integration ECU
C26 – 23	GSW2	Diagnosis
C26 – 25	RMIL	RSCA Off Switch Indicator
C26 – 26	–SL	Front Airbag Sensor LH
C26 – 27	E1	Ground
C26 – 28	E2	Ground
C25 – 1	CSL–	Curtain Shield Airbag Sensor Assembly LH

DIAGNOSTICS – SUPPLEMENTAL RESTRAINT SYSTEM

No.	Symbol	Terminal Name
C25 – 3	LSP–	Seat Position Sensor Assembly
C25 – 4	LSP+	Seat Position Sensor Assembly
C25 – 7	PL–	Squib (Seat Belt Pretensioner, LH)
C25 – 8	PL+	Squib (Seat Belt Pretensioner, LH)
C25 – 9	ICL+	Squib (Curtain Shield, LH)
C25 – 10	ICL–	Squib (Curtain Shield, LH)
C25 – 11	SFL–	Squib (Side, LH)
C25 – 12	SFL+	Squib (Side, LH)
C25 – 13	ESCL	Curtain Shield Airbag Sensor Assembly LH
C25 – 14	VUCL	Curtain Shield Airbag Sensor Assembly LH
C25 – 15	CSL+	Curtain Shield Airbag Sensor Assembly LH
C25 – 16	VUPL	Side and Curtain Shield Airbag Sensor Assembly LH
C25 – 17	SSL+	Side and Curtain Shield Airbag Sensor Assembly LH
C25 – 18	ESL	Side and Curtain Shield Airbag Sensor Assembly LH
C25 – 19	LBE+	Seat Belt Buckle Switch LH
C25 – 20	SSL–	Side and Curtain Shield Airbag Sensor Assembly LH
C27 – 4	CSR–	Curtain Shield Airbag Sensor Assembly RH
C27 – 5	SFR+	Squib (Side, RH)
C27 – 6	SFR–	Squib (Side, RH)
C27 – 7	ICR–	Squib (Curtain Shield, RH)
C27 – 8	ICR+	Squib (Curtain Shield, RH)
C27 – 9	PR+	Squib (Seat Belt Pretensioner, RH)
C27 – 10	PR–	Squib (Seat Belt Pretensioner, RH)
C27 – 13	SSR–	Side and Curtain Shield Airbag Sensor Assembly RH
C27 – 15	ESR	Side and Curtain Shield Airbag Sensor Assembly RH
C27 – 16	SSR+	Side and Curtain Shield Airbag Sensor Assembly RH
C27 – 17	VUPR	Side and Curtain Shield Airbag Sensor Assembly RH
C27 – 18	CSR+	Curtain Shield Airbag Sensor Assembly RH
C27 – 19	VUCR	Curtain Shield Airbag Sensor Assembly RH
C27 – 20	ESCR	Curtain Shield Airbag Sensor Assembly RH