


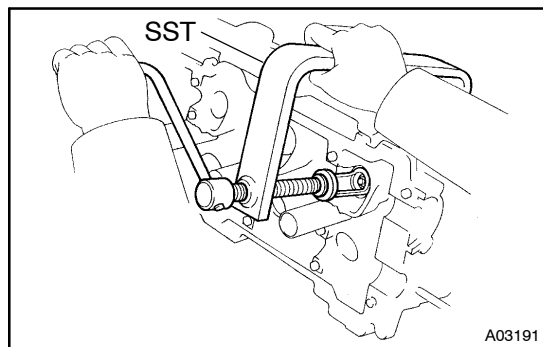

DISASSEMBLY

1. REMOVE VALVE LIFTERS AND SHIMS

HINT:

Arrange the valve lifters and the shims in correct order.

2. REMOVE VALVES

- (a) Using SST, compress the valve spring and remove the 2 keepers.

SST 09202-70020

- (b) Remove the spring retainer.
(c) Remove the valve spring.
(d) Remove the valve.
(e) Remove the spring seat.

HINT:

Arrange the valves, the valve springs, the spring seats and the spring retainers in correct order.

- (f) Using needle-nose pliers, remove the oil seal.

