

HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS

GENERAL INFORMATION

IN04S-46

A large number of ECU controlled systems are used in the LAND CRUISER. In general, the ECU controlled system is considered to be a very intricate system requiring a high level of technical knowledge and expert skill to troubleshoot. However, the fact is that if you proceed to inspect the circuits one by one, troubleshooting of these systems is not complex. If you have adequate understanding of the system and a basic knowledge of electricity, accurate diagnosis and necessary repair can be performed to locate and fix the problem. This manual is designed through emphasis of the above standpoint to help service technicians perform accurate and effective troubleshooting, and is compiled for the following major ECU controlled systems: The troubleshooting procedure and how to make use of it are described on the following pages.

System	Page
1. Engine	DI-1
2. Automatic Transmission	DI-358
3. ABS & Vehicle Stability Control (VSC) & Brake Assist (BA) System	DI-502
4. Power Tilt and Power Telescopic Steering Column	DI-656
5. Supplemental Restraint System	DI-690
6. Wireless Door Lock Control System	DI-936
7. Theft Deterrent System	DI-953
8. Cruise Control System	DI-979
9. Engine Immobiliser System	DI-1002
10. Body Control System	DI-1038
11. Driver Door Control System	DI-1089
12. Multiplex Communication System	DI-1127
13. Navigation System	DI-1151
14. Rear View Monitor System	DI-1268
15. Air Conditioning System	DI-1300

FOR USING OBD II SCAN TOOL OR TOYOTA HAND-HELD TESTER

- Before using the scan tool or tester, the scan tool's instruction book or tester's operator manual should be read thoroughly.
- If the scan tool or tester cannot communicate with ECU controlled systems when you have connected the cable of the scan tool or tester to DLC3, turned the ignition switch ON and operated the scan tool, there is a problem on the vehicle side or tool side.
 - (1) If communication is normal when the tool is connected to another vehicle, inspect the diagnosis data link line (Bus $\oplus$ line) or ECU power circuit of the vehicle.
 - (2) If communication is still not possible when the tool is connected to another vehicle, the problem is probably in the tool itself, so perform the Self Test procedures outline in the Tester Operator's Manual.