

REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.


1. REMOVE ROOF HEADLINING (See page [BO-97](#))

2. REMOVE CURTAIN SHIELD AIRBAG ASSEMBLY

(a) Disconnect the curtain shield airbag connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

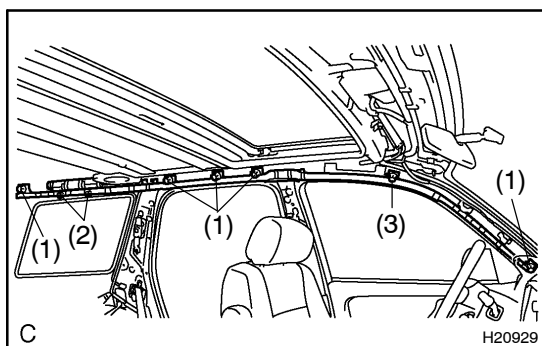

(b) In the order shown in the illustration, remove the bolts and curtain shield airbag assembly.

HINT:

- Loosen the bolt (3) before removing the bolt (2).
- Bind the front and rear parts of the curtain shield airbag assembly before removing the bolt (3).

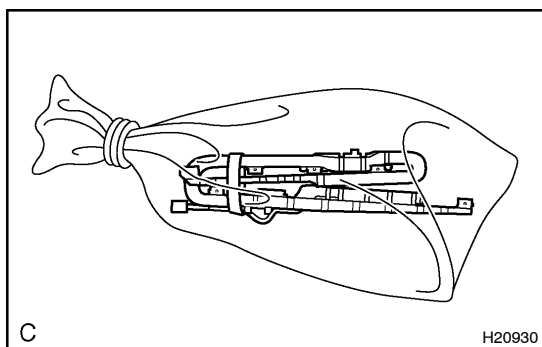

(c) Put the removed curtain shield airbag in a clear plastic bag and keep it in a safe place.

CAUTION:

Never disassemble the curtain shield airbag assembly.

NOTICE:

Plastic bag is not reusable.