

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the front airbag sensor.

- If the SRS has been deployed in a collision. (Replace both the left and right airbag sensors.)
- If the front airbag sensor has been found to be faulty in troubleshooting.
- If the front airbag sensor has been found to be faulty during checking items (See page [RS-76](#)).
- If the front airbag sensor has been dropped.

CAUTION:

For removal and installation of the front airbag sensor, see page [RS-75](#) and [RS-78](#).

Be sure to follow the correct procedure.