


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

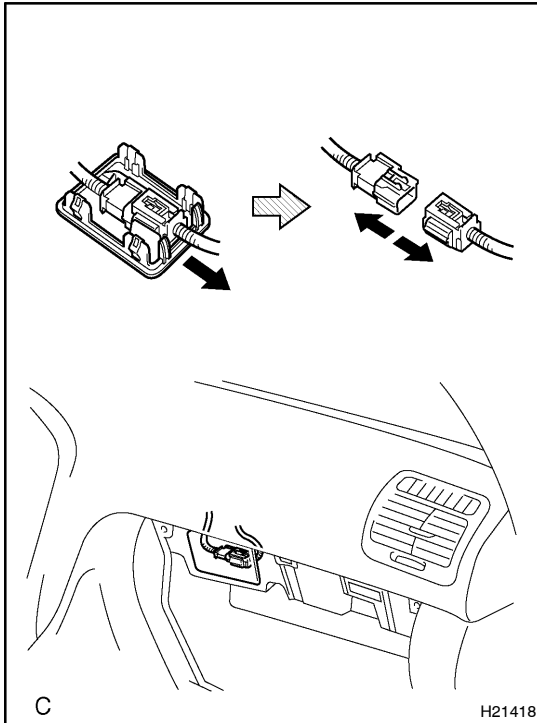

1. DISCONNECT AIRBAG CONNECTOR

- Remove the glove compartment door.
- Remove the No. 1 under cover from the lower No. 2 finish panel.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- Pull up the connector.
- Disconnect the front passenger airbag connector.

2. REMOVE INSTRUMENT PANEL


(See page [BO-84](#))

3. REMOVE CENTER BRACKET

4. REMOVE DEFROSTER NOZZLE ASSEMBLY

5. REMOVE NO. 5 HEATER TO REGISTER DUCT

6. REMOVE NO. 2 SIDE DEFROSTER NOZZLE DUCT

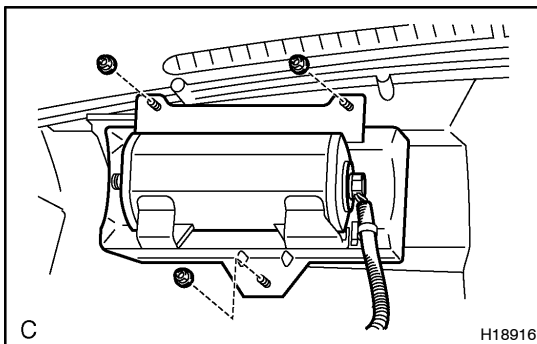

7. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

Remove the 3 nuts, then remove the front passenger airbag assembly.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing downward.
- Never disassemble the front passenger airbag assembly.