


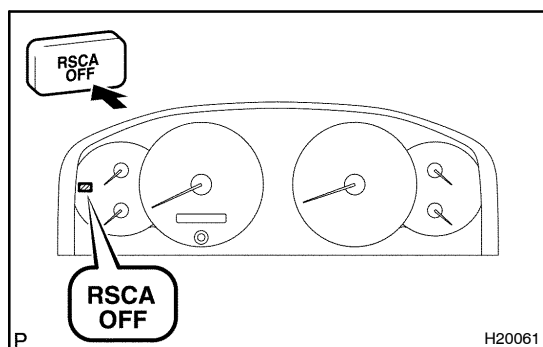

RS-CA OFF SWITCH INSPECTION


RS0XJ-01

1. INSPECT RS-CA OFF INDICATOR LIGHT

- Turn the ignition switch to ON.
- Check that the RS-CA OFF indicator light goes off after it comes on for 3 seconds.
- Check that the RS-CA OFF indicator light comes on after pressing the RS-CA OFF switch approx. 2 seconds.

2. INSPECT RS-CA OFF SWITCH CONTINUITY

- Remove the LWR instrument panel finish panel (See page [BO-84](#)).
- Remove the RS-CA OFF switch from the LWR instrument panel finish panel.

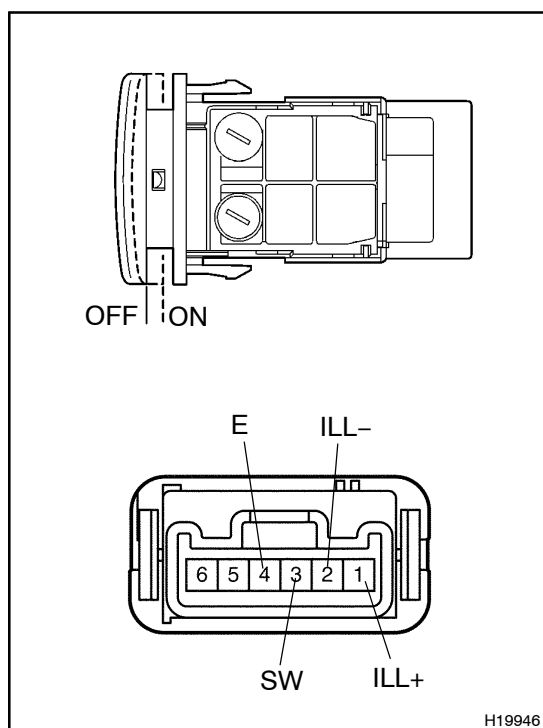

- Inspect the continuity between the each terminals.

Switch position	Tester connection	Specified condition
OFF	SW (3) ↔ E (4)	No continuity
Hold ON	SW (3) ↔ E (4)	Continuity
Illumination	ILL+ (1) ↔ ILL- (2)	Continuity

If continuity is not as specified, replace the RS-CA OFF switch or bulb.